Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Vistefly V15 Pro Max

Vistefly Cordless Vacuum Cleaner

Model: V15 Pro Max User Manual

Introduction

Thank you for choosing the Vistefly V15 Pro Max Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and retain it for future reference.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before picking up or carrying the appliance.

Package Contents

Carefully unpack all components and check against the list below. If any items are missing or damaged, please contact Vistefly customer service.

- Vistefly V15 Pro Max Main Unit
- Extension Wand
- Motorized Floor Brush with V-shaped Anti-Tangle Roller
- Removable Battery Pack
- Power Adapter
- Charging Dock
- Crevice Tool
- Dusting Brush
- Accessory Kit
- User Manual



Image: Overview of the Vistefly V15 Pro Max vacuum cleaner and its included accessories.

Setup

1. **Assembly:**

- Attach the extension wand to the main unit until it clicks into place.
- Connect the motorized floor brush to the other end of the extension wand, ensuring it locks securely.
- Alternatively, attach desired accessories (crevice tool, dusting brush) directly to the main unit for handheld use.

2. **Initial Charging:**
    - Before first use, fully charge the battery. Connect the power adapter to the charging dock, then place the vacuum cleaner onto the charging dock.
    - The LED display screen will indicate charging status. A full charge takes approximately 4 hours.
3. **Self-Standing Feature:**
    - The vacuum's floor brush head can be locked into a standing position, allowing the unit to stand upright independently without needing to lean against a wall. This is convenient for temporary pauses during cleaning, charging, or storage.



Image: The Vistefly V15 Pro Max utilizing its self-standing design.

Operating Instructions

Your Vistefly V15 Pro Max is designed for efficient cleaning on various surfaces.

1. **Power On/Off:** Press the power button on the handle to turn the vacuum on or off.
2. **LED Touchscreen Display:** The integrated LED touchscreen provides real-time information and allows for easy

control.

- Displays remaining battery life percentage.
- Shows error codes if a malfunction occurs.
- Allows manual adjustment of suction power.
- Enables switching between manual and automatic modes.

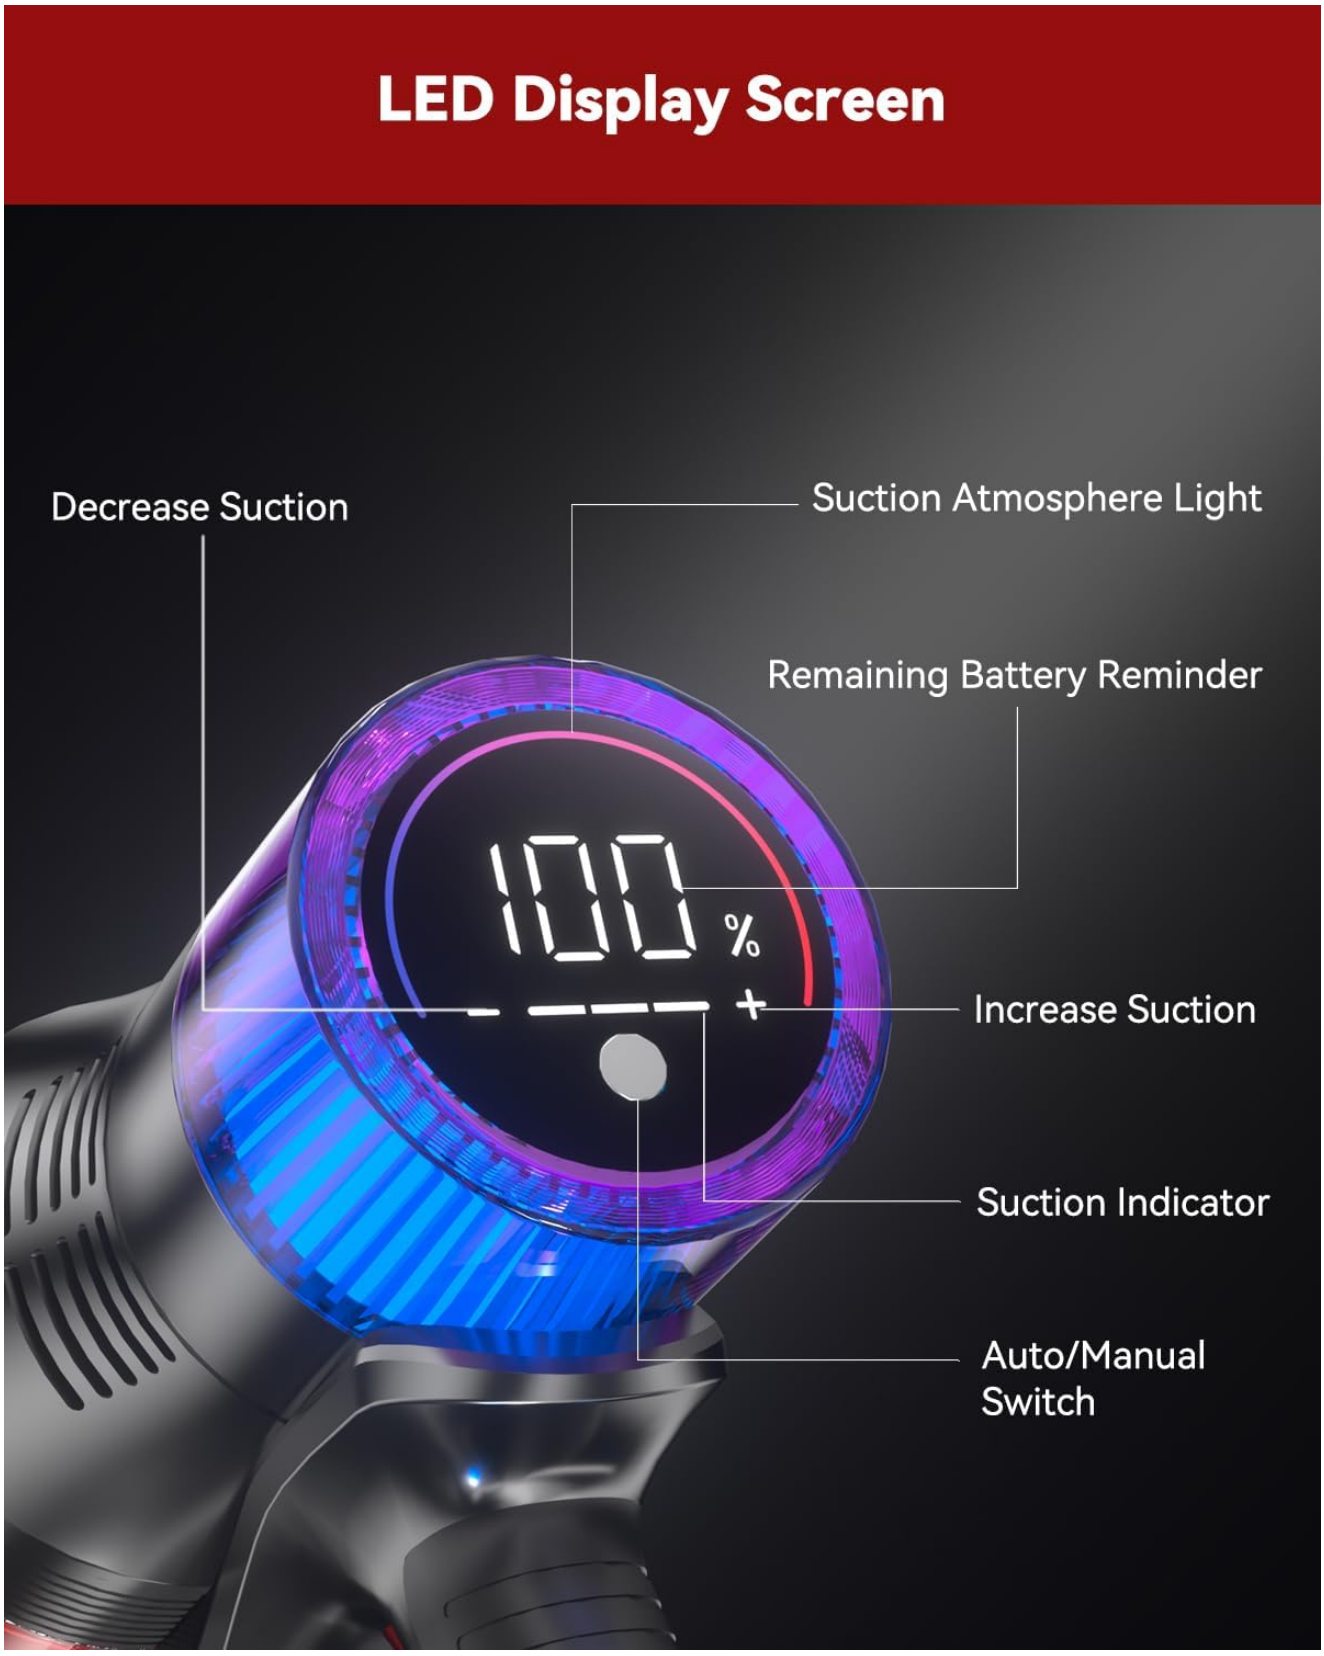


Image: Detailed view of the LED touchscreen display.

3. **Suction Modes:** The vacuum offers 4 levels of suction power, adjustable via the touchscreen or automatically.

- **Eco Mode (25 kPa):** Approximately 70 minutes runtime. Ideal for light cleaning and extended use.
- **Standard Mode (38 kPa):** Approximately 40 minutes runtime. Suitable for daily cleaning tasks.
- **Max Mode (45 kPa):** Approximately 20 minutes runtime. Provides maximum suction for stubborn dirt and deep cleaning.
- **Auto Mode (25-45 kPa):** Automatically adjusts suction power based on the detected debris and surface type, optimizing battery life and cleaning efficiency.

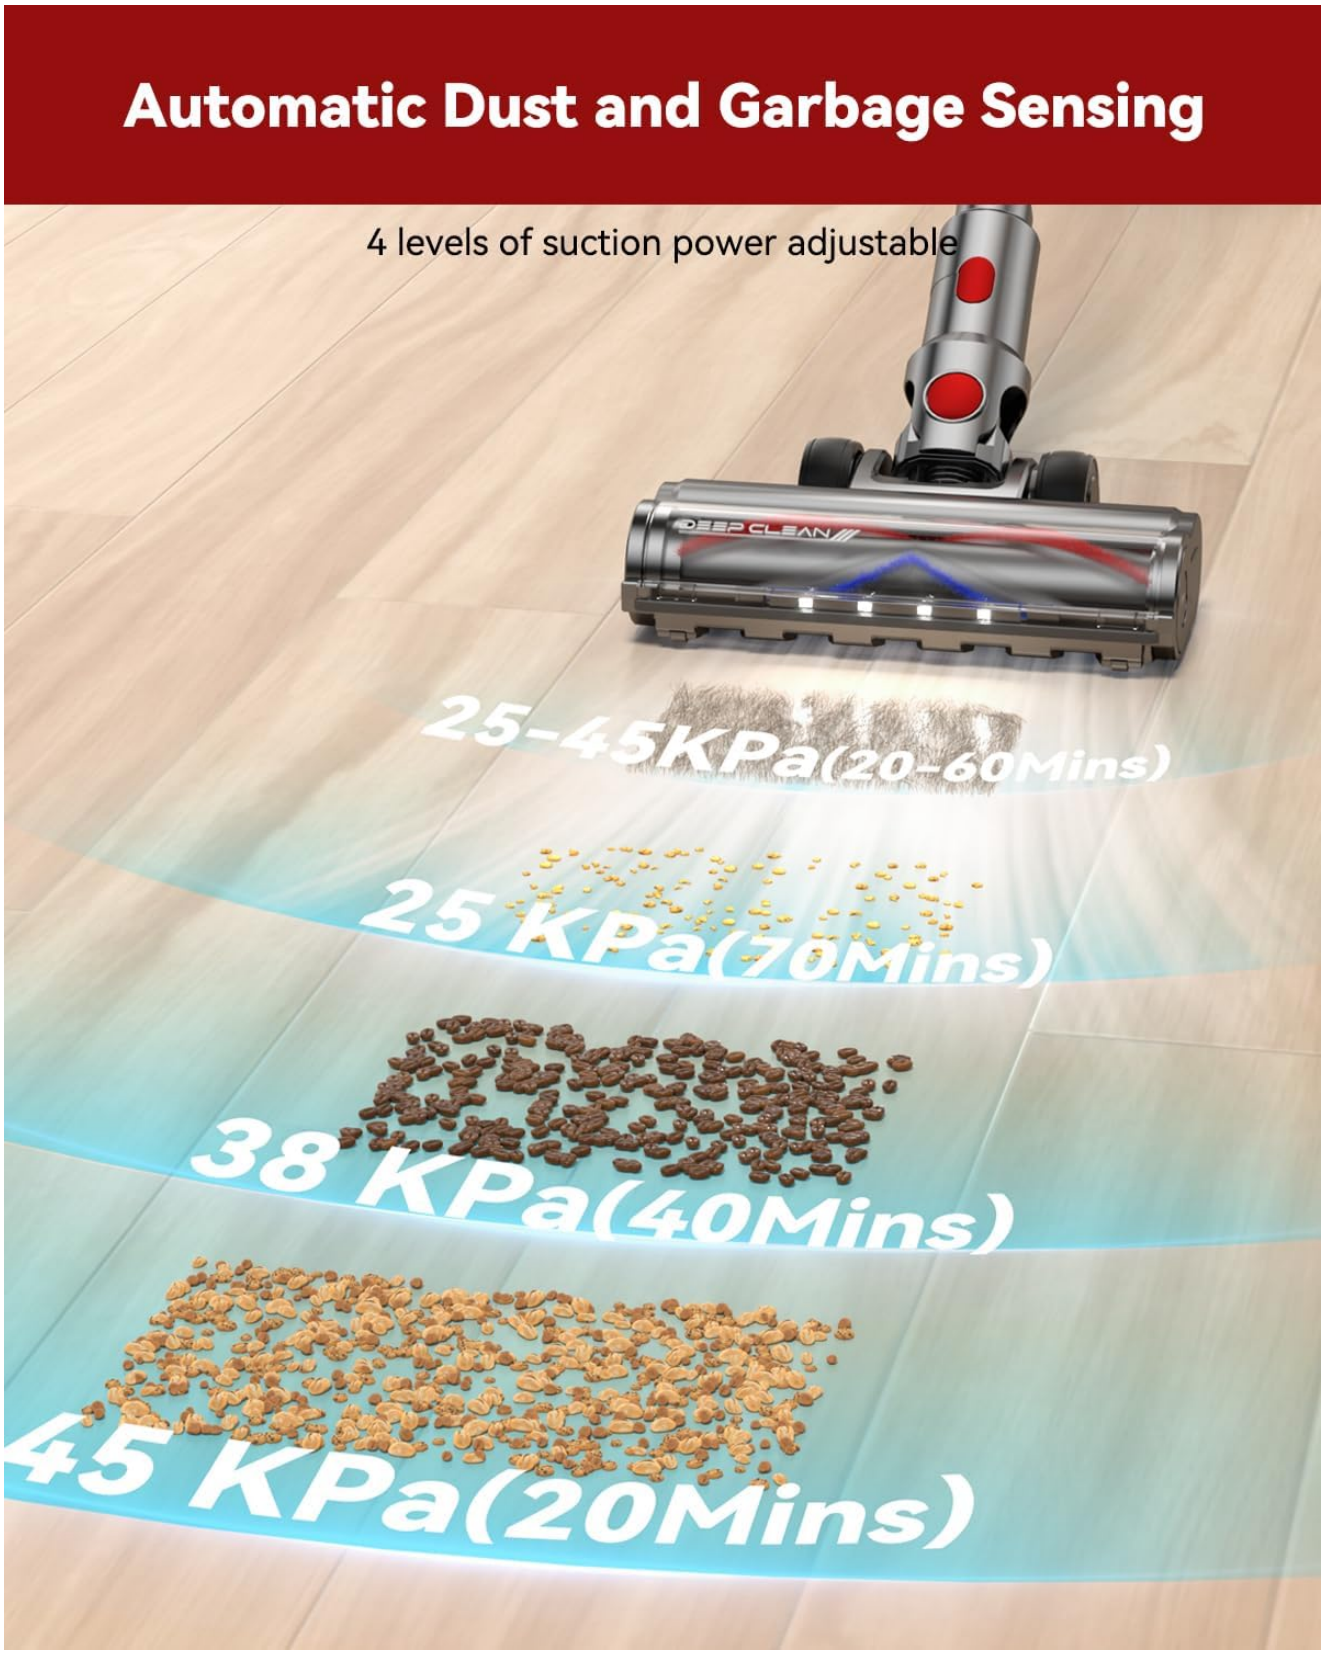


Image: Illustration of automatic dust and garbage sensing with adjustable suction levels.

4. **Floor Brush Features:**

- The V-shaped roller brush effectively addresses hair tangling issues, making it ideal for pet hair.
- The brush head supports 0° to 180° lateral and 0° to 90° vertical adjustments for enhanced maneuverability.
- Integrated LED headlights illuminate dark corners, ensuring no dust is missed.

5. **Battery Runtime:** The removable 8*2500mAh battery pack provides up to 70 minutes of runtime in Eco mode.

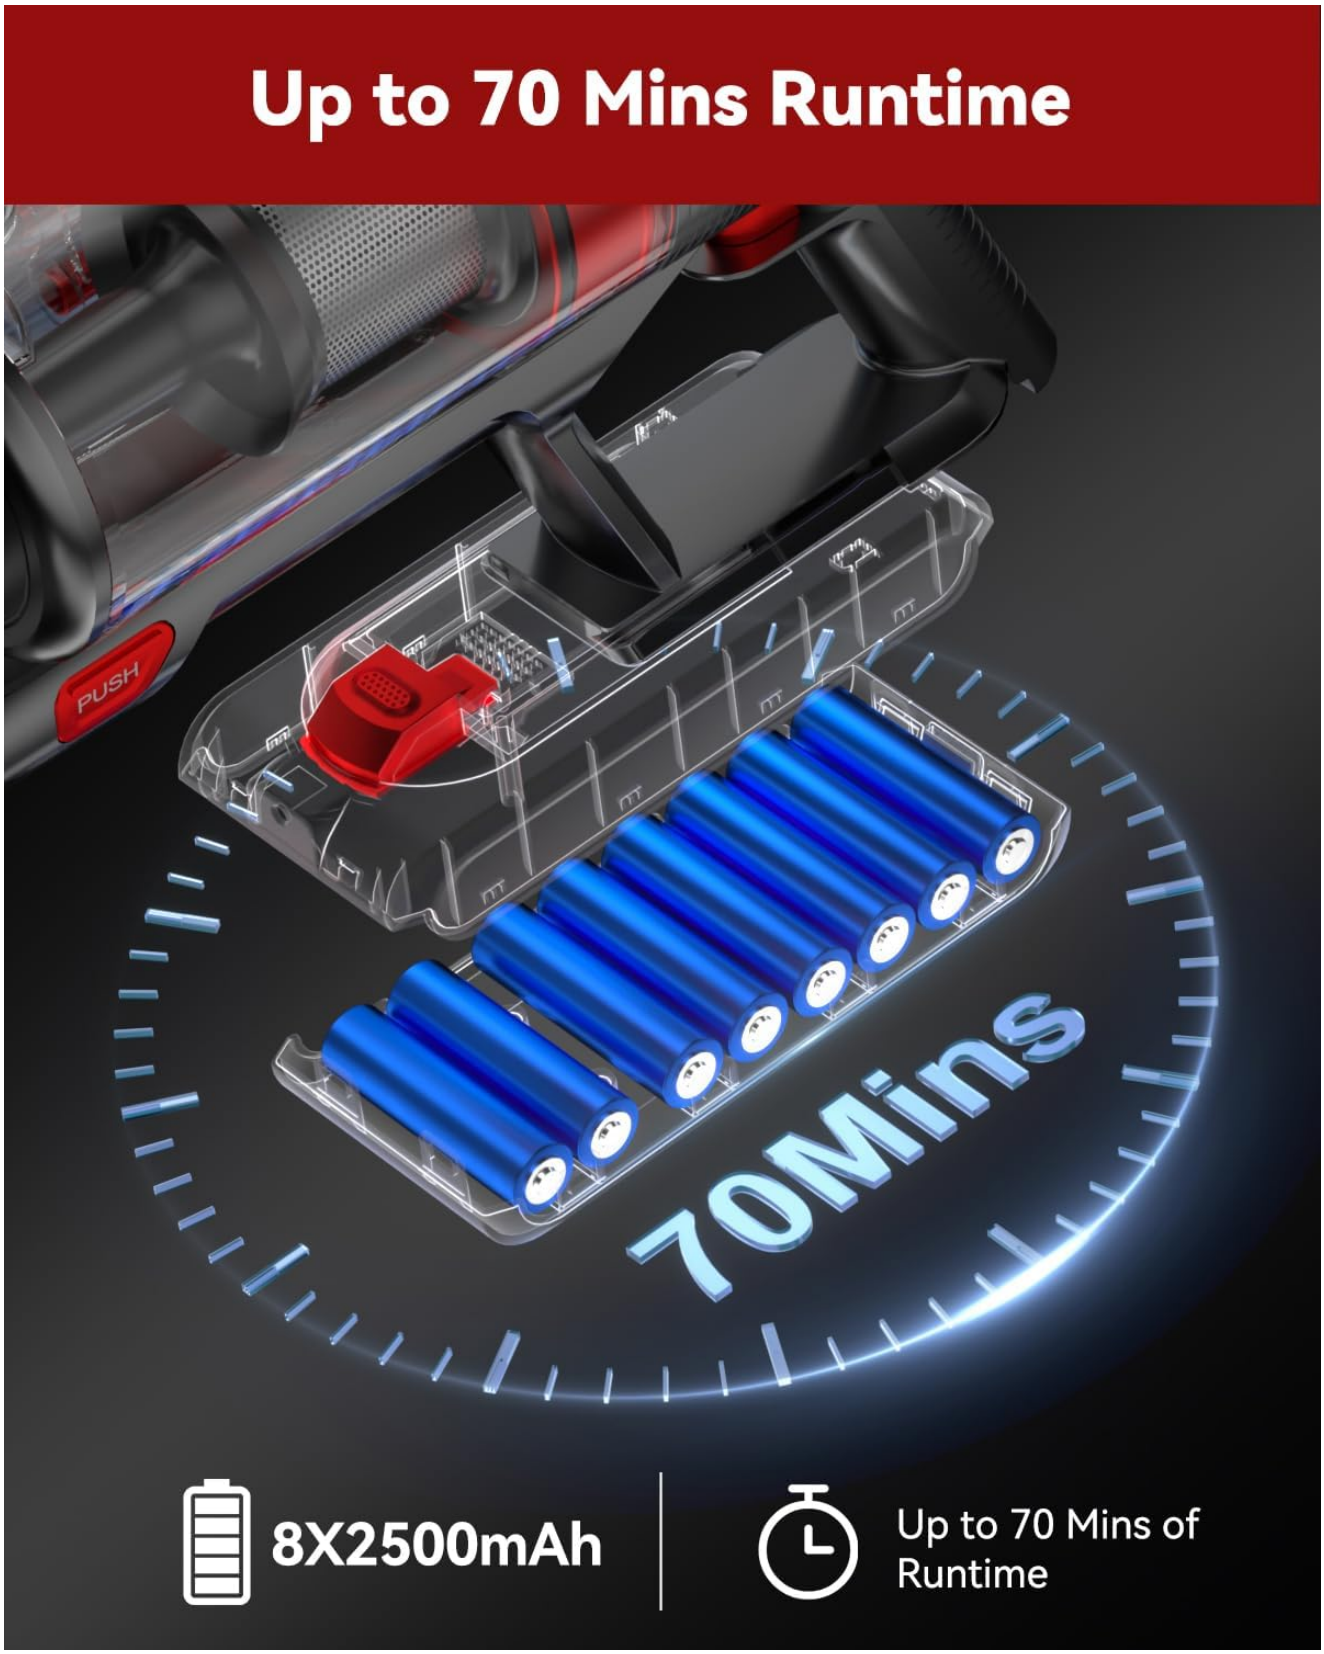


Image: Battery capacity and runtime illustration.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. **Emptying the Dust Cup:**
    - The V15 Pro Max features a dual-cup design for increased capacity and dust separation. The left cup stores fine dust, while the right cup stores larger debris.
    - Press the release button to detach the dust cup from the main unit.
    - Empty the contents into a trash bin.
    - Reattach the dust cup securely.



Image: Dust and air separation design with dual dust cups.

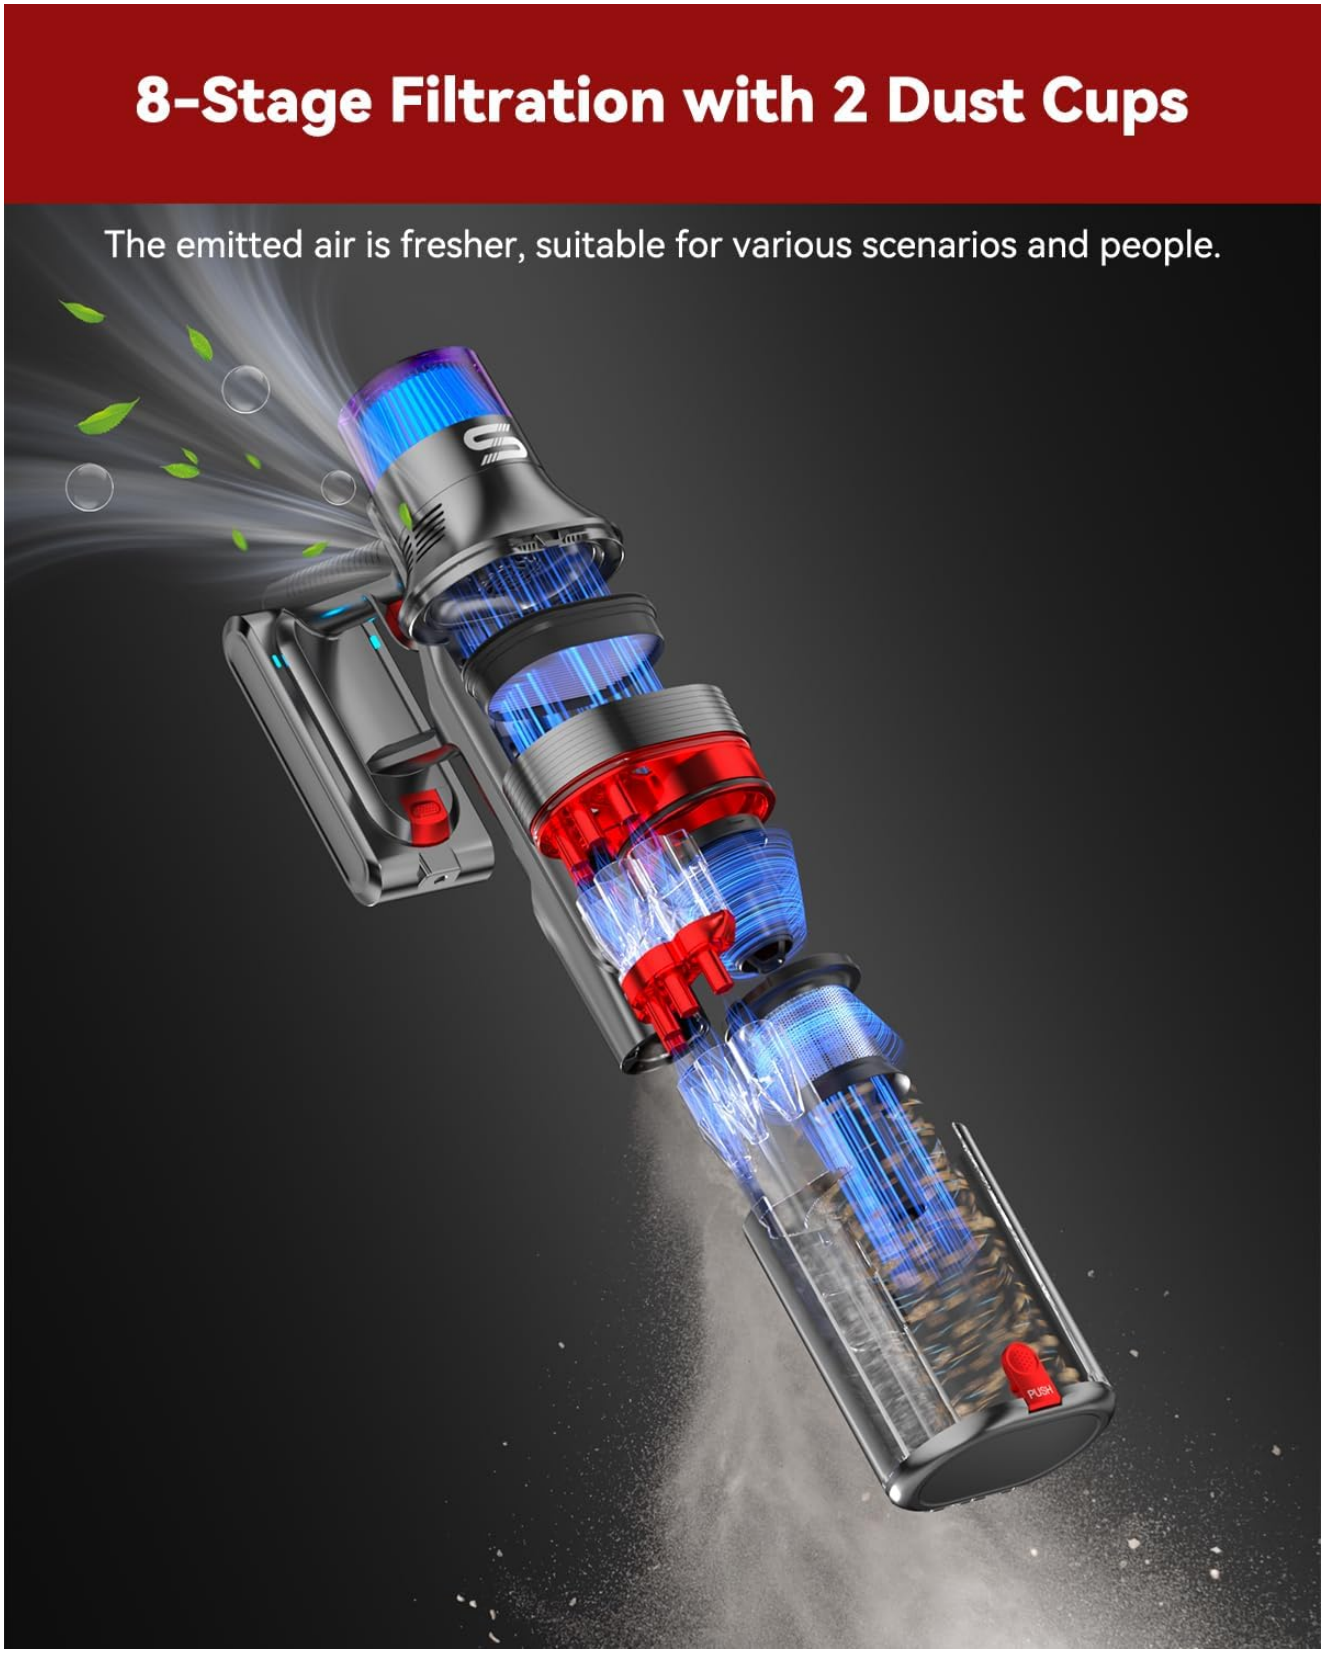


Image: 8-stage filtration system with two dust cups.

2. **Cleaning Filters:**
    - The vacuum uses a HEPA filter. Regularly check and clean the filters to maintain suction power and air quality.
    - Twist and pull to remove the filter assembly from the dust cup.
    - Tap the filter gently to remove loose dust. For thorough cleaning, rinse the filter under cold running water.
    - Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use the vacuum with a wet filter.

3. **Cleaning the Roller Brush:**
    - Periodically check the roller brush for tangled hair or debris.
    - Use a coin or flat tool to unlock the brush cover.
    - Remove the roller brush and cut away any tangled hair with scissors.
    - Clean any debris from the brush housing.
    - Reinsert the roller brush and secure the cover.

Troubleshooting

If you encounter issues with your Vistefly V15 Pro Max, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly Filter or hose blockage	Charge the battery Ensure a firm press on the power button Check for and clear any blockages
Low suction power	Dust cup is full Filter is clogged Hose or brush head is blocked Battery is low	Empty the dust cup Clean or replace the filter Clear any blockages Charge the battery
Brush roll not spinning	Hair or debris tangled in brush roll Brush roll motor issue	Clean the brush roll Contact customer service if issue persists
Short runtime	Battery not fully charged Using Max mode continuously Aging battery	Ensure battery is fully charged Use Eco or Standard mode for longer runtime Contact customer service for battery replacement options
Unusual noise	Blockage in air path Damaged component	Check for and clear any blockages Contact customer service

If the problem persists after trying these solutions, please contact Vistefly customer service for further assistance.

Specifications

Feature	Detail
Brand	Vistefly
Model Name	V15 Pro Max
Motor Wattage	600W

Feature	Detail
Max Suction Power	45 kPa
Battery Type	Lithium-Ion (8*2500mAh)
Runtime	Up to 70 minutes (Eco mode)
Charging Time	Approx. 4 hours
Dust Cup Capacity	1.3 Liters (Dual-cup design)
Filter Type	HEPA Filter
Noise Level	72 dB
Product Dimensions	17"L x 12"W x 8"H
Item Weight	9 pounds
Special Features	Touch Screen, Self-Standing, LED Headlights, Anti-Tangle Brush

Warranty and Customer Support

Vistefly products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Vistefly website. Our dedicated customer service team is available 24/7 to assist you with any questions, concerns, or technical support needs. Please have your model number (V15 Pro Max) and purchase information ready when contacting support.

© 2024 Vistefly. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CFD4FZ9P

More documents and user manuals: **https://manuals.plus/**