watnature B0CFHHVV71

watnature 39.3"H Modern Outdoor Waterfall Fountain Instruction Manual

Model: B0CFHHVV71 | Brand: watnature

1. Product Overview

The watnature 39.3"H Modern Outdoor Waterfall Fountain is a contemporary 4-tier water feature designed to enhance both indoor and outdoor spaces. Crafted from durable resin and fiberglass, this fountain provides a soothing cascading water flow complemented by integrated LED lighting, creating a tranquil and visually appealing ambiance. Its weather-resistant properties ensure longevity in various environments.



The watnature 39.3"H Modern Outdoor Waterfall Fountain, showcasing its contemporary design and tiered water flow.


2. Product Features

- **Material:** Constructed from durable resin and fiberglass, ensuring a solid and weather-resistant structure suitable for both indoor and outdoor decor.
- **Dimensions:** Stands at 39.3 inches in height, with a length of 14.3 inches and a width of 10.6 inches, making it a prominent feature.
- **Design:** Features a contemporary 4-tier cascading design that creates a beautiful water display as water flows from one level to the next.
- **Tranquility:** Engineered to produce a soothing and natural water flow sound, ideal for relaxation in homes, offices, gardens, patios, or balconies.

- **Luminosity:** Equipped with integrated LED lights that enhance the visual impact of the water feature, especially in low-light conditions or at night.
- **Versatility:** Designed for both indoor and outdoor use, offering flexible placement options.



Detailed dimensions of the fountain for proper placement.

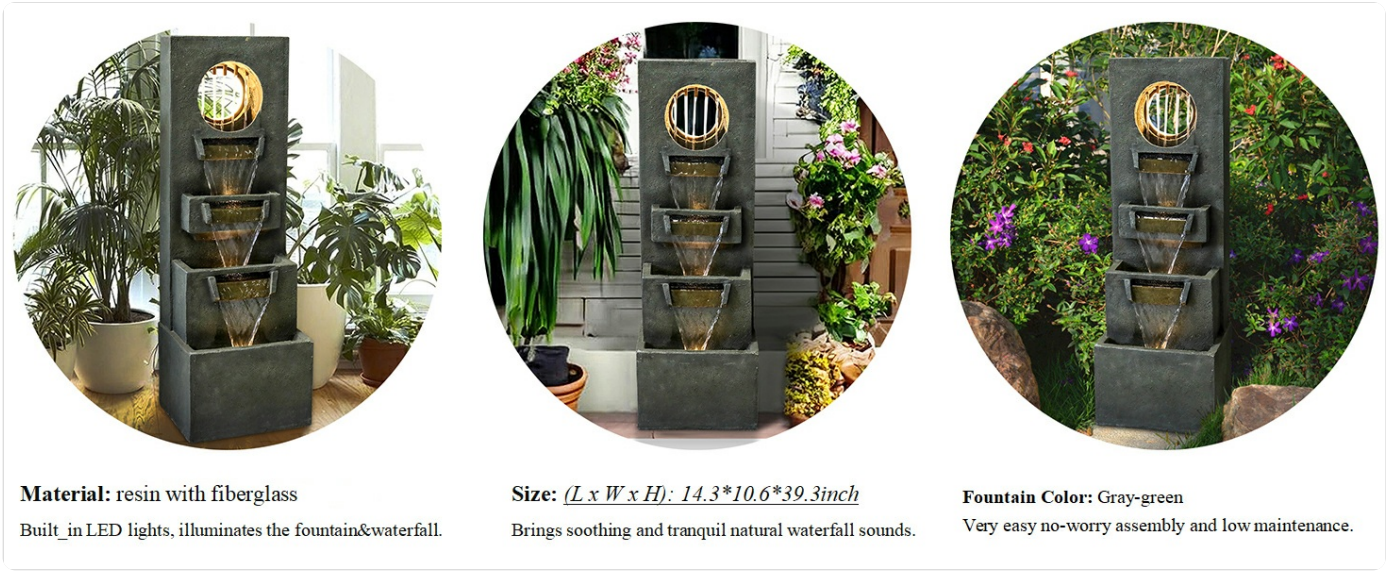

The fountain illuminated at night, highlighting its integrated LED lights.

3. Setup Instructions

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components, including the fountain body, pump, and power adapter, are present and undamaged.
2. **Position the Fountain:** Place the fountain on a stable, level surface in your desired indoor or outdoor location. Ensure it is near a power outlet.
3. **Connect the Pump:** Locate the pump and the hose inside the fountain. Attach the hose securely to the pump's outlet. The pump is designed to be fully submerged in water.
4. **Adjust Water Flow (Optional):** The pump features an adjustable water flow setting. You can adjust this to control the intensity of the water cascade.
5. **Fill with Water:** Fill the fountain's reservoir with clean water. Ensure the water level is sufficient to fully submerge the pump. Regularly check and refill the water level to prevent pump damage.
6. **Connect Power:** The LED lights are pre-connected. Simply plug the power adapter into a standard electrical outlet. For outdoor use, ensure the outlet is weather-protected.

Your browser does not support the video tag.

Watch this video for a visual guide on setting up your watnature waterfall fountain.

4. Operating Instructions

Operating your watnature fountain is straightforward:

- **Power On/Off:** The fountain operates by plugging it into a power outlet. To turn it off, simply unplug the power adapter.
- **Water Flow Adjustment:** If your pump has an adjustable flow switch, you can increase or decrease the water flow to achieve your desired sound and visual effect.

- **Water Level:** Always ensure the water level is maintained above the pump to prevent it from running dry, which can cause damage.

Your browser does not support the video tag.

This video demonstrates the fountain in operation, showcasing its water flow and lighting.

5. Maintenance

Regular maintenance will ensure the longevity and optimal performance of your fountain:

- **Water Level:** Check the water level daily, especially in warm weather or dry climates, and refill as needed to keep the pump fully submerged.
- **Cleaning:** Periodically clean the fountain and pump to prevent mineral buildup and algae growth. Disconnect power before cleaning. Use a soft brush and mild soap for the fountain surface.
- **Pump Cleaning:** Remove the pump from the fountain and disassemble it according to its specific instructions (usually involves removing the cover and impeller). Clean any debris or mineral deposits from the impeller and pump housing.
- **Sponges:** If your fountain includes sponges in the running pool, ensure they are clean and properly positioned. These sponges help buffer the water flow and prevent splashing.
- **Winterization (Outdoor Use):** In freezing temperatures, drain all water from the fountain and pump. Store the fountain indoors or cover it with a protective fountain cover to prevent damage from ice expansion.

6. Troubleshooting

If you encounter issues with your fountain, try these common troubleshooting steps:

Problem	Possible Cause	Solution
Fountain not running / No water flow	Not plugged in; Low water level; Clogged pump; Kinked tubing.	Ensure power is connected; Add water to submerge pump; Clean pump and tubing; Straighten tubing.
Water flow is weak or inconsistent	Low water level; Clogged pump/tubing; Pump flow setting too low.	Add water; Clean pump and tubing; Adjust pump flow setting to higher.
Excessive splashing	Water flow setting too high; Improperly placed sponges (if applicable).	Adjust pump flow setting to lower; Ensure sponges are correctly positioned to buffer water.
Lights not working	Loose connection; Damaged LED.	Check all light connections; Contact customer support if lights are damaged.

7. Specifications

Color: Gray-green

Material: Fiberglass, Resin

Product Dimensions: 14.3"L x 10.6"W x 39.3"H

Power Source: Corded Electric

Special Features: Fade Resistant, Lighted, Weather Resistant, UV Resistant, Rust Resistant

Manufacturer: watnature

ASIN (Model): B0CFHHVV71

8. Warranty and Support

For warranty information or technical support, please refer to the documentation included with your product or contact the watnature customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question