ZdalaMit ERF2K60H

ZdalaMit ERF2K60H Voice Replacement Remote Control User Manual

Model: ERF2K60H | **Brand:** ZdalaMit

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ZdalaMit ERF2K60H Voice Replacement Remote Control. Please read this guide carefully to ensure proper use and to maximize the functionality of your remote control with your Hisense Smart TV.

2. PRODUCT OVERVIEW

The ZdalaMit ERF2K60H is a voice-enabled replacement remote control designed for various Hisense Smart TV models. It offers full functionality, including voice search capabilities, to enhance your television viewing experience.

Image 1: Front view of the ZdalaMit ERF2K60H Voice Replacement Remote Control, showcasing its button layout and sleek design.

2.1 Compatible Hisense TV Models

This remote control is compatible with the following Hisense Smart TV models:

- 65H9050F, 55H9050F, 65H8050F, 65H6510G, 55H8050F, 43H6510G, 50H6570G, 65H6570G, 70H6570G, 65Q9G, 43H78G, 50H78G, 55H78G, 58H78G, 55H9G, 65H9G, 43H5670G, 65H78G, 50H6510G, 70H78G, 75H78G, 85H6510G, 85H78G, 55H6510G, 75H6510G, 55H6570G, 55Q9G, 75H6570G, 85H6570G

3. Setup Instructions

3.1 Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

3.2 Pairing the Remote Control

Pairing the remote control with your Hisense Smart TV is required before use. Follow these steps:

1. Ensure your Hisense TV is powered on.
2. Keep the remote control within 10 feet (304.8 cm) of the TV.
3. Press and hold the **[Menu]** button (represented by three horizontal lines) on the remote control for at least 3 seconds to initiate the pairing process.
4. A confirmation message will display on the TV screen if the remote pairs successfully.
5. If an 'unsuccessful' message appears, repeat step 3.

4. OPERATING INSTRUCTIONS

4.1 Basic Button Functions

The remote control features standard buttons for TV operation:

- **Power Button:** Turns the TV on or off.
- **Input Button:** Selects input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **Navigation Pad (Up, Down, Left, Right, OK):** For menu navigation and selection.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **App Shortcut Buttons:** Direct access to popular streaming services like Netflix, Prime Video, YouTube, and Google Play.
- **Home Button:** Returns to the TV's main smart interface.
- **Back Button:** Returns to the previous screen or menu.

4.2 Voice Control Usage

The ERF2K60H remote control includes a voice search feature. To use it:

1. Press the dedicated Voice Control button (often represented by a microphone icon or Google Assistant logo).
2. Speak clearly into the microphone located on the remote control.
3. You can issue commands such as "Open Netflix," "Search for action movies," or "What's the weather?"
4. The TV will process your voice command and display relevant results or perform the requested action.

5. Maintenance

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- Keep the remote control clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Do not expose the remote control to extreme temperatures, direct sunlight, or high humidity.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.
- Avoid dropping the remote control or subjecting it to strong impacts.

6. Troubleshooting

If you encounter issues with your remote control, refer to the following troubleshooting tips:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new 1.5V AAA alkaline batteries.
  - Ensure there are no obstructions between the remote control and the TV's infrared receiver.

- **Pairing Unsuccessful:**
  - Ensure the remote is within 10 feet (304.8 cm) of the TV during pairing.
  - Repeat the pairing process (Section 3.2) carefully.
  - Verify that your TV model is listed as compatible in Section 2.1.

- **Voice Control Not Working:**
  - Ensure the remote is successfully paired with the TV.
  - Speak clearly and directly into the microphone.
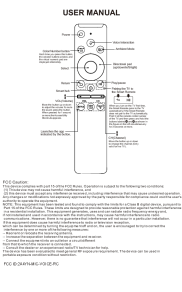 - Check your TV's settings to ensure voice control is enabled.

7. Specifications

Model Number	ERF2K60H
Brand	ZdalaMit
Product Dimensions	5.9 x 1.57 x 0.55 inches (15 x 4 x 1.4 cm)
Item Weight	1.41 ounces (40 grams)
Power Supply	2 x 1.5V AAA Alkaline Batteries
Special Feature	Voice Search
Color	Black
Compatible Devices	Television (Specific Hisense Smart TV models)

8. Warranty and Support

For any questions, concerns, or support regarding your ZdalaMit ERF2K60H Voice Replacement Remote Control, please contact the seller or manufacturer directly. Please refer to your purchase documentation for specific warranty details.

Related Documents - ERF2K60H

	ZDALAMIT INC MIC-VOICE-RC Remote Control User Manual User manual for the ZDALAMIT INC MIC-VOICE-RC remote control, detailing button functions, pairing instructions, and FCC compliance information.
	FCC ID 2A4YN-MIC-VOICE-RC - ZDALAMIT INC Remote Control FCC filing details and visual description for the ZDALAMIT INC MIC-VOICE-RC remote control, FCC ID 2A4YN-MIC-VOICE-RC.
	FCC U.S. Agent Designation for Shenzhenshichengxingwangdianzishangwuyouxiangongsi (FCC ID: 2BLKOBT800) Official U.S. Agent Designation letter for Shenzhenshichengxingwangdianzishangwuyouxiangongsi, appointing ZDALAMIT INC as the agent for service of process for equipment authorized under FCC ID 2BLKOBT800. Includes agent contact details and regulatory compliance information.