Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

allimity QYSY-SMT2219DTS-QYSY

ALLIMITY Replacement Remote Control User Manual

Model: QYSY-SMT2219DTS-QYSY

1. Introduction

This user manual provides comprehensive instructions for the ALLIMITY Replacement Remote Control. This remote is designed to be a direct replacement for various Telesystem Smart-Tech TV models, offering full functionality without the need for complex programming.

2. Product Overview

The ALLIMITY replacement remote control is engineered to replicate all functions of your original remote. Its ergonomic design ensures comfortable handling and ease of use.



Figure 2.1: Angled front view of the ALLIMITY Replacement Remote Control, showcasing its button layout and ergonomic shape.

2.1 Compatible Models

This remote control is compatible with a wide range of Telesystem Smart-Tech models, including but not limited to:

- SMT2219DTS
- SMT24N30HC1LB1
- SMT32Z1TS
- 2419DTS EXCLUSIV
- LE-1919
- LE-2019DTCS
- LE-2219
- LE-2219DTS
- LE-2419D
- LE-2822
- LE-3222
- LE-32D11TS

- LE32D7
- LE-32Z1
- LE-3918
- LE-3919F
- LE-4018
- LE4219H
- LE-4318
- LE-4318TS
- LE-5018
- LE-6519
- PALCO20-LED07E
- PALCO24-LED07E

3. Setup

Setting up your new ALLIMITY remote control is straightforward and requires no programming. Simply install the batteries, and it will be ready for immediate use.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



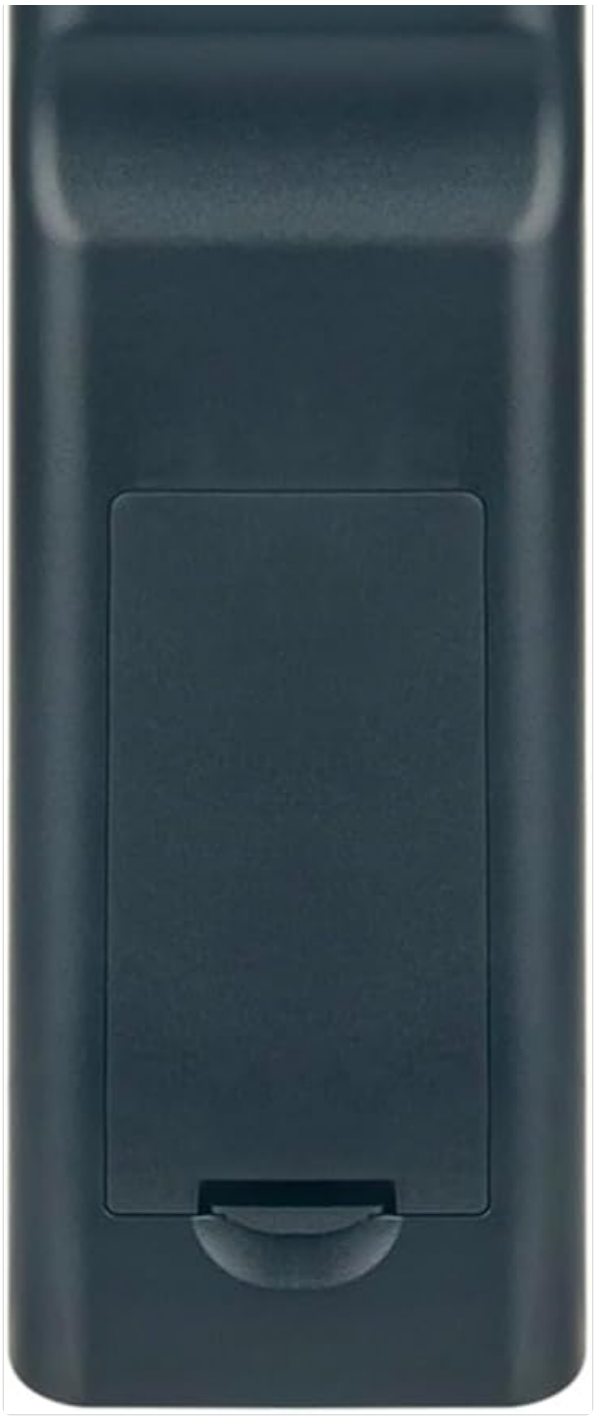


Figure 3.1: Back view of the remote control, highlighting the battery compartment for easy access during battery installation.

Note: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

4. Operating Instructions

This section details the functions of the buttons on your ALLIMITY replacement remote control.




4
5
6
7
8
9
DTV/ATV
0
P.MODE
S.MODE
SLEEP
MENU
SOURCE
ENTER
EXIT
DISPLAY
MTS
RECLIST
VOL
CH
REC
FAV/LIST
FREEZE
GUIDE
ASPECT
CANCEL
SUB.PG
INDEX
TIMESHIFT
TV/RADIO
SUBTITLE
REVEAL
SIZE
HOLD
TEXT
RED
GREEN
YELLOW
CYAN

Figure 4.1: Straight-on front view of the remote control, showing the complete button layout.

4.1 Button Functions

Button	Function
POWER	Turns the TV on or off.
MUTE	Mutes or unmutes the TV sound.
0-9	Direct channel selection.
DTV/ATV	Switches between Digital TV and Analog TV modes.
P.MODE	Cycles through picture modes (e.g., Standard, Dynamic, Movie).
S.MODE	Cycles through sound modes (e.g., Standard, Music, Movie).
SLEEP	Sets the sleep timer for automatic TV shutdown.
SOURCE	Selects the input source (e.g., HDMI, AV, USB).
MENU	Opens the main menu for TV settings.
ENTER	Confirms selections within menus.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menu options and channels.
EXIT	Exits the current menu or function.
DISPLAY	Displays current channel information or TV status.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the channel up or down.
MTS	Multi-channel Television Sound (audio language/mode selection).
RECLIST	Accesses the recording list (if supported by TV).
REC	Starts recording (if supported by TV).
FREEZE	Freezes the current image on screen.
FAV/LIST	Accesses favorite channels or channel list.
GUIDE	Opens the Electronic Program Guide (EPG).
ASPECT	Changes the screen aspect ratio.
CANCEL	Cancels current operation or menu.
SUB.PG	Accesses sub-pages in Teletext.
INDEX	Accesses Teletext index page.
TIMESHIFT	Activates or deactivates Time Shift function.
TV/RADIO	Switches between TV and Radio modes.
SUBTITLE	Turns subtitles on or off.

Button	Function
REVEAL	Reveals hidden text in Teletext.
SIZE	Changes Teletext display size.
HOLD	Holds the current Teletext page.
TEXT	Opens or closes Teletext.
Colored Buttons (RED, GREEN, YELLOW, CYAN)	Context-sensitive functions, often used in menus or Teletext.

5. Maintenance

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote control. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. Troubleshooting

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

Problem	Solution
Remote is not responding.	◦ Check if the batteries are inserted correctly with the correct polarity (+/-). ◦ Replace the batteries with new ones. ◦ Ensure there are no obstructions between the remote control and the TV's infrared sensor. ◦ Point the remote directly at the TV's sensor.
Some buttons are not working.	◦ Clean the remote control, especially around the non-working buttons, to remove any dirt or debris. ◦ Ensure the remote is compatible with your specific TV model. Refer to the "Compatible Models" section.
Remote works intermittently.	◦ Batteries may be low; replace them. ◦ Ensure consistent line of sight to the TV's IR sensor.

7. Specifications

Feature	Detail
Brand	ALLIMITY

Feature	Detail
Model Number	QYSY-SMT2219DTS-QYSY
Product Dimensions	4 x 12 x 0.3 cm
Weight	70 grams
Connectivity Technology	Infrared
Controller Type	Button Control
Maximum Range	10 meters
Battery Description	Alkaline
Special Feature	Ergonomic
Country of Origin	China

8. Warranty and Support

Specific warranty information for this ALLIMITY replacement remote control is not provided in the product details. For any support inquiries or warranty claims, please refer to the seller or manufacturer's contact information provided at the point of purchase.

© 2024 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CFQQB928

More documents and user manuals: **https://manuals.plus/**