Vigosit 792671730538

Vigosit Ergonomic Gaming Chair with Heated Lumbar Support - User Manual

Model: 792671730538

1. Important Safety Information

Please read all safety information before using the Vigosit Ergonomic Gaming Chair.

- Do not exceed the maximum recommended weight of **150 kg (330 lbs)**.
- Exercise caution when using the recline function to prevent tipping or injury.
- Ensure all components are securely in place before use.
- Keep children and pets away from the chair during adjustment or movement.
- Avoid placing the chair near heat sources or in direct sunlight for prolonged periods to prevent material damage.

2. Product Overview

The Vigosit Ergonomic Gaming Chair is designed for comfort and support during extended periods of use. It features a heated lumbar support cushion, individual pocket springs in the seat, and a reclining backrest.



Figure 2.1: Vigosit Ergonomic Gaming Chair (Blue PU Leather)

This chair is equipped with a two-level heated lumbar cushion for effective relief of lower back pain and fatigue. The seat cushion incorporates individual pocket springs, similar to those found in high-quality sofas, providing independent elasticity and support tailored to your body weight. The backrest can recline up to 155 degrees, making it suitable for various activities from gaming to relaxation.

3. Initial Setup

The Vigosit Ergonomic Gaming Chair is designed for minimal assembly. Most major components come pre-assembled. Follow these steps to prepare your chair for use:

1. **Unboxing:** Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present.
2. **Base and Casters:** If the casters are not pre-attached, firmly insert them into the holes at the end of each leg of the chair base until they click into place.
3. **Gas Lift:** Insert the gas lift cylinder into the center hole of the chair base.
4. **Seat Attachment:** Place the seat mechanism onto the gas lift cylinder, ensuring it is securely seated.
5. **Lumbar Cushion and Headrest:** Attach the lumbar support cushion and headrest to the chair back using their integrated straps or clips. Adjust their positions for optimal comfort.
6. **Footrest:** Ensure the footrest is properly extended and retracted to confirm its functionality.

Once assembled, sit on the chair and test all adjustment functions to ensure proper operation.

4. Operating Instructions

4.1. Chair Height Adjustment

To adjust the chair height, locate the lever under the right side of the seat. While seated, pull the lever up to lower the chair. To raise the chair, stand up slightly and pull the lever up. Release the lever at the desired height.

4.2. Backrest Recline Function

The backrest can be reclined up to 155 degrees. Locate the recline lever on the right side of the chair, below the seat. Pull the lever up and lean back to the desired angle. Release the lever to lock the backrest in position. To return to an upright position, pull the lever and lean forward.

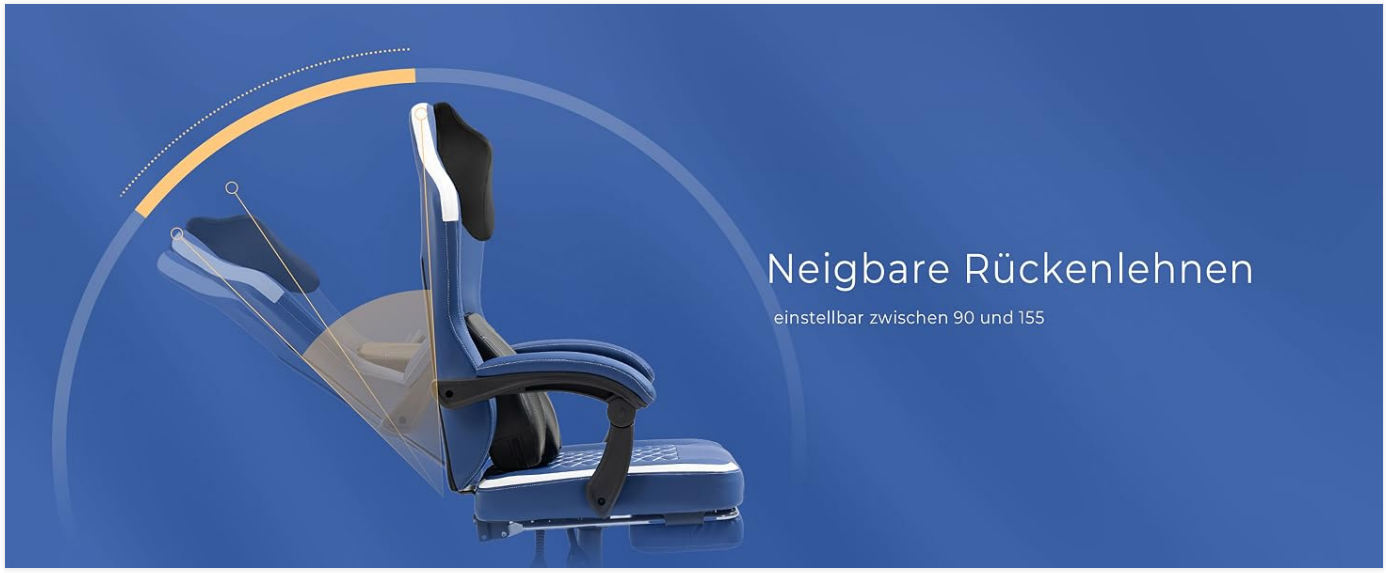


Figure 4.1: Backrest Recline Mechanism

4.3. Heated Lumbar Support and Massage Function

The chair features a dual-sided lumbar cushion with massage and heating capabilities. The massage function effectively relieves lower back pain and fatigue, while the heating function provides continuous warmth.



Figure 4.2: Lumbar Massage and Heating Cushion

To operate the massage and heating functions:

1. **Power On:** Long press the ON/OFF button on the control panel (typically located on the side of the lumbar cushion or chair). The default setting usually activates massage from inside out and red light heating.
2. **Change Massage Direction:** Short press the button to switch the massage direction.
3. **Turn Off Heating:** Short press the button again to turn off the heating function.
4. **Power Off:** Short press the button one more time to turn off the device completely.

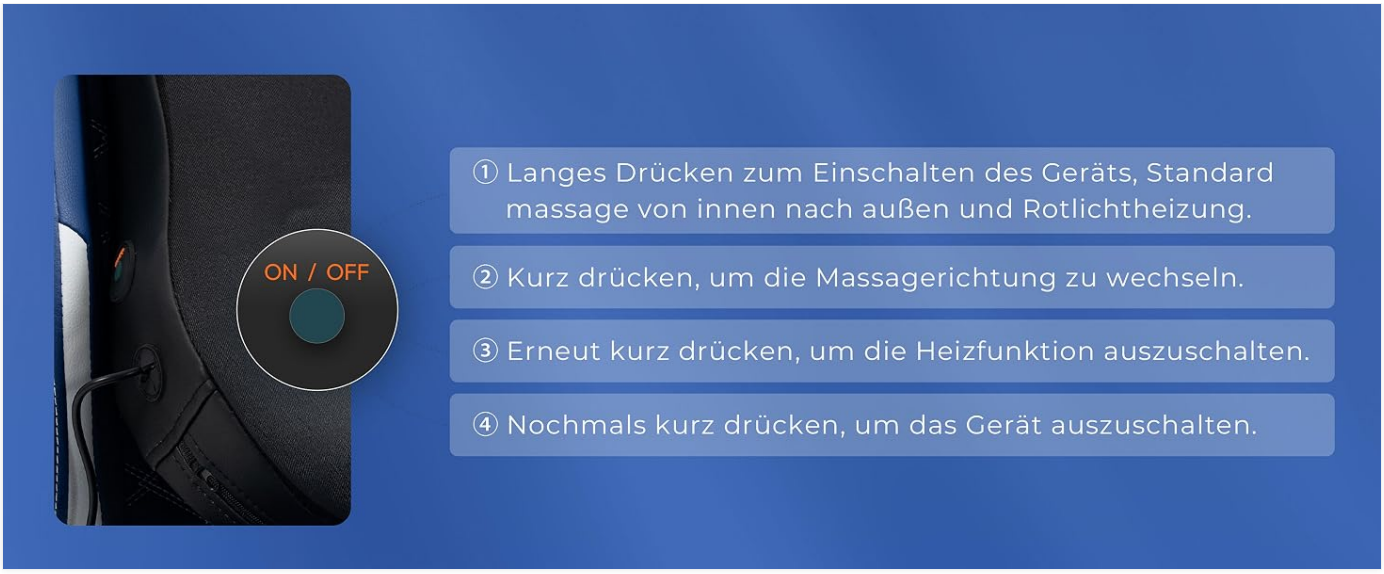


Figure 4.3: Massage/Heating Control Panel

4.4. Footrest Operation

The integrated footrest can be pulled out from under the seat for leg support. To extend, pull the footrest outwards until it locks into position. To retract, push it back under the seat until it is fully stored.

5. Maintenance and Care

Proper maintenance ensures the longevity and appearance of your Vigosit Gaming Chair.

- **Cleaning PU Leather:** Wipe the PU leather surfaces with a soft, damp cloth. For stubborn stains, use a mild soap solution and then wipe with a clean, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Frame and Base:** Periodically check and tighten any loose screws or bolts on the chair frame and base.
- **Casters:** Clean the casters regularly to remove dust and debris that may hinder smooth movement.
- **Lumbar Cushion:** The lumbar cushion is designed to be easy to clean. Follow the general cleaning instructions for PU leather.
- **Avoid Overloading:** Do not exceed the maximum weight capacity of 150 kg (330 lbs).

6. Troubleshooting

If you encounter any issues with your Vigosit Gaming Chair, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Chair does not adjust height	Gas lift malfunction or lever not engaged.	Ensure the height adjustment lever is fully pulled. If the issue persists, the gas lift may need replacement.
Backrest does not recline or lock	Recline mechanism jammed or lever not engaged.	Check for obstructions around the recline mechanism. Ensure the recline lever is fully engaged or disengaged.
Massage/Heating function not working	Power connection issue or internal malfunction.	Ensure the power cable for the lumbar cushion is securely connected. Long press the ON/OFF button to activate. If still not working, contact customer support.
Chair squeaks or wobbles	Loose bolts or components.	Inspect all bolts and screws, and tighten them as necessary. Apply a small amount of lubricant to moving parts if squeaking persists.

Problem	Possible Cause	Solution
Casters not rolling smoothly	Debris in casters.	Remove any hair, dust, or debris from the caster wheels.

7. Specifications

Detailed specifications for the Vigosit Ergonomic Gaming Chair, Model 792671730538.

Feature	Detail
Brand	Vigosit
Model Name	Vigosit
Model Number	792671730538
Color	Blue
Material	Alloy Steel (Frame), PU Leather (Seat Material), Pocket Springs (Filling Material)
Product Dimensions (D x W x H)	55P x 50l x 124H centimeters (55 x 50 x 124 cm)
Recommended Maximum Load	150 Kilograms (330 lbs)
Back Style	Full Back
Special Features	Armrest, Headrest, Available Cushion, Ergonomic, Heated Lumbar Support, Footrest
Care Instructions	Easy to Clean (Refer to general PU leather care)
Recommended Uses	Gaming
Age Range Description	Adult
Included Components	Ottoman (Footrest)
Assembly Required	No (Minimal setup required)
Number of Recline Positions	2 to 3 (Up to 155 degrees)



Figure 7.1: Chair Dimensions and Recline Range

8. Warranty and Support

Vigosit is committed to providing high-quality products and customer satisfaction. For specific warranty details, please refer to the warranty card included with your product or contact Vigosit customer support directly.

If you require technical assistance, have questions about product features, or need to report a defect, please contact Vigosit customer service through the retailer where you purchased the product or via the official Vigosit website.

Please have your model number (792671730538) and purchase date ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question