Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

boAt Partypal 300

boAt Partypal 300/320 Speaker User Manual

Your comprehensive guide to setting up, operating, and maintaining your boAt Partypal speaker.

Introduction

The boAt Partypal 300/320 is a powerful portable party speaker designed to deliver immersive audio with its 120W boAt Signature Sound. It features versatile connectivity options, a built-in microphone for karaoke, and dynamic Flame LEDs to enhance your audio experience. This manual provides essential information for safe and optimal use of your speaker.



Image: The boAt Partypal 300/320 speaker, showcasing its design and LED lighting.

Setup

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- boAt Partypal 300/320 Speaker
- Charging Cable (USB Type-C)
- User Manual (this document)
- Warranty Card

Inspect the speaker for any signs of damage. If any components are missing or damaged, contact customer support.

2. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB Type-C charging cable to the speaker's charging port and the other end to a compatible USB power adapter (not included).

- The charging indicator light will illuminate during charging.
- Charging time may vary.
- A full charge provides up to 6 hours of playtime.



Image: Visual representation of the speaker's battery life, indicating up to 6 hours of total playtime.

3. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the control panel) for a few seconds until the indicator lights illuminate and you hear an audible prompt.
- **To Power Off:** Press and hold the Power button again for a few seconds until the indicator lights turn off.

Operating Instructions

1. Bluetooth Pairing

To connect your speaker to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing Bluetooth LED).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "boAt Partypal 300" or "boAt Partypal 320" from the list.
4. Once connected, the Bluetooth LED will become solid, and you will hear a confirmation sound.

The speaker supports Bluetooth v5.3 for stable connectivity.

2. True Wireless Stereo (TWS) Mode

TWS mode allows you to connect two Partypal 300/320 speakers for a stereo sound experience.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker, press and hold the TWS button (refer to the control panel diagram in the product images).
3. The speakers will attempt to pair with each other. Once connected, you will hear a confirmation sound, and the TWS indicator will light up on both speakers.
4. Now, connect your device to one of the speakers via Bluetooth as described above. Both speakers will play audio in stereo.



Image: Two boAt Partypal speakers connected wirelessly in TWS mode, enhancing the audio experience.

3. Multiple Connectivity Channels (AUX, USB, TF Card)

The speaker offers various ways to play audio:

- **AUX Mode:** Connect an audio device using a 3.5mm AUX cable to the AUX input port. The speaker will automatically switch to AUX mode or can be selected via the Mode button.
- **USB Mode:** Insert a USB flash drive containing audio files into the USB port. The speaker will automatically detect and play the files.
- **TF Card Mode:** Insert a TF (microSD) card containing audio files into the TF card slot. The speaker will automatically detect and play the files.

4. Karaoke and Guitar Input

The Partypal speaker includes input ports for a microphone and a guitar, allowing for karaoke and live instrument playback.

- Connect a microphone to the designated MIC input port.
- Connect a guitar to the designated GUITAR input port.
- Adjust the microphone and guitar volume using the dedicated controls on the speaker's control panel.

5. Control Panel Functions

The speaker features a top-mounted control panel for easy operation:



Image: Close-up of the speaker's control panel, highlighting buttons for bass/treble adjustment, mode selection, and LED controls.

- **Power Button:** On/Off.
- **Mode Button:** Cycle through Bluetooth, AUX, USB, and TF card modes.
- **Play/Pause Button:** Play or pause audio.
- **Volume +/- Buttons:** Adjust main speaker volume.
- **Bass/Treble EQ:** Dedicated controls to customize bass and treble levels.
- **Mic Volume/Echo:** Adjust microphone volume and echo effect.
- **LED Button:** Control the Flame LED lighting effects.
- **TWS Button:** Initiate True Wireless Stereo pairing.

6. Flame LEDs

The speaker is equipped with dynamic Flame LEDs that synchronize with your music. Use the dedicated LED button on the control panel to cycle through different lighting modes or turn them off.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use.
- **Water Resistance:** This speaker is not waterproof. Avoid exposure to water or excessive moisture.

Troubleshooting

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is charged. Connect the charging cable and try again.
Cannot pair via Bluetooth.	◦ Ensure the speaker is in pairing mode. ◦ Turn off and on Bluetooth on your device. ◦ Move the speaker closer to your device. ◦ Clear previous Bluetooth connections on your device.
No sound from the speaker.	◦ Check the volume level on both the speaker and your connected device. ◦ Ensure the correct input mode (Bluetooth, AUX, USB, TF) is selected. ◦ Verify cables are securely connected in AUX/USB modes.
TWS pairing fails.	◦ Ensure both speakers are not connected to any other Bluetooth device. ◦ Place speakers close to each other. ◦ Restart both speakers and try TWS pairing again.
Microphone/Guitar input not working.	◦ Ensure the microphone/guitar is properly connected. ◦ Adjust the MIC/GUITAR volume controls on the speaker. ◦ Test with another microphone/guitar if possible.

SPECIFICATIONS

Feature	Detail
Brand	boAt
Model Number	PartyPal 300
Output Wattage	120 Watts
Connectivity Technology	Bluetooth v5.3, AUX, USB
Power Source	Battery Powered
Playtime	Up to 6 hours
Compatible Devices	Laptop, Smartphone, Tablet, Television
Audio Input	Auxiliary, Microphone, Guitar
Item Dimensions (L x W x H)	24.6 x 60 x 26.8 Centimeters
Item Weight	6.6 Kilograms
Included Components	Partypal 300, Charging Cable, User Manual, Warranty Card

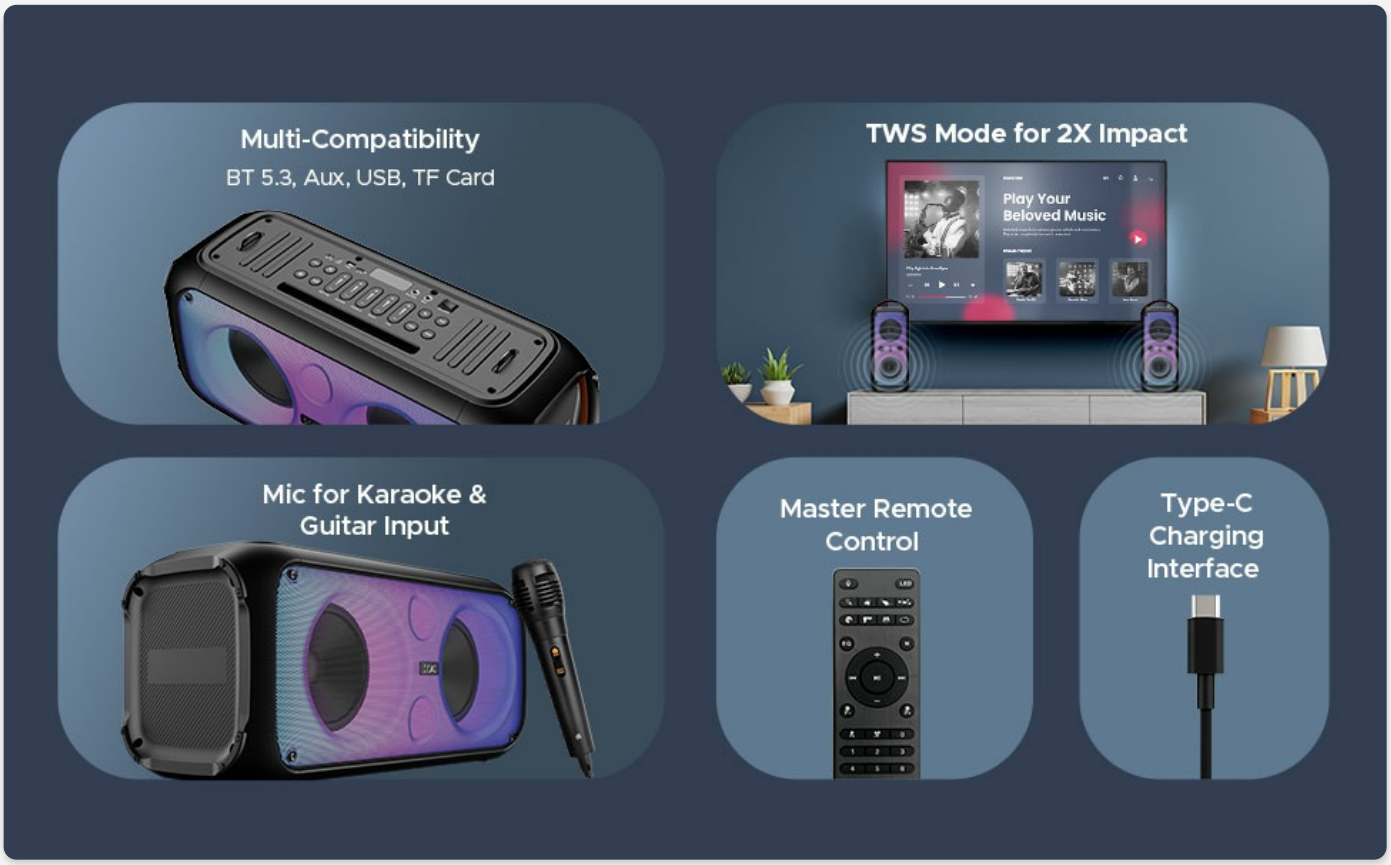


Image: Visual comparison between the PartyPal 320 and PartyPal 300 models, indicating potential variations.

Warranty Information

The boAt Partypal 300/320 speaker comes with a **1-year warranty** from the date of purchase. Please retain your purchase receipt and warranty card for any warranty claims. The warranty covers manufacturing defects and does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.
For detailed terms and conditions, refer to the included Warranty Card or visit the official boAt website.

Customer Support

If you encounter any issues or have questions regarding your boAt Partypal 300/320 speaker, please contact boAt customer support:

- **Email:** info@imaginemarketingindia.com
- **Manufacturer:** Imagine Marketing Ltd
- **Address:** Unit no. 204 & 205, 2nd floor, D-wing & E-wing, Corporate Avenue, Andheri Ghatkopar Link Road, Mumbai, Maharashtra-400093, India

For further assistance, you may also visit the officialboAt Store on Amazon.

© 2026 boAt. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CG5XTL1R

More documents and user manuals: **https://manuals.plus/**