Saved from manuals.plus.
Open the live page for links to other documents and user manuals.


Emerson ET-2400

Emerson ET-2400 24" HD LED Television User Manual

Your guide to setting up, operating, and maintaining your new Emerson television.

1. Introduction

Thank you for choosing the Emerson ET-2400 24" HD LED Television. This manual provides essential information to help you set up, operate, and troubleshoot your television, ensuring you get the best possible viewing experience. Please read this manual thoroughly before using the product and retain it for future reference.

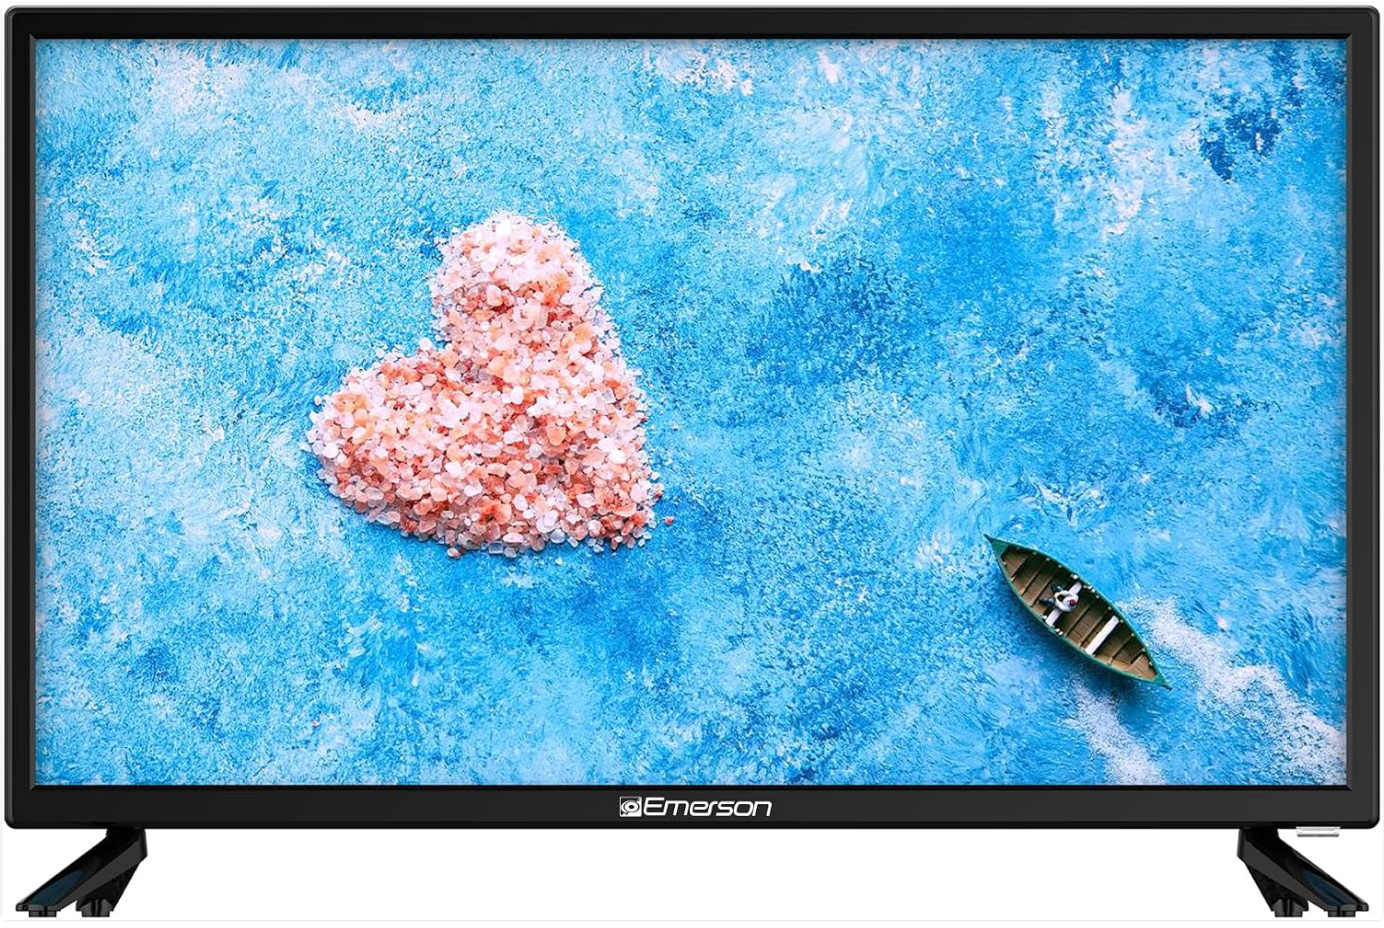

Front view of the Emerson ET-2400 24-inch HD LED Television, showcasing its slim design and vibrant display.

2. Package Contents

Before proceeding with the setup, please ensure all items listed below are present in your package:

- Emerson ET-2400 24" HD LED Television
- Full-function remote control
- TV stand (2 pieces)
- AC power adapter
- User manual (this document)
- Warranty Card
- 2 AAA batteries (for remote control)



The Emerson ET-2400 television shown with its remote control and stand components.

3. Setup Guide

3.1 Installing the TV Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align the stand pieces with the corresponding slots on the bottom of the TV.
3. Secure the stand pieces using the provided screws. Ensure they are tightened firmly.



The Emerson ET-2400 television displayed with its optional stand, designed for easy installation and versatile placement.

3.2 Wall Mounting (Optional)


The Emerson ET-2400 is wall-mountable. For wall mounting, you will need a VESA 100x100mm compatible wall mount (sold separately). Please refer to the wall mount's instructions for proper installation. Ensure the TV is securely attached to a sturdy wall structure.

The Emerson ET-2400 television wall-mounted, demonstrating its sleek design and space-saving capabilities.

3.3 Connecting Devices

The TV offers multiple input options for connecting external devices:


- **HDMI Ports (x3):** For high-definition audio and video from Blu-ray players, gaming consoles, cable boxes, etc.
- **USB Port (x1):** For media playback from USB drives.
- **VGA Input:** For connecting a computer.
- **CVBS L/R (RCA) Input:** For standard definition video and stereo audio.
- **RF Input:** For connecting an antenna or cable TV.
- **3.5mm Audio Input:** For PC audio when using VGA.

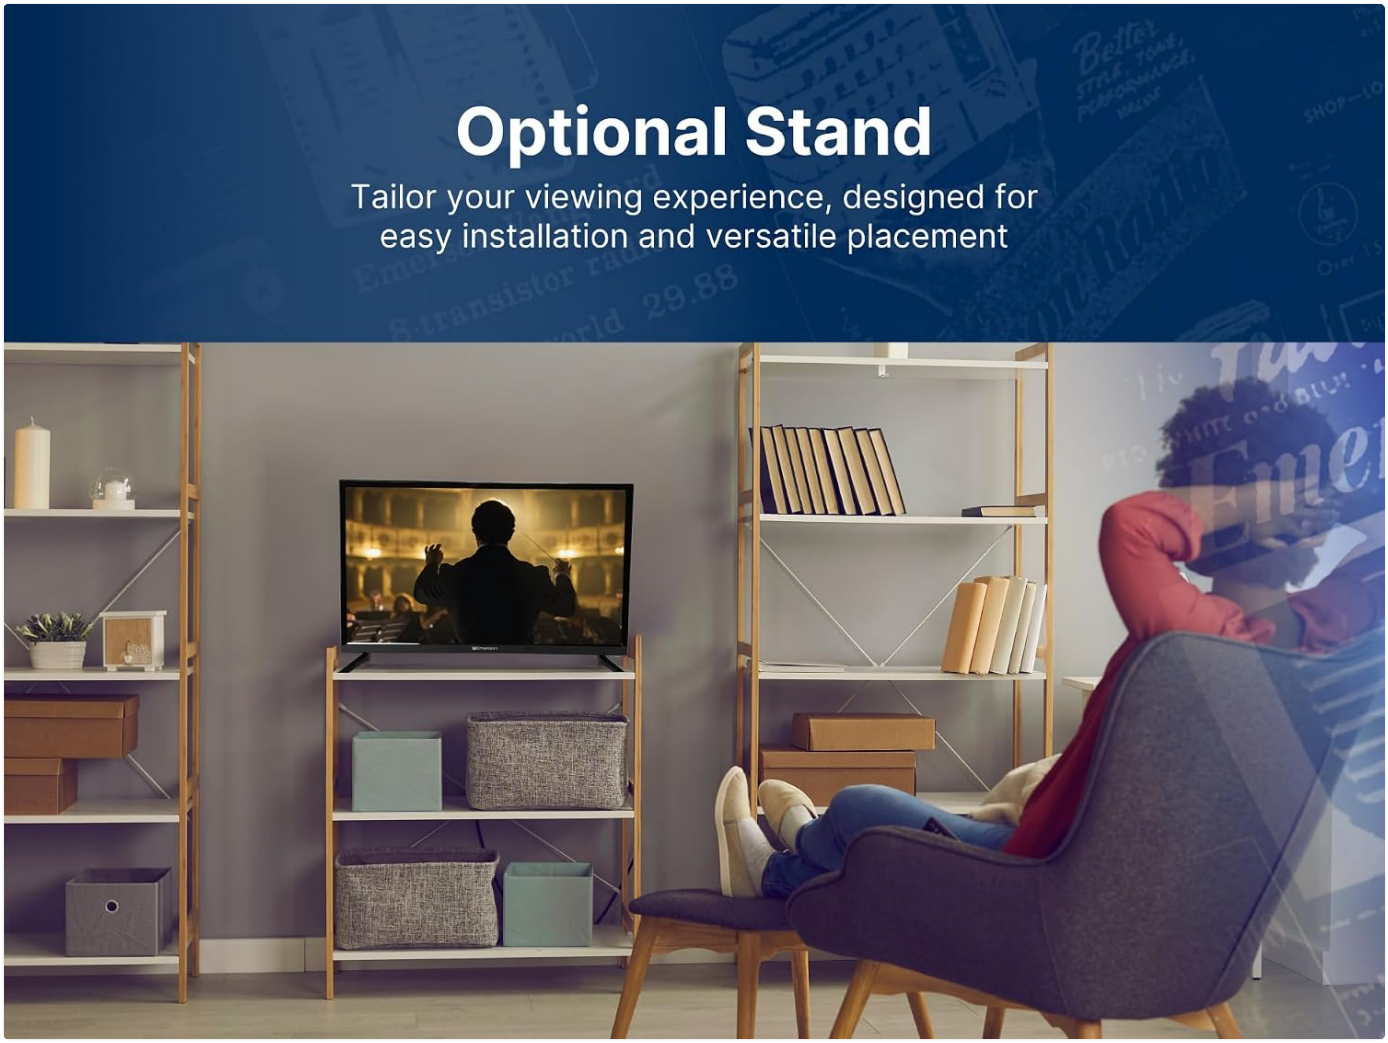

A close-up view of the convenient input ports on the back of the Emerson ET-2400 television, including HDMI, USB, and VGA.



Seamlessly connect for crisp, high-definition audio and video using the HDMI input.

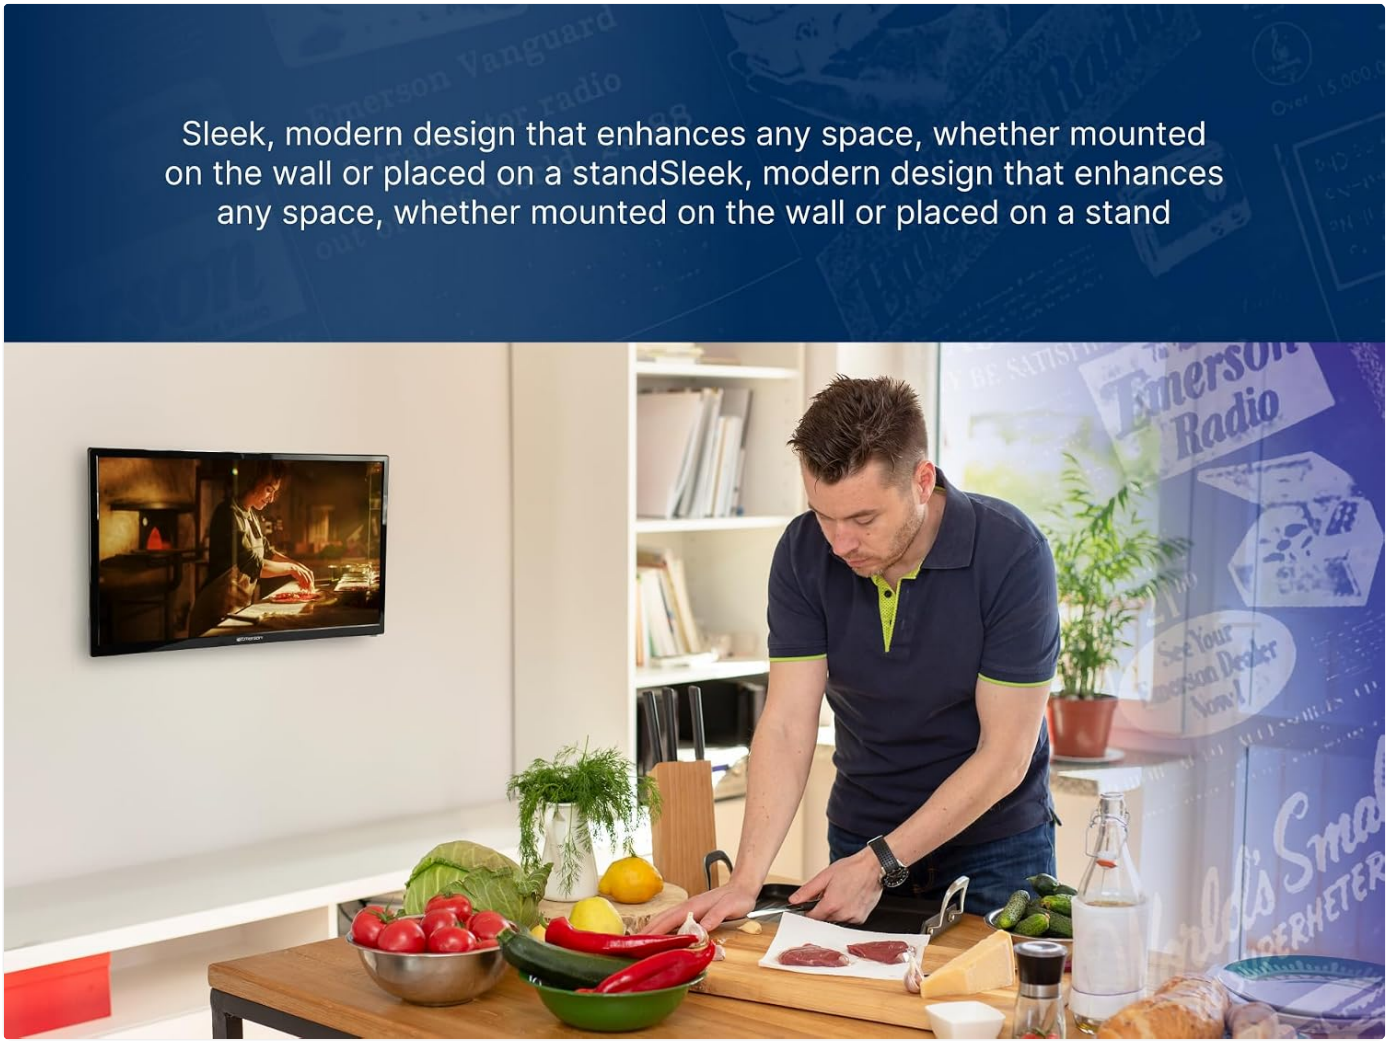

Enjoy a hassle-free experience with instant access to your favorite media by plugging a USB drive into the USB port.

4. Operating Instructions

4.1 Basic Controls

The television can be operated using the included remote control or the buttons located on the bottom right side of the TV. These buttons typically include Power, Volume Up/Down, Channel Up/Down, Menu, and Source.


Navigate effortlessly with the easy-to-use remote control.

4.2 Input Source Selection

To switch between connected devices (e.g., HDMI 1, USB, TV Tuner), press the **SOURCE** button on your remote control or the TV. A menu will appear, allowing you to select the desired input.

4.3 Digital ATSC TV Tuner

The built-in Digital ATSC TV Tuner allows you to receive over-the-air digital broadcasts. Connect an antenna to the RF input, then perform a channel scan through the TV's menu to find available channels.

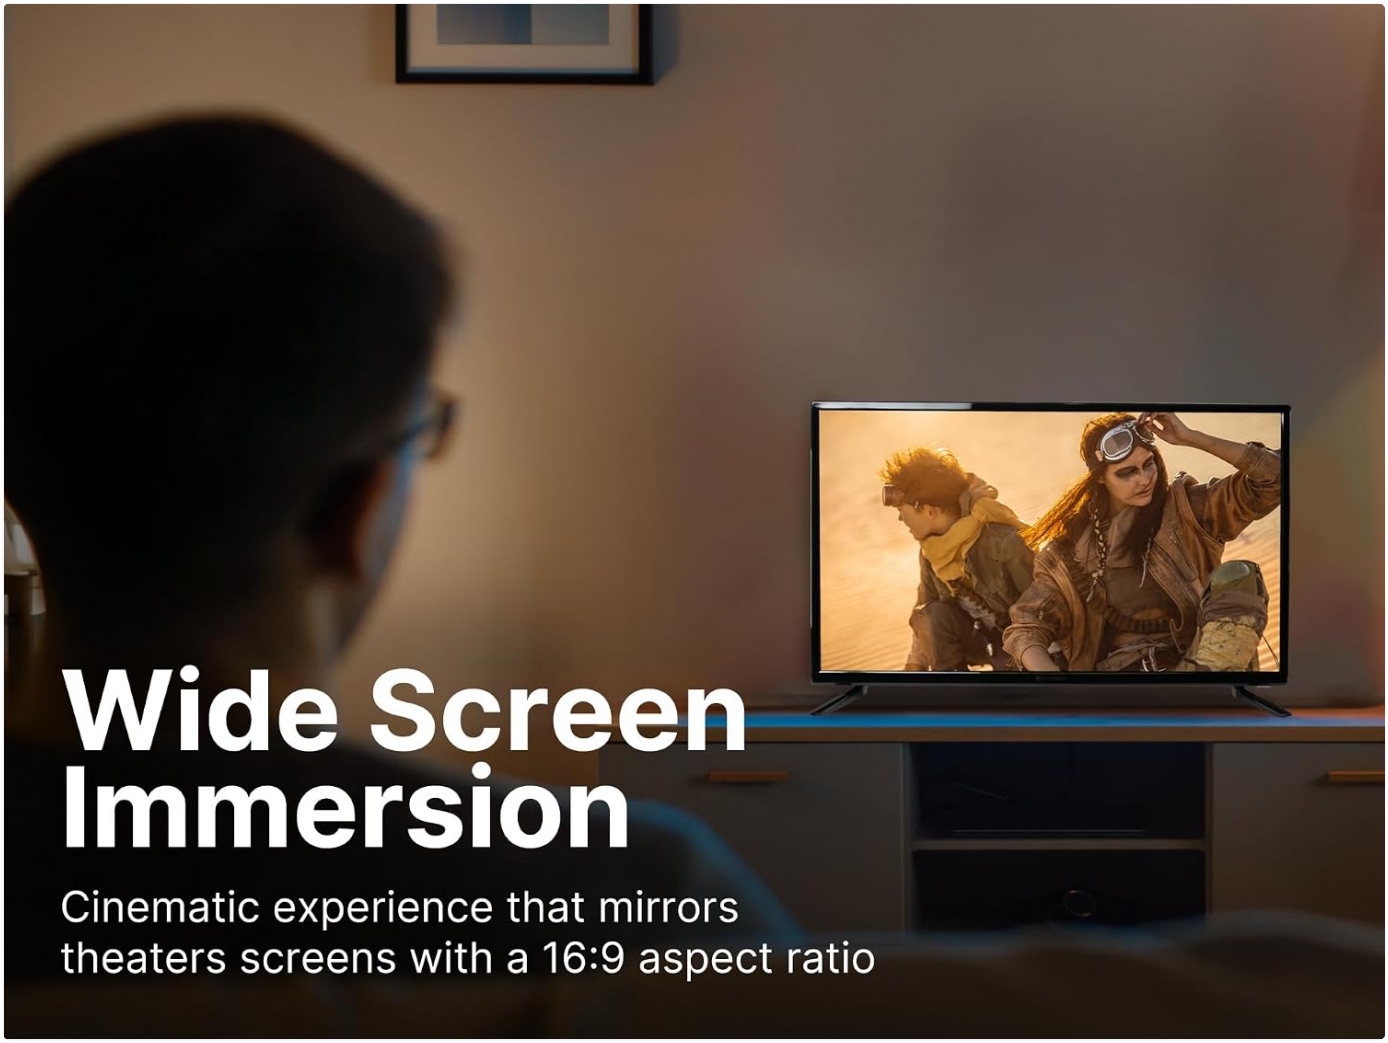

The Digital ATSC TV tuner provides the ultimate experience straight from over-the-air broadcasts.

4.4 Media Playback via USB

Insert a USB flash drive into the USB port. Select the USB input source. The TV's media browser will appear, allowing you to navigate and play supported video, audio, and image files.

4.5 Picture and Sound Settings

Access the TV's menu to adjust picture settings (e.g., brightness, contrast, color, aspect ratio) and sound settings (e.g., volume, equalizer, sound mode). The 16:9 aspect ratio provides a cinematic viewing experience.



Experience wide screen immersion with a 16:9 aspect ratio, mirroring theater screens.

5. Maintenance and Care

To ensure the longevity and optimal performance of your Emerson ET-2400 TV, follow these care guidelines:

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth slightly with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet.
- **Ventilation:** Ensure adequate ventilation around the TV. Do not block ventilation openings.
- **Power Cord:** Regularly check the power cord for any damage.
- **Storage:** If storing the TV for an extended period, disconnect it from power and cover it to protect from dust.

6. Troubleshooting

If you encounter issues with your television, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No Power	Ensure the power cord is securely plugged into the TV and a working electrical outlet. Check if the power outlet is functional by plugging in another device. Press the power button on the TV or remote control.

Problem	Possible Cause / Solution
No Picture, But Has Sound	Verify the correct input source is selected (e.g., HDMI 1, TV). Check the connection of the video cable (HDMI, VGA, CVBS) to both the TV and the external device. Try a different HDMI port or cable.
No Sound, But Has Picture	Increase the volume level. Check if the TV is muted. Verify audio cable connections for external devices. Check sound settings in the TV menu.
Remote Control Not Working	Ensure batteries are correctly inserted and not depleted. Replace if necessary. Remove any obstacles between the remote and the TV's IR sensor. Point the remote directly at the TV's IR sensor.
Poor Picture Quality (Antenna)	Adjust the antenna position. Perform a new channel scan. Consider using a stronger antenna or signal amplifier.

7. Specifications

Detailed technical specifications for the Emerson ET-2400 television:

Feature	Detail
Brand	Emerson
Model Number	ET-2400
Screen Size	24 Inches (61 cm diagonal)
Display Technology	LED
Resolution	720p HD
Refresh Rate	60 Hz
Aspect Ratio	16:9
Connectivity Technology	USB, HDMI (x3), VGA, CVBS L/R, RF, 3.5mm Audio
Product Dimensions (with stand)	21.8"D x 14.5"W x 6.7"H (approx.)
Item Weight	5.74 Pounds (approx.)
Color	Shiny Black
Batteries Required	2 AAA batteries (included for remote)
Special Features	Built-in Digital ATSC TV Tuner, Wall-Mountable (VESA 100x100mm)

Approximate dimensions of the Emerson ET-2400 television.

8. Warranty and Support

Your Emerson ET-2400 television comes with a limited warranty. Please refer to the included Warranty Card for detailed terms and conditions. For technical support, product registration, or to inquire about replacement parts, please visit the official Emerson website or contact their customer service department.

For more information and support, you may visit the Emerson Store on Amazon.

© 2024 Emerson. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CGKKWXTS

More documents and user manuals: **https://manuals.plus/**