Emerio AF-129369

Emerio Top AirFryer AF-129369 User Manual

Model: AF-129369 | Brand: Emerio

Important Safety Instructions

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the rating label matches your mains voltage.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not operate the appliance with a damaged cord or plug.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not place the appliance near hot gas or electric burners, or in a heated oven.
- Ensure adequate ventilation around the appliance during use.
- Do not touch hot surfaces. Use handles or knobs.
- This appliance is for household use only.
- Do not use accessories not recommended by the manufacturer.

Product Overview

The Emerio Top AirFryer AF-129369 is a digital hot air fryer designed for healthy cooking with little to no oil. It features a large 4.5L capacity and an intuitive LED touch control panel.



Figure 1: The Emerio AirFryer with its basket pulled out, showing food inside. This image highlights the appliance's compact design and the removable basket for easy access.



Figure 2: A detailed view of the digital LED control panel, displaying temperature and various cooking program icons. The touch interface allows for precise control of cooking settings.

Components:

- Main Unit with Heating Element and Fan
- Digital LED Touch Control Panel
- Removable Frying Basket (4.5L capacity)
- Basket Handle (Cool Touch)
- Air Inlet and Outlet Vents
- Non-slip Feet



Figure 3: The interior of the removable frying basket, showing its non-stick coating and design for optimal air circulation. This basket is dishwasher safe for easy cleaning.

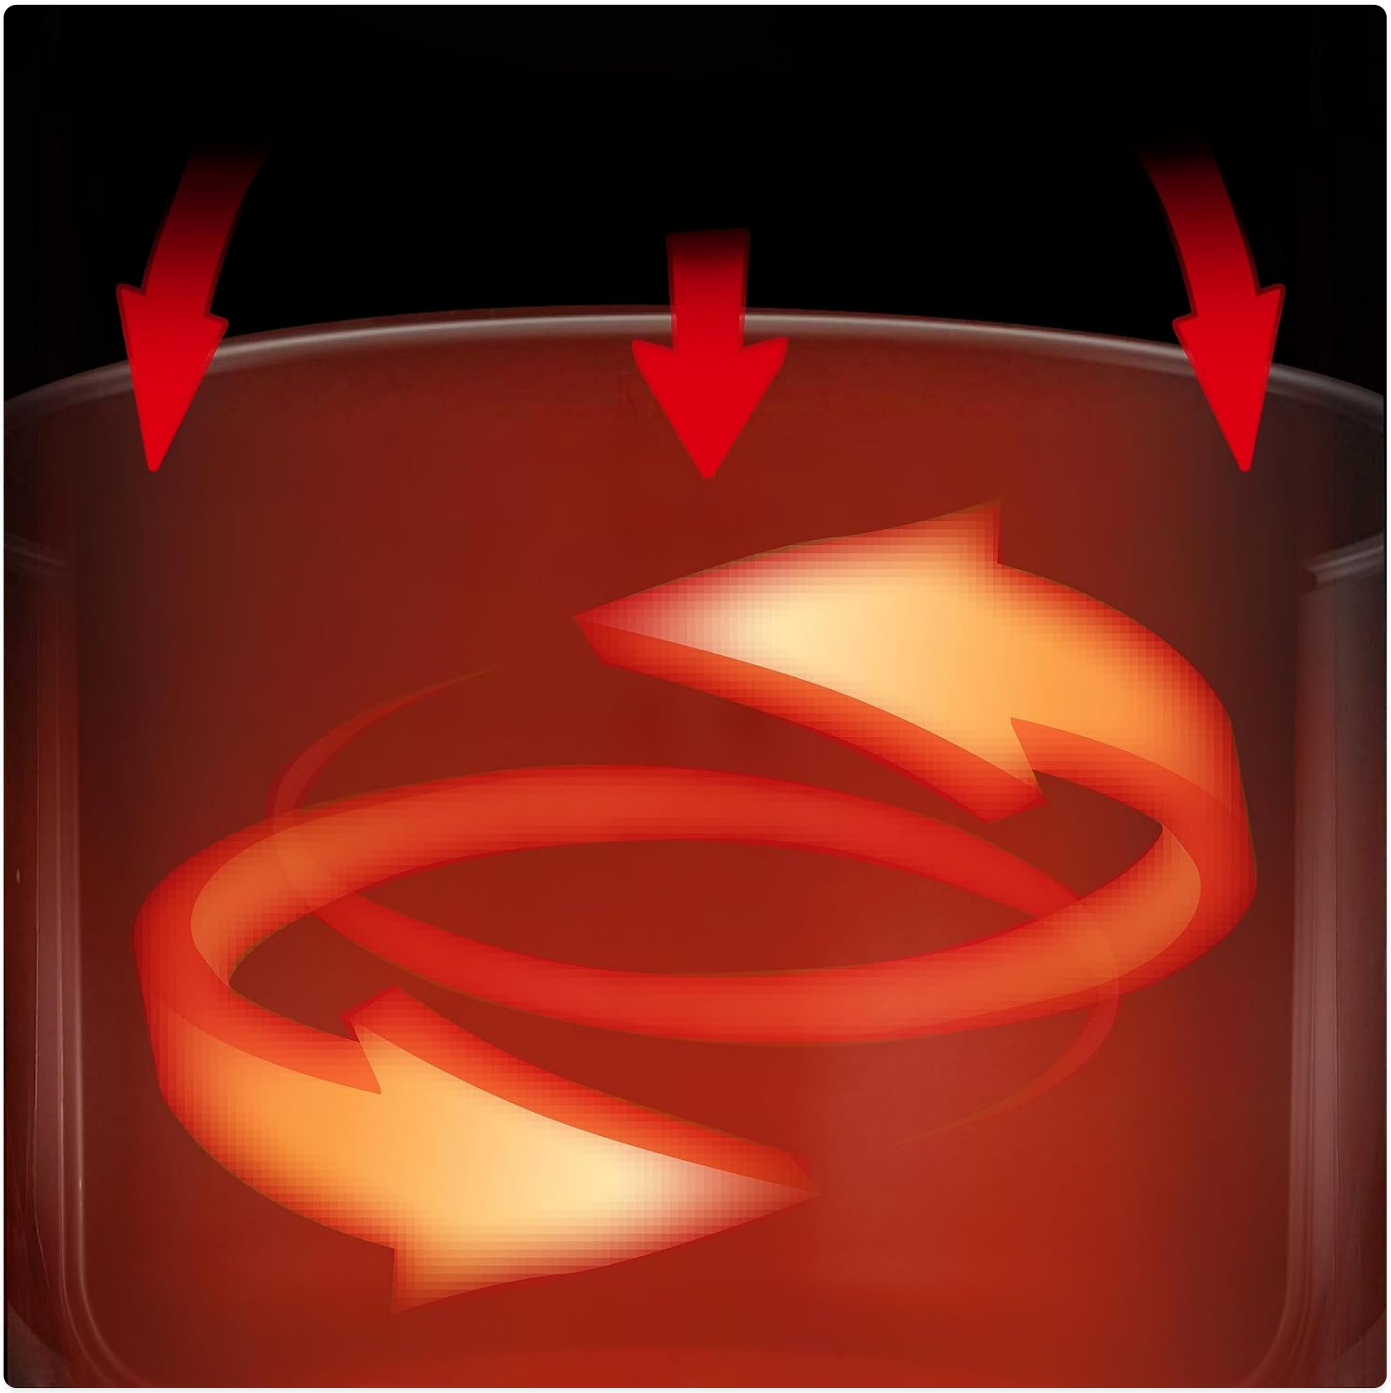


Figure 4: An illustrative diagram demonstrating the rapid hot air circulation technology within the air fryer, ensuring even cooking and crispy results.

Setup and First Use

1. Unpack the appliance and remove all packaging materials.
2. Wipe the exterior of the appliance with a damp cloth.
3. Clean the frying basket and container thoroughly with hot water, dish soap, and a non-abrasive sponge. These parts are dishwasher safe.
4. Ensure all parts are completely dry before use.
5. Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
6. Plug the power cord into a grounded wall outlet.
7. For the first use, it is recommended to run the air fryer empty for about 10 minutes at 180°C to eliminate any manufacturing odors. A slight odor may be present, which is normal.

Operating Instructions

Basic Operation:

1. Place ingredients into the frying basket. Do not overfill.
2. Slide the basket back into the main unit until it clicks into place.
3. Plug in the appliance. The display will light up.
4. Press the power button to turn on the air fryer.
5. Use the temperature and time adjustment buttons (**+** and **-**) to set your desired cooking temperature (80°C to 220°C) and time.
6. Alternatively, select one of the 8 automatic programs by pressing the 'M' (Mode) button.
7. Press the start/pause button to begin cooking.
8. The air fryer will automatically shut off when the timer reaches zero, indicated by a buzzer signal.
9. Carefully pull out the basket by the cool-touch handle to remove cooked food.

Automatic Programs:

The Emerio AirFryer comes with 8 pre-set programs for common dishes, optimizing temperature and time for best results:

Program Icon	Food Type	Default Temp.	Default Time
	Fries	220°C	15 min
	Chicken	180°C	16 min
	Steak	200°C	20 min
	Fish	160°C	10 min
	Shrimp	180°C	15 min
	Cake	220°C	20 min
	Dried Fruit	40°C	4 hours
	Reheat	220°C	10 min

Note: These are default settings and may need adjustment based on food quantity and desired crispiness.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners.
3. The frying basket and container are dishwasher safe. For hand washing, use hot water, dish soap, and a non-abrasive sponge.
4. Clean the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove food residue from the heating element.
5. Ensure all parts are completely dry before storing or next use.

Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Check if the plug is securely inserted. Test the outlet with another appliance. If problem persists, contact support.
Food is not cooked evenly.	Basket overloaded; food not shaken/turned.	Do not overload the basket. Shake or turn food halfway through cooking for even results.

Problem	Possible Cause	Solution
White smoke coming from appliance.	Grease residue from previous use; high-fat food.	Clean the basket and container thoroughly. For high-fat foods, drain excess fat during cooking.
Appliance smells during first use.	Normal manufacturing residue burning off.	This is normal. Run the air fryer empty for 10-15 minutes at 180°C before first use. Ensure good ventilation.

Specifications

Model Number: AF-129369

Brand: Emerio

Color: Matte Black

Capacity: 4.5 Liters

Power: 1300 Watts

Voltage: 240 Volts

Material: Plastic (BPA-free parts)

Dimensions (L x W x H): Approximately 28 x 37 x 28 cm (11 x 14.6 x 11 inches)

Item Weight: 3.2 Kilograms (7.05 lbs)

Special Features: Automatic shut-off, Temperature control, Timer, Programmable, Digital touch screen, Buzzer signal, Rapid heating, Non-slip feet.

Recommended Uses: Frying, Grilling, Baking, Braising, Roasting, Reheating.

Warranty and Support

This Emerio AirFryer AF-129369 comes with a 1-year availability for spare parts from the date of purchase.
For technical support, warranty claims, or questions regarding your appliance, please contact Emerio customer service. Refer to your purchase documentation for specific contact details or visit the official Emerio website.
Please have your model number (AF-129369) and proof of purchase ready when contacting support.

© 2023 Emerio. All rights reserved.
Emerio is a registered trademark.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question