Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Westpoint WYS-1523I

Westpoint Dishwasher WYS-1523I User Manual

Model: WYS-1523I

Please read this manual carefully before using your appliance and keep it for future reference.

1. Safety Information

This section contains important safety instructions. Failure to follow these instructions may result in fire, electric shock, serious injury, or damage to the appliance.

- **Electrical Safety:** Ensure the dishwasher is properly grounded. Do not use extension cords. Disconnect power before servicing.
- **Water Safety:** Connect to a cold water supply unless specified otherwise. Check for leaks after installation.
- **Detergent and Rinse Aid:** Use only detergents and rinse aids specifically designed for automatic dishwashers. Keep these products out of reach of children.
- **Child Safety:** Keep children away from the dishwasher, especially when it is operating. Do not allow children to play inside or on the appliance.
- **Sharp Objects:** Load sharp items (knives, skewers) with the points facing down to prevent injury.
- **Flammable Materials:** Do not wash items contaminated with gasoline, paint, or other flammable liquids.

2. Product Overview

The Westpoint WYS-1523I is a freestanding dishwasher designed for efficient and hygienic cleaning of your dishes. It features a 15 place setting capacity, 8 wash programs, and 7 temperature settings, all controlled via an intuitive LED panel. The interior is constructed from durable stainless steel and includes three eco-friendly filters for optimal performance.



Image: Front view of the Westpoint WYS-1523I Dishwasher, showcasing its sleek stainless steel design.

3. Setup and Installation

Proper installation is crucial for the safe and efficient operation of your dishwasher. It is recommended to have the appliance installed by a qualified technician.

3.1 Unpacking

- Remove all packaging materials.
- Check the dishwasher for any transport damage. Report any damage immediately to your dealer.

3.2 Positioning

- Place the dishwasher on a level, stable surface.
- Adjust the adjustable feet to ensure the appliance is perfectly level.

3.3 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread.
- Ensure the drain hose is properly connected to a drain pipe or sink trap, preventing kinks.

3.4 Electrical Connection

- Connect the power cord to a properly grounded electrical outlet (243V, 1920W).
- Do not use adapters or extension cords.

3.5 Initial Use

- Before the first wash, fill the salt dispenser with dishwasher salt and the rinse aid dispenser with rinse aid.
- Run a short wash cycle without dishes to clean the interior.

4. Operating Instructions

This section guides you through the daily operation of your Westpoint dishwasher.

4.1 Control Panel

The dishwasher features an intuitive LED control panel with touch controls for easy program selection and function activation.

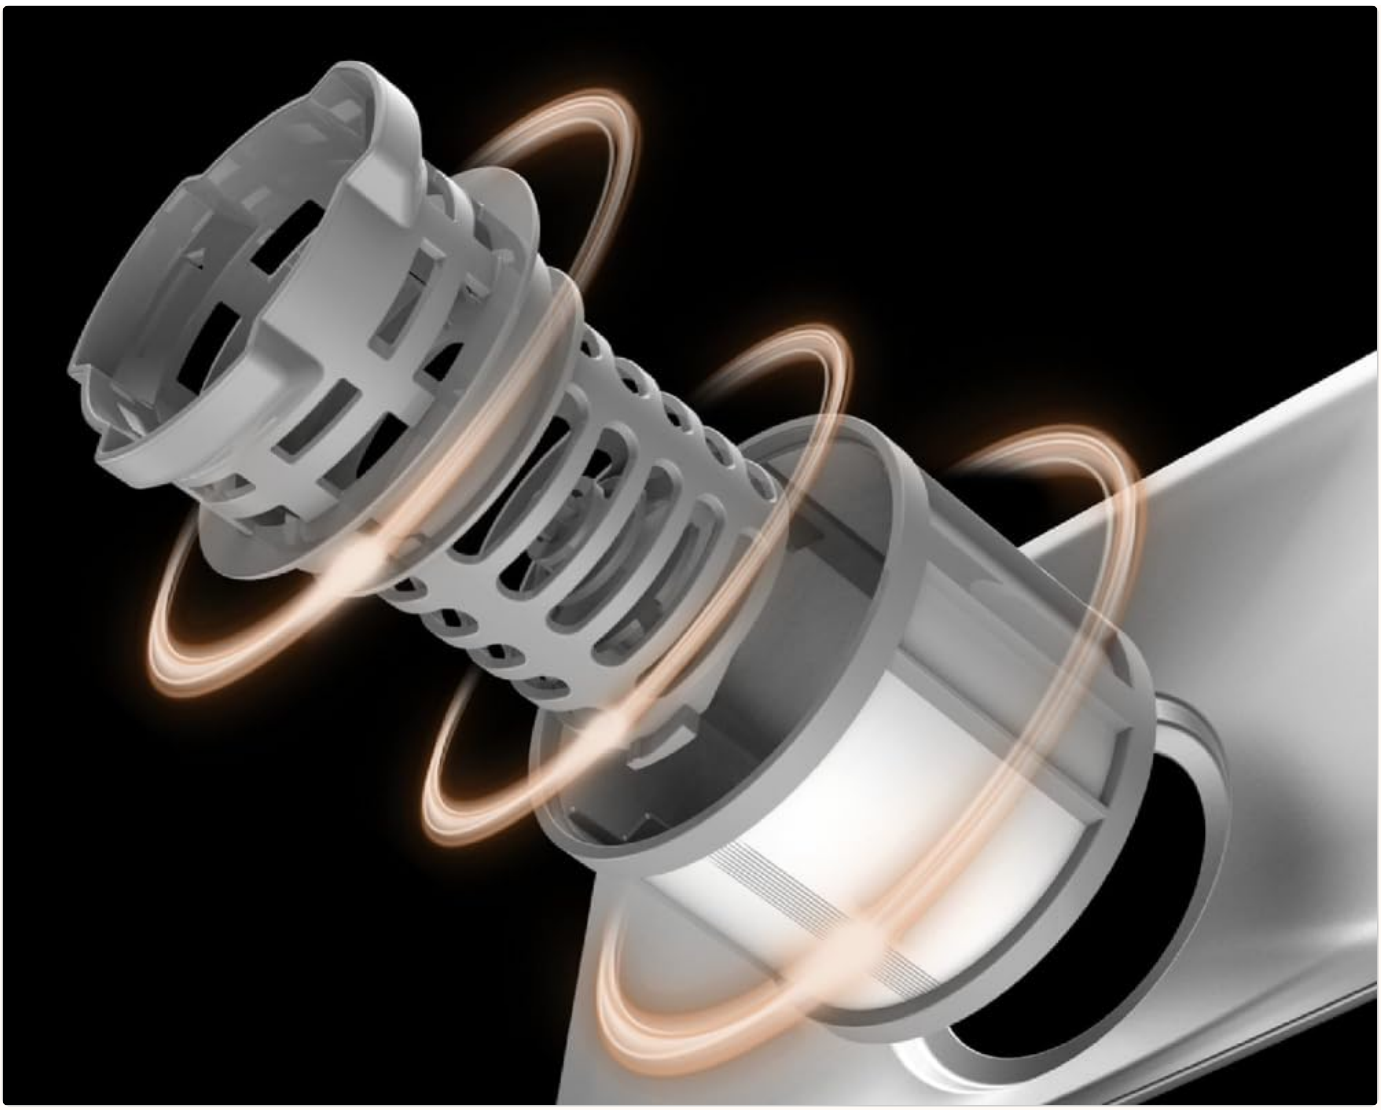


Image: Close-up of the dishwasher's LED control panel, showing various program icons and touch buttons.

4.2 Adding Detergent and Rinse Aid

- Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser securely.
- Fill the rinse aid dispenser with rinse aid until the indicator shows full. This helps with drying and prevents water spots.
- Check the salt indicator light on the LED panel. If illuminated, refill the salt dispenser with dishwasher salt.

4.3 Selecting a Program

Press the 'Program' button repeatedly or use the touch controls to cycle through the available wash programs until your desired program is selected. The LED display will show the selected program.

4.4 Starting a Cycle

- Close the dishwasher door firmly.
- Press the 'Start' button to begin the wash cycle.
- To pause a cycle, open the door slightly or press the 'Pause' button. Close the door and press 'Start' to resume.

4.5 Special Functions

- **Half Load:** Activates a half-load option for smaller loads, saving water and energy.
- **Delay Timer:** Allows you to postpone the start of a wash cycle by a set number of hours.

- **Leak Protection:** The dishwasher is equipped with a system to detect and prevent water leaks.

5. Loading the Dishwasher

Proper loading ensures optimal cleaning performance and prevents damage to dishes. The Westpoint WYS-1523I offers flexible loading options.



Image: Interior view of the dishwasher showing the upper and lower racks, designed for efficient loading of various dish sizes.

5.1 Upper Basket

- Ideal for delicate items like glasses, cups, and small plates.
- The upper basket is **height-adjustable** to accommodate taller items in the lower basket.
- Includes cup shelves for additional loading flexibility.

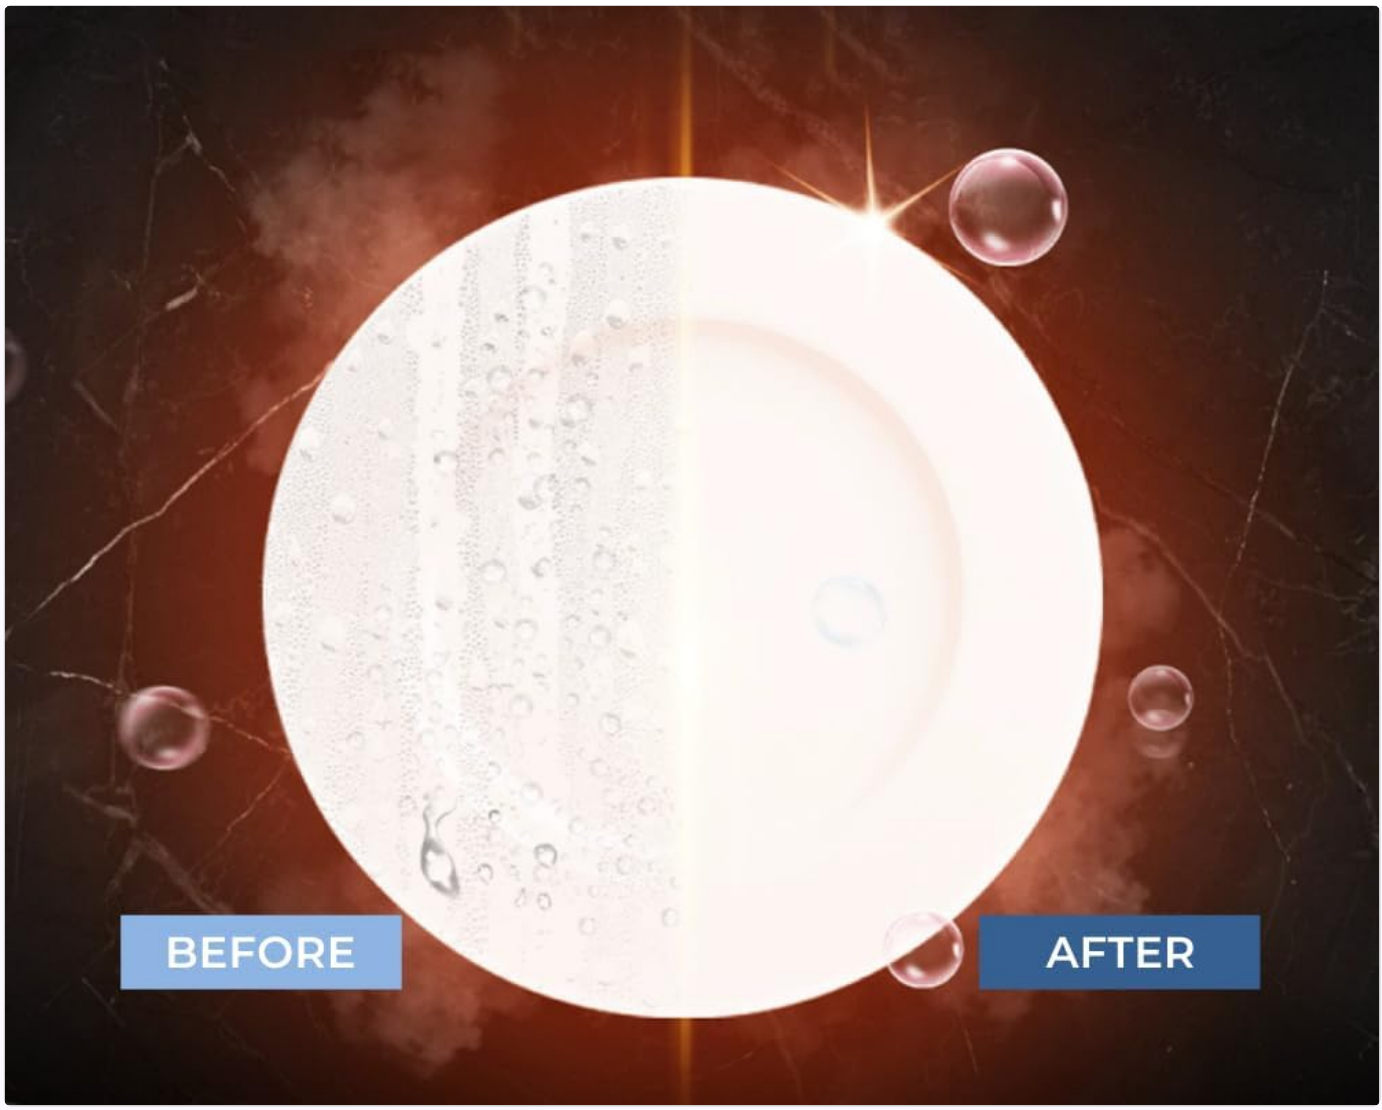


Image: The adjustable upper basket of the dishwasher, demonstrating its ability to move up or down to fit different item heights.

5.2 Lower Basket

- Suitable for larger and heavily soiled items such as dinner plates, bowls, pots, and pans.
- Features a dedicated cutlery basket for forks, spoons, and knives.
- Includes foldable front and rear racks for increased flexibility when loading oversized items.

6. Programs and Settings

The Westpoint WYS-1523I offers 8 wash programs and 7 temperature settings to cater to various cleaning needs.



Image: Dynamic view of water jets actively cleaning dishes inside the dishwasher, illustrating the powerful wash action.

6.1 Wash Programs

Program	Temperature	Description / Use
Prewash	45°C	For rinsing dishes that will be washed later. Prevents food from drying onto dishes.
Hybrid	60°C	A balanced program for normally soiled dishes.
Super	60°C	For heavily soiled dishes and pots.
Speed	55°C	A quick wash for lightly soiled dishes without dried-on food.
ECO	50°C	Energy and water-efficient program for normally soiled dishes. Uses lower wash and rinse temperatures.
Hygiene	70°C	Provides a sanitary clean for dishes, cutlery, and cooking utensils, ensuring they are always safe for use.
Glass	40°C	Gentle program for delicate glassware.
Intensive	65°C	For very heavily soiled dishes, pots, and pans with dried-on food.



Image: A visual comparison showing a plate before and after washing, highlighting the dishwasher's effective cleaning performance.



Image: A wine glass submerged in water, representing the gentle yet effective cleaning provided by the 'Glass' program.

6.2 Intensive Drying

This mode rinses dishes with hot water at the end of the cleaning cycle. Condensation forms on the cool stainless steel interior, effectively drawing water from the dishes and sending it to the drain, resulting in thoroughly dried items.

7. Maintenance

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

7.1 Cleaning the Filters

The dishwasher is equipped with three eco-friendly filters that require regular cleaning to prevent blockages and ensure efficient washing.

- Twist and remove the cylindrical filter assembly at the bottom of the dishwasher.
- Separate the fine filter and the coarse filter.
- Rinse all filter components under running water to remove food particles. Use a soft brush if necessary.

- Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked in place.



Image: Exploded view diagram of the dishwasher's multi-stage filter system, showing its components for cleaning.

7.2 Cleaning Spray Arms

- Periodically check the spray arm nozzles for blockages.
- Remove the spray arms and clear any debris from the nozzles using a thin wire or toothpick.
- Reattach the spray arms securely.

7.3 Exterior and Interior Cleaning

- Wipe the exterior of the dishwasher with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the interior with a dishwasher cleaner or a mixture of vinegar and water to remove grease and odors.

7.4 Salt and Rinse Aid Indicators

- Monitor the salt and rinse aid indicator lights on the control panel. Refill as soon as they illuminate to ensure optimal washing and drying results.

8. Troubleshooting

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Dishes are not clean	Incorrect program selected; Spray arms blocked; Filters clogged; Insufficient detergent.	Select a more intensive program; Clean spray arms; Clean filters; Add more detergent.
Water remains in the dishwasher	Drain hose kinked or blocked; Filters clogged; Drain pump fault.	Check and clear drain hose; Clean filters; Contact service if problem persists.
White streaks on dishes	Insufficient rinse aid; Hard water; Too much detergent.	Refill rinse aid dispenser; Adjust water hardness setting; Reduce detergent amount.
Dishwasher is noisy	Dishes rattling; Foreign object in pump; Improper installation.	Rearrange dishes; Check for foreign objects; Ensure dishwasher is level.

9. Specifications

Technical details for the Westpoint WYS-1523I Dishwasher.

Feature	Detail
Model Number	WYS-1523I
Brand	Westpoint
Capacity	15 Place Settings
Number of Programs	8
Voltage	243 Volts
Power	1920 Watts
Dimensions (WxDxH)	59.8 x 59.8 x 84.5 cm
Weight	42 Kilograms
Material	Stainless Steel Metal
Noise Level	49 dB
Installation Type	Freestanding
Control Type	Touch
Special Features	Adjustable Height, Leak Protection, Timer Delay, Digital Display, Half Load
Included Components	User Manual

10. Warranty and Support

Your Westpoint WYS-1523I Dishwasher comes with a **one-year warranty** from the date of purchase, covering manufacturing defects.

10.1 Warranty Claims

To make a warranty claim, please retain your proof of purchase and contact the authorized Westpoint service center in your region. The warranty does not cover damage caused by improper installation, misuse, neglect, or unauthorized repairs.

10.2 Customer Support

For technical assistance, spare parts, or any other inquiries, please contact Westpoint customer support. Contact details can typically be found on the Westpoint official website or on the warranty card included with your product.

Online Support: Visit the official Westpoint website for FAQs and support resources.

Service Center: Refer to your product documentation for local service center contact information.

© 2023 Westpoint. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CGRQXRXM

More documents and user manuals: **https://manuals.plus/**