AOSKY BLACKOUT-CORDLESS-ROLLER-SHAD-e6206e78fb

AOSKY Cordless Blackout Roller Shades Instruction Manual

Model: BLACKOUT-CORDLESS-ROLLER-SHAD-e6206e78fb

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your AOSKY Cordless Blackout Roller Shades. Please read this guide thoroughly before beginning installation or use to ensure proper function and safety. These shades are designed to provide 100% light blockage, UV protection, and thermal insulation, enhancing comfort and energy efficiency in your home or office.



Image: AOSKY Cordless Blackout Roller Shade, fully extended.

Safety Information

The AOSKY Cordless Blackout Roller Shades feature a cordless design, making them inherently safer for households with children and pets by eliminating entanglement hazards associated with traditional corded blinds. Always ensure the shade is operated smoothly and kept free from obstructions.

Package Contents

Before beginning installation, verify that all components are present in your package:

- 1 x AOSKY Cordless Blackout Roller Shade
- 1 x Set of Mounting Brackets
- 1 x Set of Installation Screws and Wall Anchors
- 1 x Installation Instruction Guide (this document)



Image: Included mounting hardware.

Measurement Guide

Accurate measurements are crucial for proper fit and function. Determine whether you will be performing an inside mount (within the window frame) or an outside mount (outside the window frame).

Inside Mount

- **Width:** Measure the exact inside width of your window frame at three points (top, middle, bottom). Use the smallest measurement. Order this exact width or up to 1 inch less.
- **Depth:** A minimum frame depth of 2 inches is required for inside mount installation.
- **Fabric Width Note:** The fabric width will be approximately 1 inch narrower than the total shade width to accommodate the mounting hardware.

Outside Mount

- **Width:** Measure the width of the area you wish to cover. For optimal light blockage, add at least 4 inches to the window's actual width (2 inches on each side).
- **Height:** The shade height is adjustable from 0 to 72 inches.



Image: Window measurement guide for inside and outside mounts.

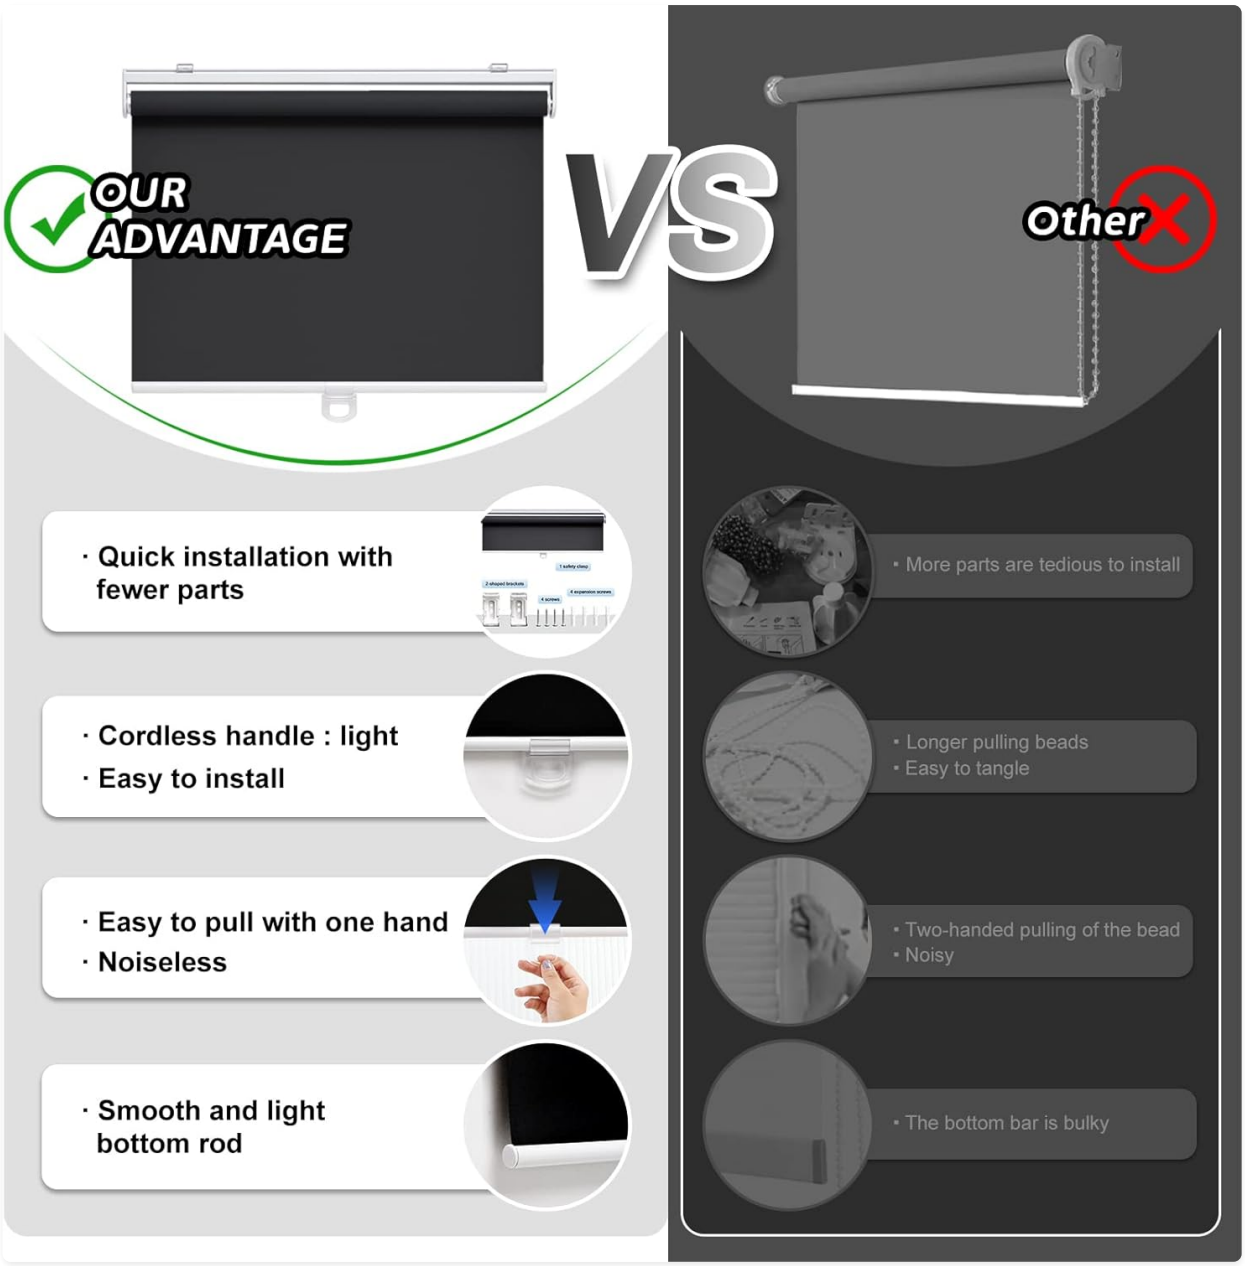


Image: Example of shade width vs. fabric width.

Setup and Installation

The AOSKY Cordless Roller Shades are designed for convenient installation. The package includes all necessary hardware.

Tools Required (Not Included):

- Pencil
- Measuring Tape
- Drill
- Screwdriver

Installation Steps:

1. **Mark Bracket Positions:** Using your measurements, mark the desired positions for the mounting

brackets on your window frame or wall. Ensure marks are level.

2. **Drill Pilot Holes:** Drill pilot holes at the marked positions. If installing into drywall, insert the provided wall anchors.
3. **Attach Brackets:** Securely fasten the mounting brackets using the provided screws.
4. **Install Shade:** Carefully align the roller shade with the installed brackets and snap it into place. Ensure it is securely seated.
5. **Test Operation:** Gently pull down and push up the shade to ensure smooth operation and proper retraction.

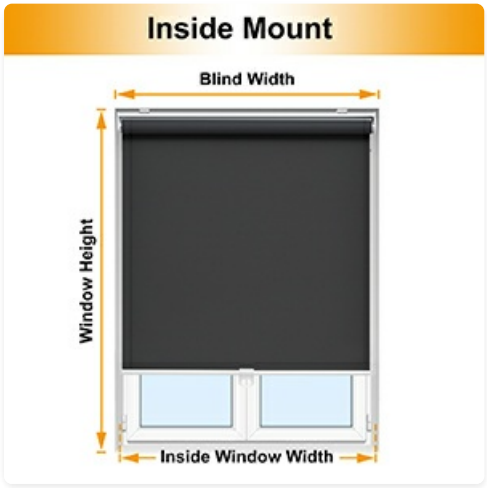


Image: Visual guide for installation steps.

Operating Instructions

Your cordless roller shade features a robust spring-loaded mechanism for smooth and easy operation.

To Lower the Shade:

- Grasp the bottom rail or the small handle located at the center of the bottom rail.
- Gently pull the shade down to your desired position. The spring mechanism will hold it in place.

To Raise the Shade:

- Grasp the bottom rail or handle.
- Gently pull the shade down slightly, then release it slowly. The shade will retract upwards smoothly.
- To stop the shade at an intermediate position, pull it down slightly and then release it quickly. The shade will lock in place.

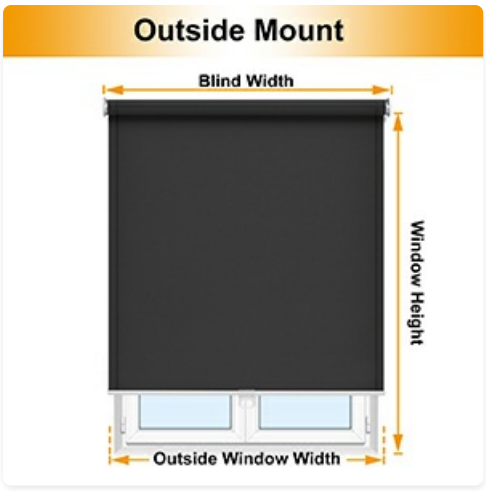


Image: Visual guide for operating the roller shade.

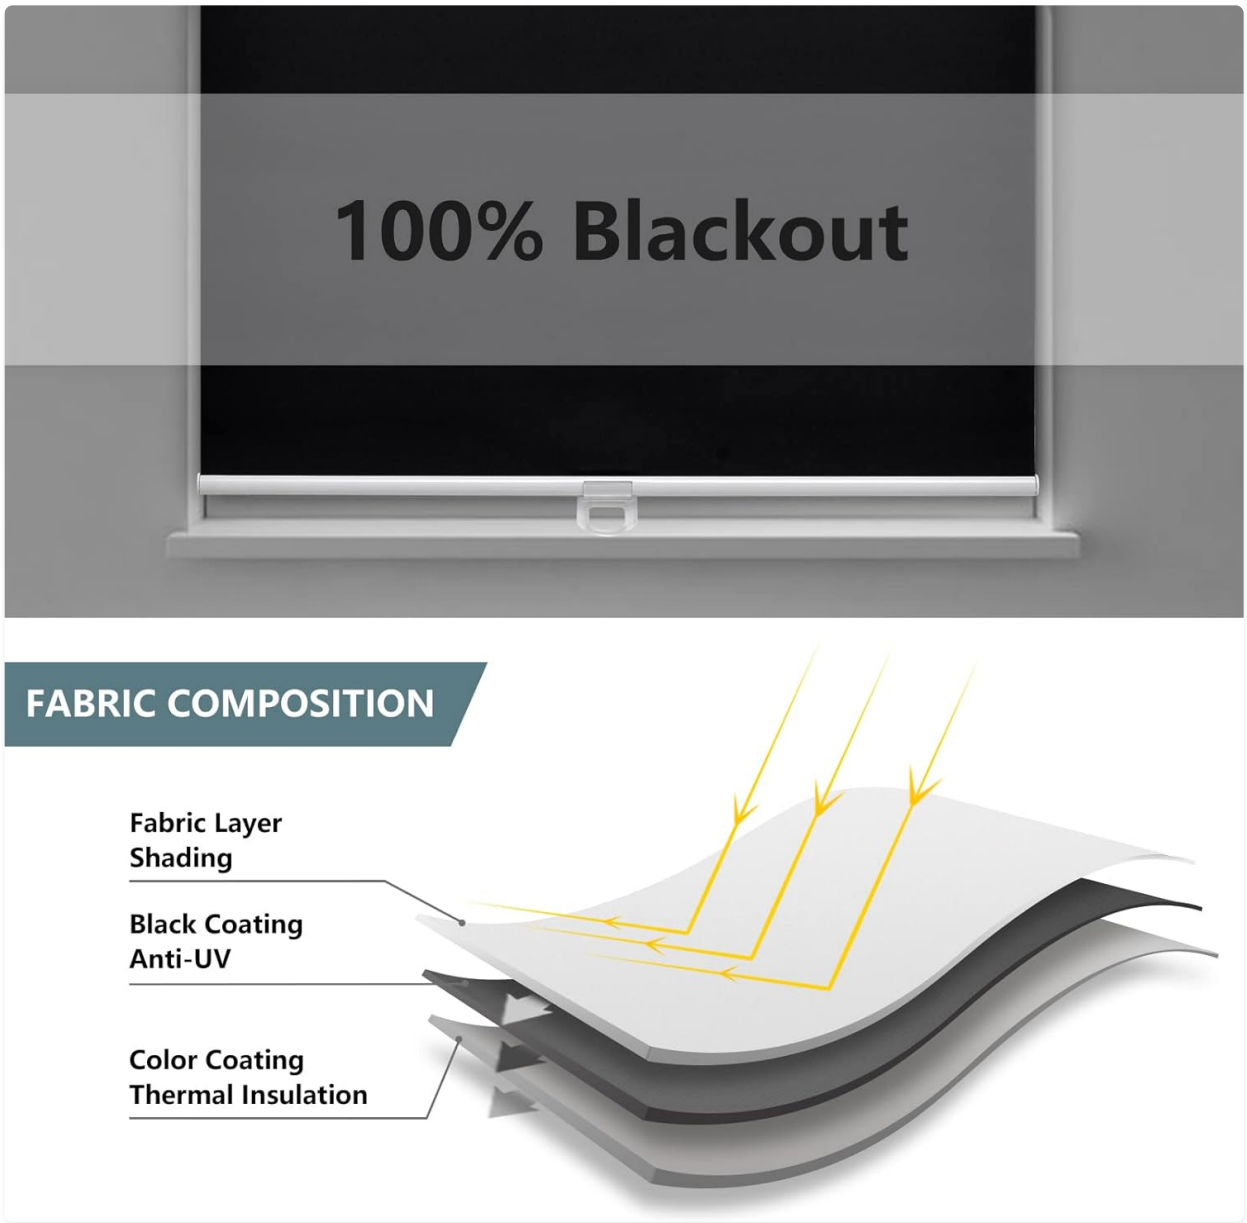


Image: Product details showing the cordless handle and internal mechanisms.

Maintenance

To ensure the longevity and appearance of your AOSKY Cordless Blackout Roller Shades, follow these

simple maintenance guidelines:

- **Cleaning:** The shade fabric is made of 100% polyester. For cleaning,**spot clean only** with a soft, damp cloth and mild detergent. Do not immerse the shade in water or use harsh chemicals.
- **Dusting:** Regularly dust the shade with a soft brush or vacuum with a brush attachment to prevent dust buildup.
- **Mechanism:** The spring mechanism is designed for durability. Avoid forcing the shade up or down, as this can damage the internal components.



Image: Spot cleaning a roller shade.

Troubleshooting

Problem	Possible Cause	Solution
Shade does not roll up or down smoothly.	Internal spring mechanism may need adjustment or is obstructed.	Ensure the shade is not obstructed by the window frame or debris. Gently pull the shade all the way down, then release it to allow the spring to reset. If issues persist, contact customer support.
Shade does not stay in position when lowered.	Spring tension may be too loose.	Pull the shade down completely, then give it a quick, firm tug downwards before releasing. This can sometimes reset the tension. If not resolved, contact customer support.
Missing parts from package.	Packaging error.	Immediately contact AOSKY customer support with your purchase details for replacement parts.

Product Specifications

Feature	Detail
Brand	AOSKY
Model Number	BLACKOUT-CORDLESS-ROLLER-SHAD-e6206e78fb
Material	100% Polyester

Feature	Detail
Product Dimensions	72"L x 72"W (as per current model)
Color	Black (as per current model)
Opacity	Blackout
Operation Mode	Automatic (Spring System)
Additional Features	Thermal Insulation, UV Protection
Closure Type	Cordless
Mounting Type	Outside Mount (also supports Inside Mount)
Control Type	Manual (via bottom rail)
Recommended Uses	Indoor, Window, Kids Room
Product Care	Spot Clean Only

Warranty and Support

AOSKY products are manufactured to high-quality standards. For any issues, missing accessories, or questions regarding your product, please contact AOSKY customer support. We are committed to providing a satisfactory solution within 37 hours of your inquiry.
Please retain your proof of purchase for warranty claims.
For further assistance, visit the AOSKY Store on Amazon.

© 2026 AOSKY. All rights reserved.