Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Karini K24-72-XL

Karini 5 Gun Safe Instruction Manual

Model: K24-72-XL

1. Introduction

This manual provides essential instructions for the safe and proper installation, operation, and maintenance of your Karini 5 Gun Safe, Model K24-72-XL. Please read this manual thoroughly before using the safe to ensure optimal security and functionality. Keep this manual for future reference.



Image: The Karini 5 Gun Safe shown from the front and with its door open, revealing storage for rifles, pistols, and ammunition.

2. Safety Information

Adhering to these safety guidelines is crucial for preventing unauthorized access and ensuring the safe storage of firearms and valuables.

- **Secure Storage:** Always store firearms unloaded and locked in the safe. Keep ammunition in the separate lockable compartment.

- **Key and Code Security:** Never share your electronic code or leave keys unattended. Store emergency keys and the emergency power box in a secure location away from the safe.
- **Mounting:** For maximum security and to prevent tipping, the safe**must** be securely bolted to a wall or floor.
- **Children:** Keep the safe, its keys, and access codes out of reach of children.
- **Battery Type:** Use only non-rechargeable alkaline batteries for the electronic lock. Rechargeable batteries may cause malfunction.

3. Package Contents

Verify that all items are present in the package:

- 1x Karini Rifle Safe (Model K24-72-XL)
- 2x Master Keys (for main door)
- 2x Separate Locker Keys (for internal compartment)
- 4x Expansion Bolts (for mounting)
- 1x External Emergency Power Box
- 1x Instruction Manual
- 4x Removable Hooks

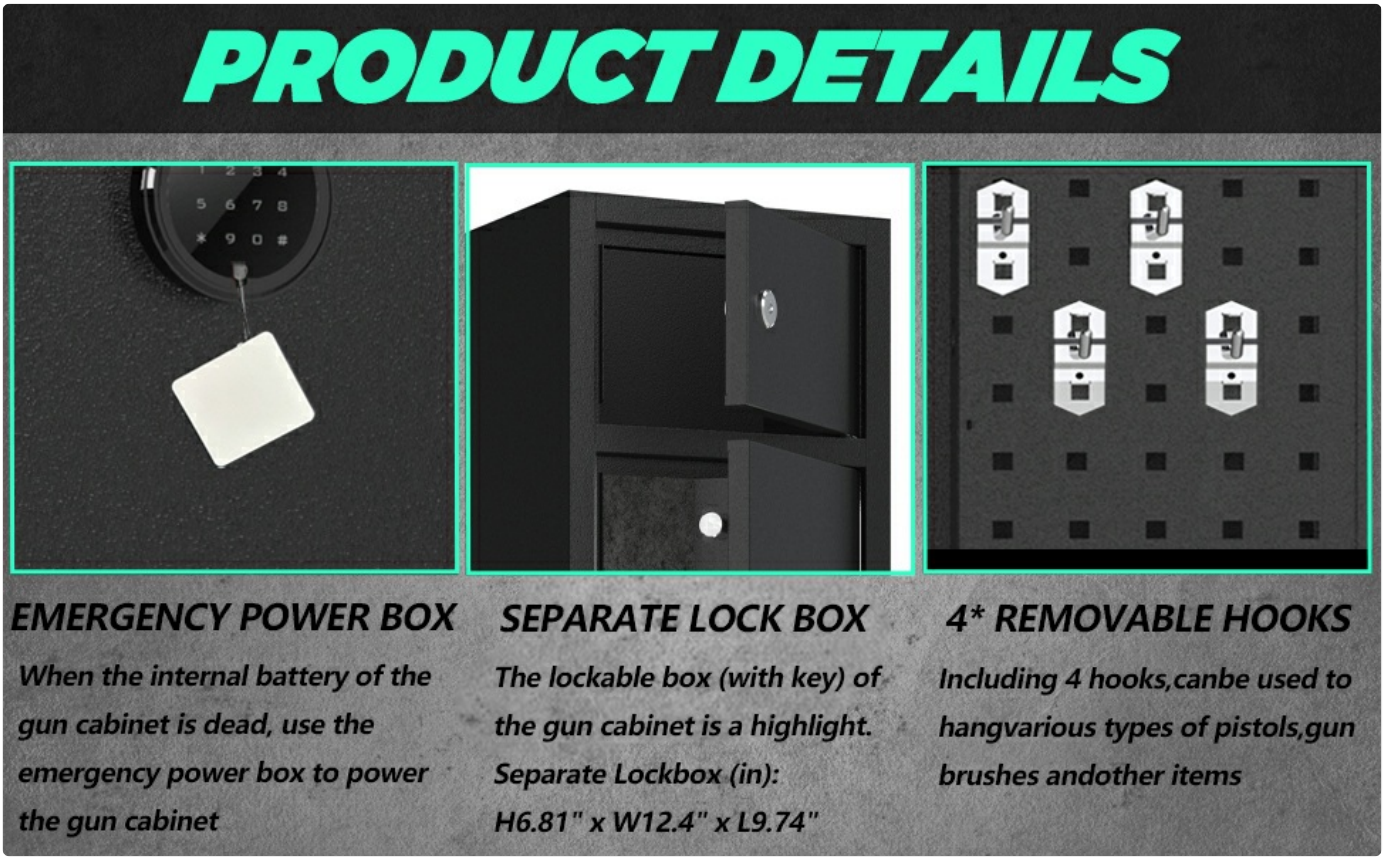


Image: Close-up views of the emergency power box, the separate lockable compartment, and the four removable hooks included with the safe.

4. Product Features

- **Large Capacity:** Designed to store 4-5 long guns up to 46.5 inches in height, along with pistols and ammunition.
- **Electronic Lock:** Features a programmable electronic keypad for quick access, with a backup key system.
- **Separate Lockable Compartment:** An internal locker provides secure storage for handguns, ammunition, or important documents.
- **Robust Construction:** Constructed from 1.4mm thick cold-rolled steel with 20mm solid locking bolts for enhanced security. The door panel is 25mm thick for impact resistance.
- **180-Degree Door Opening:** The door opens wide for easy access to contents.
- **Interior LED Light:** An upgraded LED light illuminates the interior upon opening, aiding visibility in low-light conditions.
- **Removable Hooks & Gun Rack:** Includes 4 removable hooks for pistol storage or accessories, and a 5-slot gun rack.



Image: An illustrative overview highlighting the digital gun safe's key features such as security, quick access, and integrated technology.

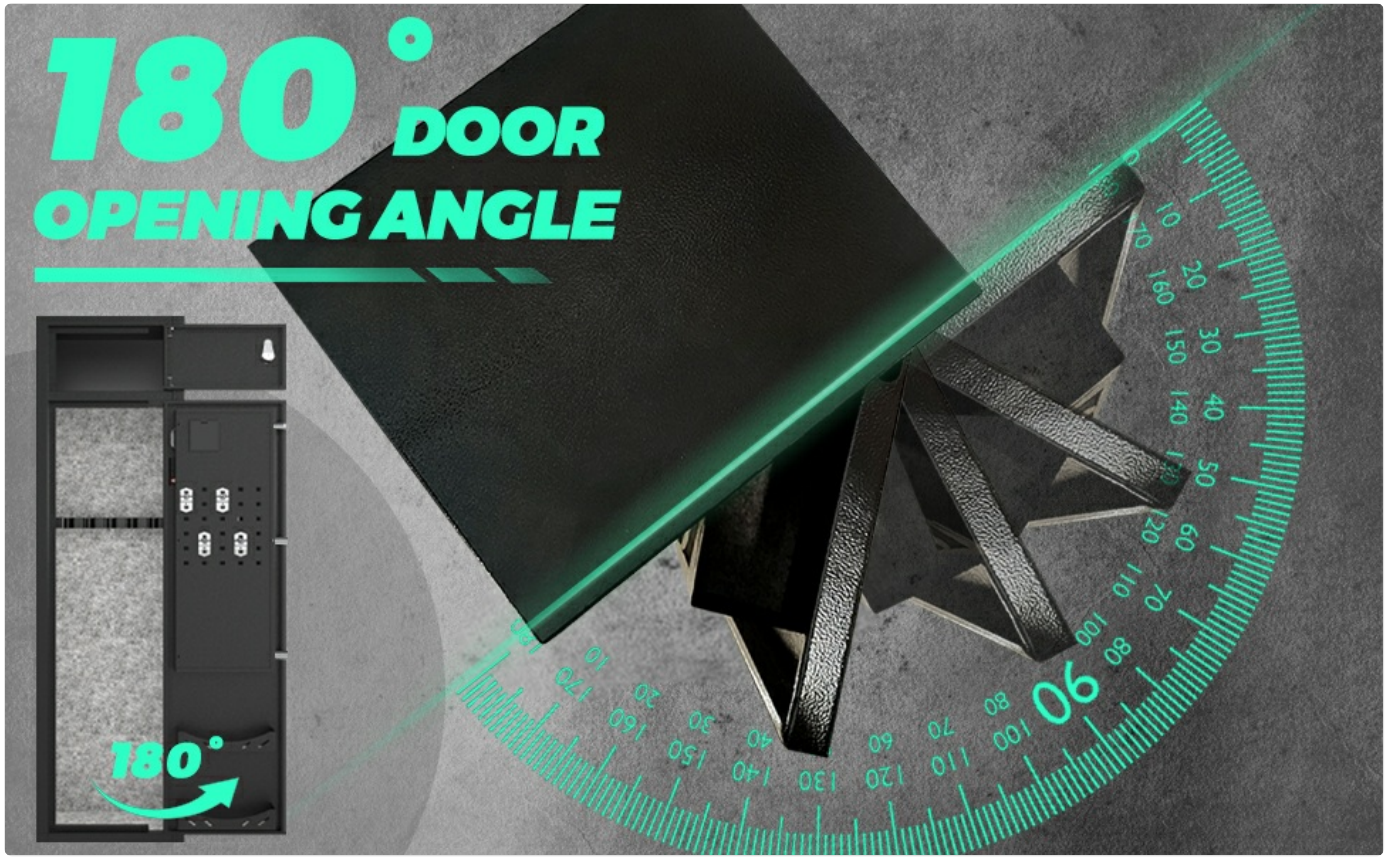


Image: A diagram illustrating the 180-degree door opening capability of the safe, allowing full access to the interior.



Image: A cross-section view highlighting the 25mm thickened door panel, emphasizing its impact resistance and robust construction.

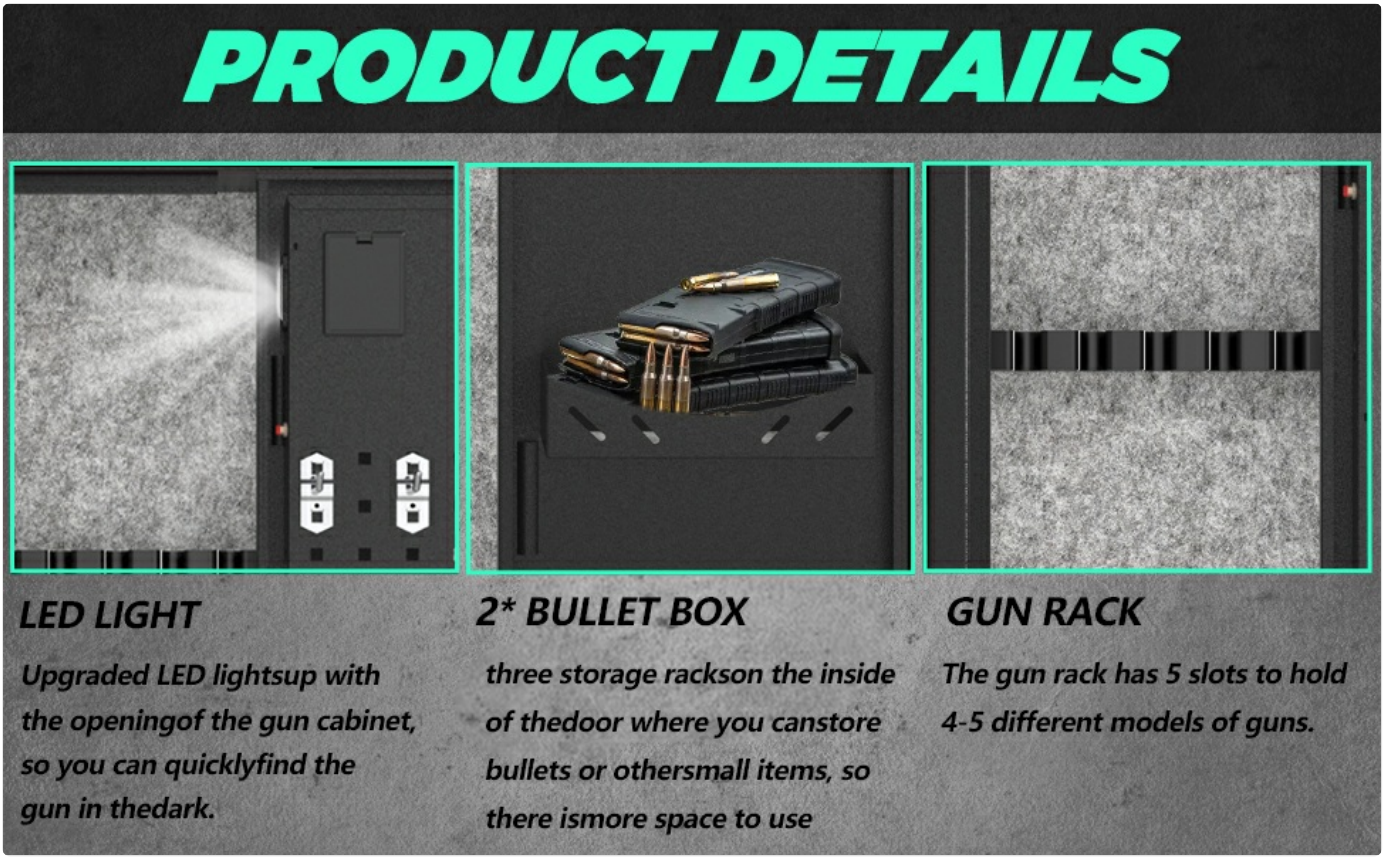


Image: Detailed views of the safe's interior features, including the LED light, the two bullet storage boxes, and the five-slot gun rack.

5. Setup and Installation

5.1 Unpacking

Carefully remove the safe from its packaging. Inspect for any damage. Keep all packaging materials until you are satisfied with the product.

5.2 Battery Installation

1. Locate the battery compartment on the back of the electronic keypad.
2. Insert 4 AA alkaline batteries (not included), ensuring correct polarity.**Do not use rechargeable batteries.**
3. Close the battery compartment cover securely.

5.3 Initial Code Setup

1. With the safe door open, locate the reset button on the inside of the door, near the battery compartment.
2. Press the reset button. The keypad will beep, and an indicator light will flash.
3. Enter your desired 3-8 digit code on the keypad, then press the '#' key.
4. Test the new code with the door open before closing it.

5.4 Mounting the Safe

Mounting the safe to a wall or floor is highly recommended for security and stability. The safe is designed for wall mounting.

1. Choose a suitable location, preferably a discreet and secure area.
2. Mark the desired drilling points through the pre-drilled holes at the back of the safe.
3. Drill pilot holes in the wall using an appropriate drill bit.
4. Align the safe with the drilled holes and insert the provided expansion bolts.
5. Tighten the bolts securely to anchor the safe firmly to the wall.

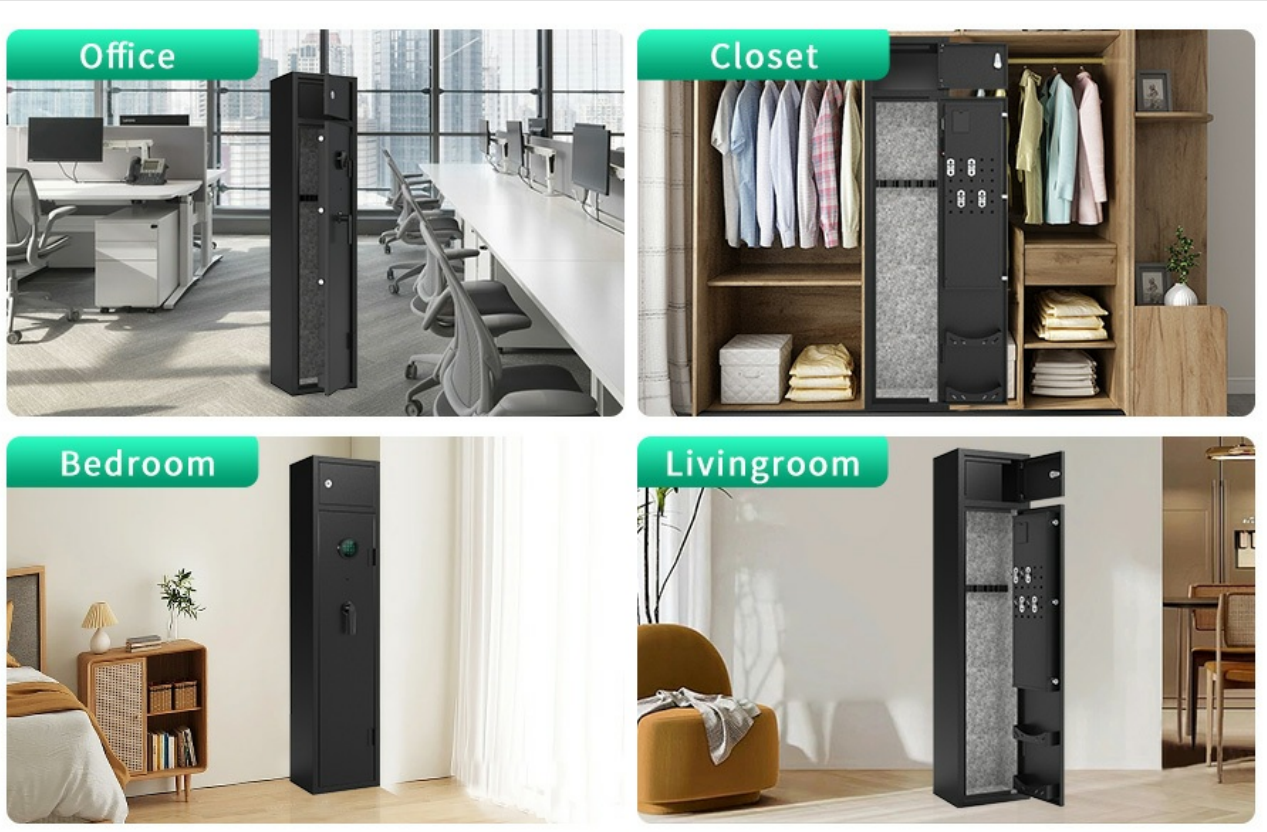


Image: Various placement examples for the Karini 5 Gun Safe, including an office, closet, bedroom, and living room, demonstrating its versatile integration into different environments.

6. Operating Instructions

6.1 Opening with Electronic Code

1. Enter your 3-8 digit code on the keypad.
2. Press the '#' key.
3. Rotate the handle clockwise to open the door.

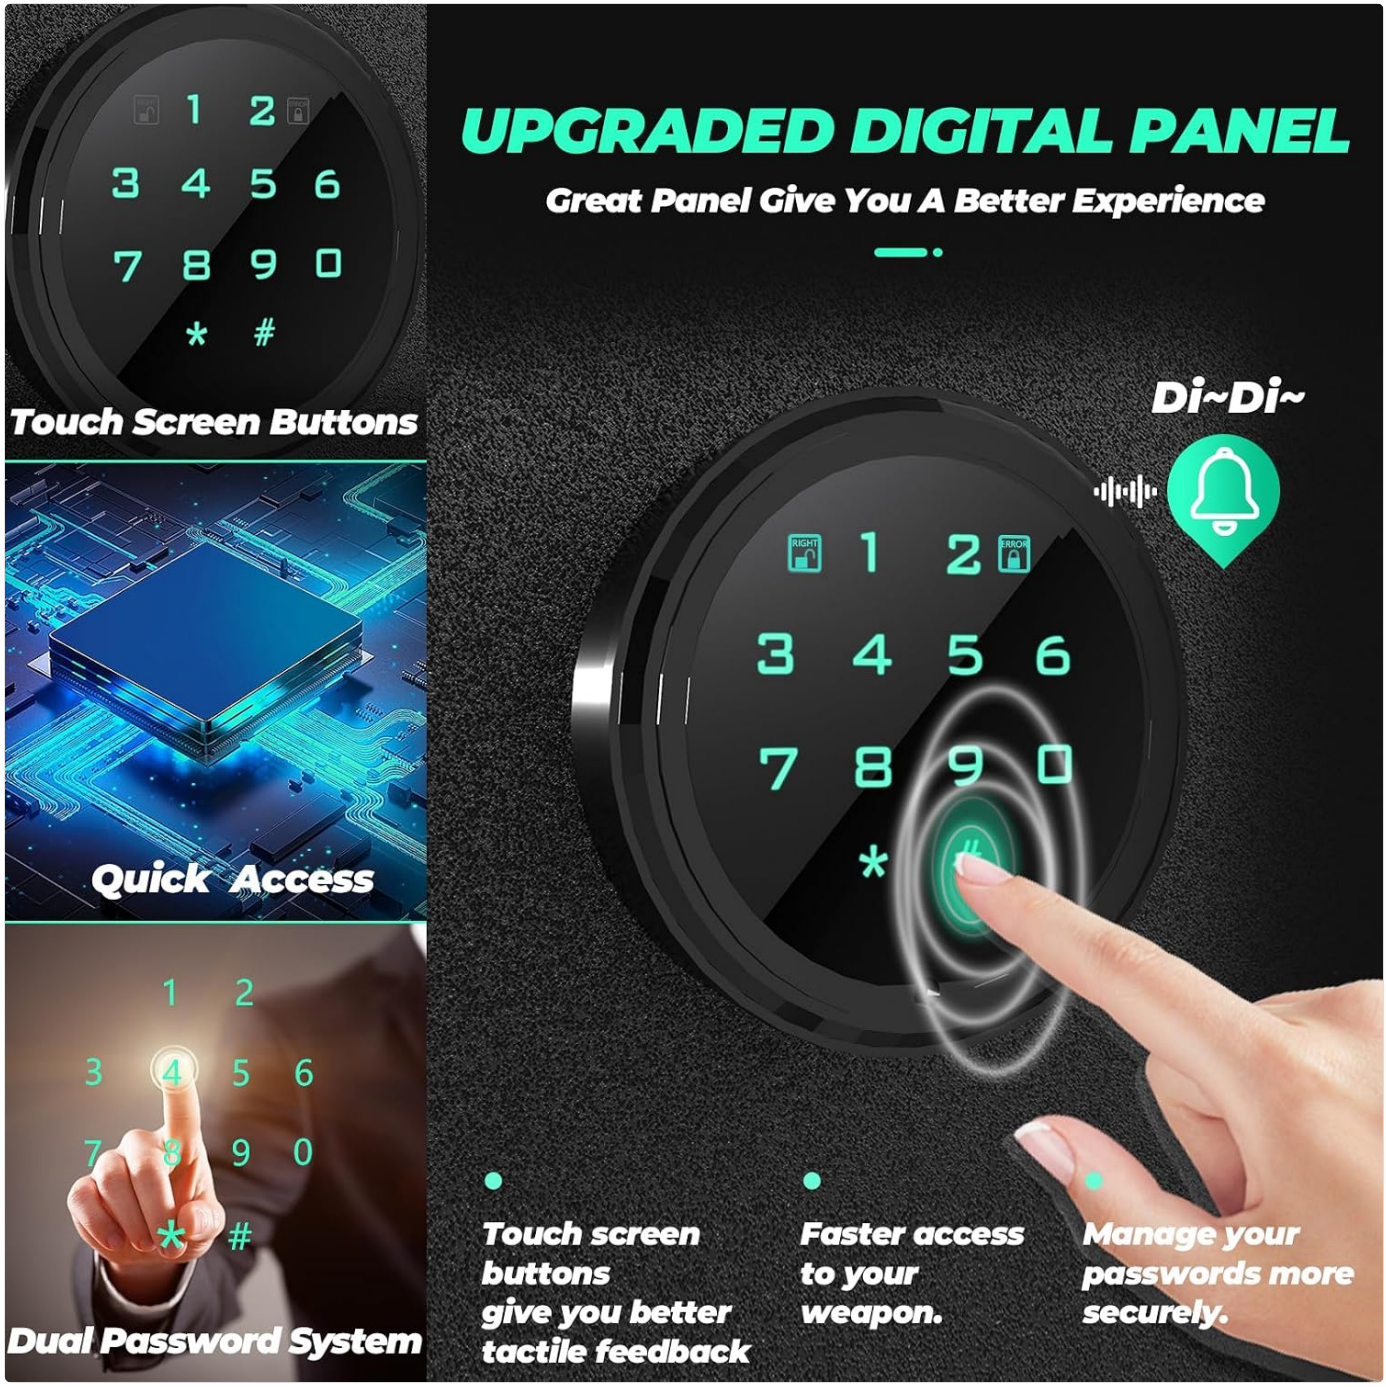


Image: A detailed view of the upgraded digital keypad, showing its touch screen buttons and highlighting quick access functionality.

6.2 Opening with Master Key

In case of electronic lock malfunction or forgotten code:

1. Locate the keyhole cover on the keypad panel.
2. Remove the cover.
3. Insert the master key and turn it.
4. Simultaneously rotate the handle clockwise to open the door.

6.3 Using the Emergency Power Box

If the internal batteries are depleted and the electronic lock does not respond:

1. Connect the emergency power box to the external power port on the keypad.
2. Enter your electronic code on the keypad.

3. Rotate the handle clockwise to open the door.

Important: Do not lock the emergency power box or the master keys inside the safe.



Image: A visual guide demonstrating the three ways to unlock the safe: using the electronic password, connecting the emergency power box, or using the physical key.

6.4 Mute Mode

To silence keypad beeps:

- Long press the '*' key on the keypad to toggle between mute and non-mute modes.

6.5 System Lock

If an incorrect password is entered 5 consecutive times, the system will lock for 5 minutes. During this period, the password cannot be used.



Image: Visual representations of the mute function, activated by long-pressing the '*' key, and the system lock feature, which engages after five incorrect password attempts.

7. Maintenance

- **Battery Replacement:** Replace batteries annually or when the low battery indicator activates. Always use new, non-rechargeable alkaline batteries.
- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Lock Mechanism:** Do not lubricate the lock mechanism. If issues arise, contact customer support.

8. Troubleshooting

- **Keypad Not Responding:**
  - Check battery levels. Replace with new alkaline batteries if low.
  - Ensure batteries are inserted with correct polarity.
  - Use the emergency power box if batteries are completely dead.
- **Forgotten Code:**
  - Use the master key to open the safe.
  - Once open, reset the code using the reset button inside the door.
- **Safe Tips Forward When Door Opens:**

- This indicates the safe is not securely mounted. It is crucial to bolt the safe to a wall or floor using the provided expansion bolts.

- **Keypad Does Not Light Up:**
  - The keypad is not designed to be backlit. Use external lighting if operating in a dark environment.
- **Safe Locked Due to Incorrect Entries:**
  - Wait for the 5-minute lockout period to expire before attempting to enter the code again.

9. Specifications

Feature	Detail
Brand	Karini
Model Number	K24-72-XL
Product Dimensions (H x W x D)	55.2" x 12.6" x 9.9"
Internal Long Gun Height	Up to 46.5"
Capacity	8.5 Cubic Feet (approx. 4-5 long guns)
Lock Type	Electronic Keypad with Key Override
Material	Alloy Steel (1.4mm cold rolled steel, 25mm door panel)
Mounting Type	Wall Mount (hardware included)
Special Features	Alarm System, Anti-Theft, Removable Shelf, LED Light, 180° Door Opening
Item Weight	71.8 pounds



Image: A detailed diagram illustrating the external dimensions of the safe, the maximum internal height for long guns, and a close-up of the 20mm thickened locking latch for enhanced security.

10. Warranty and Support

For warranty information or technical support, please contact Karini customer service through the retailer where the product was purchased or refer to the official Karini website. Please have your model number (K24-72-XL) and purchase details available when contacting support.

© 2025 Karini. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CH7SYMBG

More documents and user manuals: **https://manuals.plus/**