Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

EMAXEE 3ac94093-72d9-447e-a3b9-1b60d57ca004

EMAXEE Biometric Gun Safe Rifle Instruction Manual

Model: 3ac94093-72d9-447e-a3b9-1b60d57ca004

1. Introduction

This manual provides essential instructions for the safe and effective use of your EMAXEE Biometric Gun Safe Rifle. This safe is designed to secure firearms and valuables, featuring a biometric fingerprint reader, digital keypad, and emergency key access. It includes an upgraded control panel with an LCD screen and an internal LED light for improved visibility. The safe is constructed from 14-gauge cold-rolled steel with 5 thick bolts for enhanced security. It comes pre-assembled for immediate use.

2. Safety Information

- Always keep the safe locked when not in use to prevent unauthorized access.
- Store firearms unloaded. Keep ammunition in a separate, secure location.
- Never allow children or unauthorized individuals access to the safe, its keys, or access codes/fingerprints.
- Anchor the safe to a wall or floor using the provided hardware to prevent removal or tipping.
- Do not store the emergency keys inside the safe. Keep them in a secure, separate location.



Figure 2.1: Keep children away from firearms and the safe. The image shows a child attempting to access the safe, with an error displayed on the biometric panel and a warning symbol.

3. What's in the Box

Verify that all components are present upon unpacking:

- EMAXEE Biometric Gun Safe Rifle
- Emergency Keys (2)
- Expansion Bolts (for mounting)
- USB Emergency Power Cable
- User Manual
- Adjustable Gun Racks
- Removable Shelf

4. Specifications

Feature	Description
Brand	EMAXEE
Model Number	3ac94093-72d9-447e-a3b9-1b60d57ca004
Outer Dimensions (H x W x D)	51.97" x 17.32" x 12.2"
Internal Dimensions (H x W x D)	51.6" x 16.54" x 11.2"
Lock Type	Biometric (Fingerprint), Digital Keypad, Emergency Key
Material	14-gauge Alloy Steel
Capacity	6-8 Rifles, 3 Handguns (approximate)
Special Features	Adjustable Gun Racks, Removable Shelf, LED Light, Alarm System, Mute Mode
Mounting Type	Floor Mount, Wall Mount
Item Weight	88.6 pounds



Figure 4.1: External and internal dimensions of the safe, highlighting the 180-degree door opening angle.

5. Setup

5.1 Initial Unpacking

The EMAXEE gun safe arrives fully assembled. Carefully remove all packaging materials. Inspect the safe for any signs of damage during transit. Keep the emergency keys in a secure location outside the safe.

5.2 Battery Installation

The safe requires 4 AA alkaline batteries (not included) to power the biometric and keypad locking mechanisms and the internal LED light. The battery compartment is typically located on the inside of the door or control panel. Ensure correct polarity when inserting batteries.

5.3 Anchoring the Safe

For maximum security, it is crucial to anchor the safe to a solid surface, such as a wall stud or concrete floor. The safe features pre-drilled holes (6 on the back, 4 on the bottom) and includes expansion bolts for this purpose.

1. Choose a suitable location for the safe, ensuring it is level and stable.
2. Mark the drilling points through the pre-drilled holes on the safe's back or bottom onto the wall/floor.
3. Drill pilot holes at the marked locations using an appropriate drill bit for your wall/floor material.
4. Align the safe with the drilled holes and secure it using the provided expansion bolts. Tighten all bolts firmly.



Figure 5.1: Installation steps for anchoring the safe to a wall or floor.

5.4 Adjusting Shelves and Racks

The safe includes adjustable gun racks and a removable shelf to customize the interior storage space. The removable shelf allows for storage of longer rifles up to 51.6 inches.



Figure 5.2: Adjustable gun racks and removable shelf for flexible storage.

Video 5.1: Instructions on how to remove the shelf and use the backup power cord.

6. Operating Instructions

6.1 Unlocking Methods

Your EMAXEE safe offers four methods for unlocking:

- **Digital Password Unlock:** Enter your programmed numerical password on the keypad.
- **Biometric Unlock:** Scan your registered fingerprint on the sensor.
- **Emergency Key Unlock:** Use one of the provided emergency keys.
- **Backup Power Cord:** In case of battery depletion, connect the USB emergency power cable to an external power source and then use the digital password or biometric unlock.

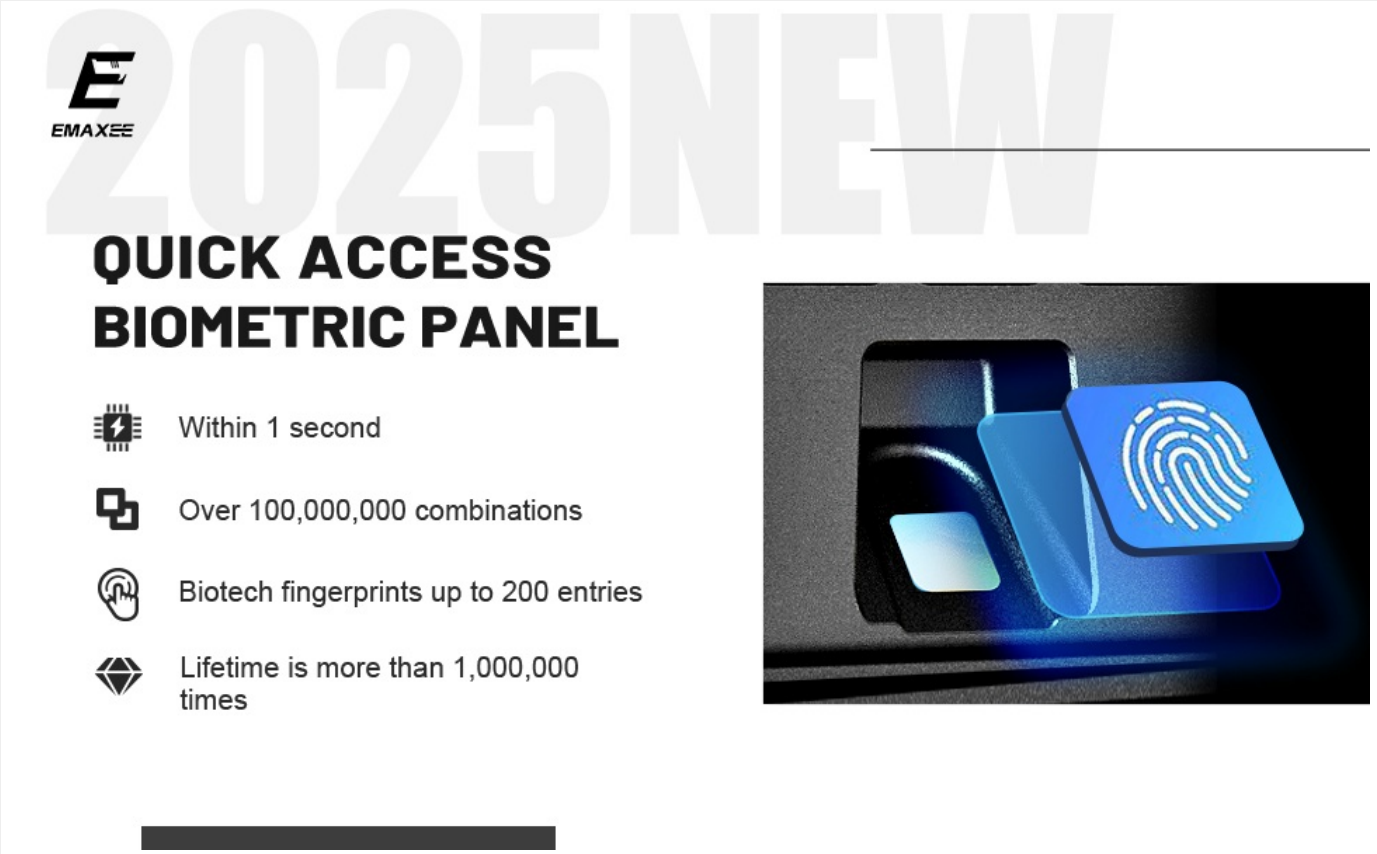


Figure 6.1: Overview of the four unlocking methods.

6.2 Setting Your Password and Fingerprint

Refer to the video below for detailed instructions on how to set up your digital password and register fingerprints. The safe can store up to 200 fingerprints.

Video 6.2: Guide on how to set your password and register fingerprints.

6.3 Alarm System and Mute Mode

The safe is equipped with an alarm system and a mute function.

- **Alarm System:** The safe will sound an alarm for 60 seconds after 3 incorrect password entries or 6 incorrect fingerprint attempts. A vibration alarm can also be enabled, which will trigger if the safe is shaken, tapped, or violently tampered with.
- **Mute Mode:** To operate the safe silently, activate mute mode. This will disable audible feedback for button presses and unlocking. To toggle mute mode, long-press the "1" key on the keypad for approximately 5 seconds.



Figure 6.3: Visual representation of the alarm and mute functions.

Video 6.4: Demonstration of how to use the alarm and mute functions.

7. Maintenance

7.1 Battery Replacement

Replace the 4 AA alkaline batteries annually or immediately when the low battery indicator appears on the LCD screen. Depleted batteries can prevent electronic access to the safe.

7.2 Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish. Keep the fingerprint sensor clean and free of debris for optimal performance.

7.3 Regular Function Check

Periodically test all unlocking methods (fingerprint, password, and emergency key) to ensure they are functioning correctly. This helps confirm the safe is ready for use when needed.

8. Troubleshooting

- **Safe does not open with fingerprint/password:**
  - Check if the batteries are depleted. Replace with new AA alkaline batteries if necessary.
  - Ensure your finger is clean and dry when using the biometric scanner. Try re-registering your fingerprint.
  - Verify the digital password entered is correct.
  - If electronic access fails, use the emergency key or connect the USB emergency power cable.
- **Alarm triggers unexpectedly:**
  - Check if the vibration alarm is enabled. If so, ensure the safe is on a stable surface and not subject to accidental

bumps.
    - Review the alarm settings in your user manual.
- **LED light not working:**
    - Check the battery level of the safe.
    - Ensure the LED light module is properly seated or connected.
- **Lost emergency keys:**
    - Contact EMAXEE customer support with your product model and serial number for assistance with replacement keys. Do not attempt to force the lock.

9. Warranty and Support

Your EMAXEE Biometric Gun Safe Rifle is typically covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. A 30-day easy return policy is generally available for this product. For technical support, warranty claims, or assistance with replacement parts, please contact EMAXEE customer service. Contact information can usually be found on the official EMAXEE website or on the documentation provided with your safe.
Customer Support: Refer to the contact details provided in your product packaging or visit the official EMAXEE website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CH9Q8L4R

More documents and user manuals: **https://manuals.plus/**