ONN 65-Inch Class 4K HDR10+ Smart TV

ONN 65-Inch 4K HDR10+ Smart TV User Manual

Model: 65-Inch Class 4K HDR10+ Smart TV

Introduction

Welcome to the user manual for your new ONN 65-Inch Class 4K HDR10+ Smart TV. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your television. Your ONN Smart TV is equipped with Roku, offering seamless access to a vast library of streaming content, and features 4K resolution with HDR10+ technology for a vibrant and immersive viewing experience. It also supports popular voice assistants like Alexa and Google Assistant, and is compatible with HomeKit for integrated smart home control.



Image: ONN 65-Inch 4K HDR10+ Smart TV shown with its included wall mount.

Setup

1. Unpacking and Placement

Carefully remove all components from the packaging. Ensure you have the TV, remote control, power cable, and the included wall mount kit. Place the TV on a stable, flat surface or prepare for wall mounting.

2. Wall Mount Installation

The ONN 65-Inch Smart TV comes with a free wall mount for convenient installation. Follow the detailed instructions provided with the wall mount kit for secure and proper installation. Ensure the wall can support the TV's weight of approximately 39.9 pounds.



Image: Various components of the wall mount kit, including brackets, screws, and a level.



Image: An illustration demonstrating the steps for installing the ultra-slim TV wall mount.

3. Connecting Power and Devices

Connect the power cable to the TV and then to a power outlet. For external devices, use the available ports:

- **HDMI:** 3 ports for high-definition devices (e.g., gaming consoles, Blu-ray players).
- **Composite:** 1 port for older devices.
- **USB:** 1 port for media playback from USB drives.
- **Optical:** 1 port for digital audio output to soundbars or receivers.
- **Coaxial/Cable:** 1 port for antenna or cable TV connection.
- **Headphone:** 1 port for private listening.

4. Network Connection

Connect your TV to your home Wi-Fi network during the initial setup process. This enables access to streaming services and smart features.

5. Initial Setup with Roku

Follow the on-screen prompts to complete the initial setup. You will be guided to connect to Wi-Fi, activate your Roku account, and customize your home screen. The Roku mobile app can also be used for an easy setup experience.

Operating

1. Remote Control Functions

The included remote control provides intuitive navigation. Use the directional pad and OK button to select options. Dedicated buttons for popular streaming services (Netflix, Apple TV, Paramount+, HBO Max) offer quick access.

2. Navigating the Roku Interface

The Roku home screen provides a customizable interface for all your entertainment. Easily access Live TV, search for content, browse featured free options, or visit the Streaming Store to add new channels.



Image: The ONN Roku TV home screen displaying various streaming service icons and input options.

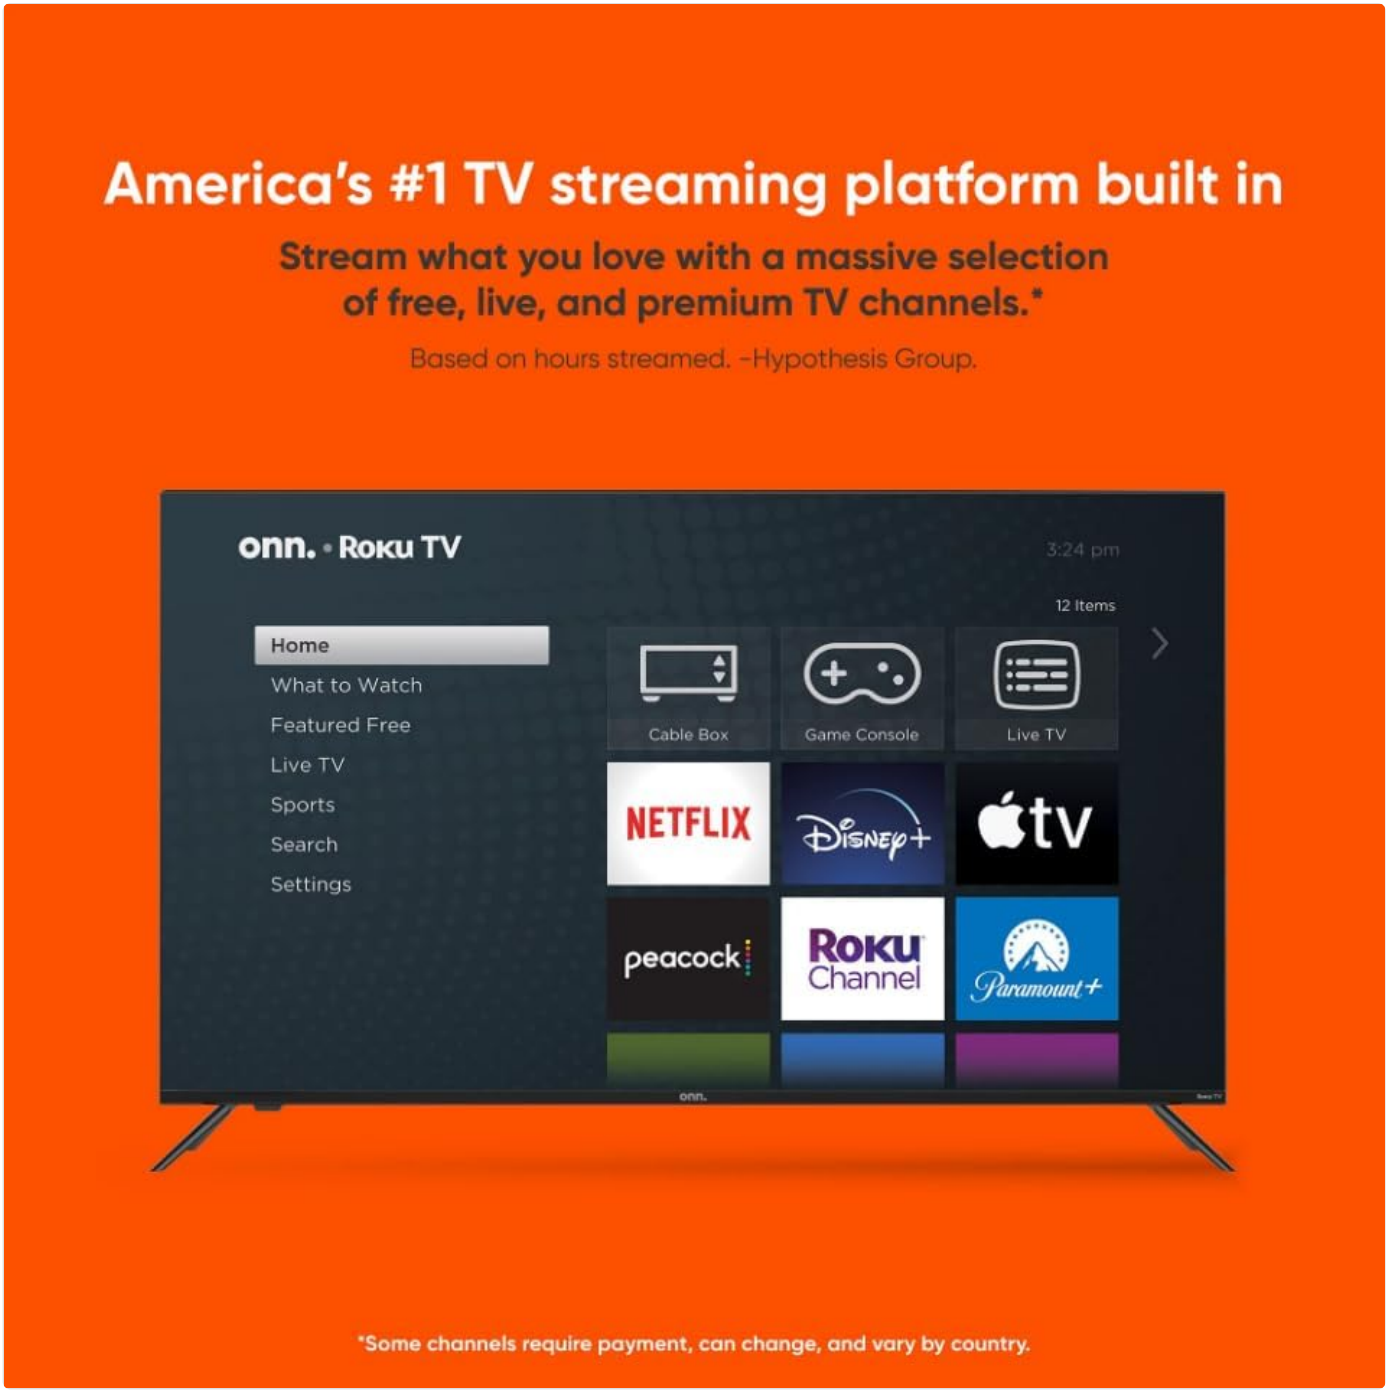


Image: The ONN Roku TV interface highlighting the vast selection of free, live, and premium TV channels available.

3. Streaming Content

Enjoy instant access to a wide selection of apps from top streaming services like Netflix, YouTube, Hulu, Prime Video, and many more directly on your TV.

4. Voice Control and Smart Home Integration

Your ONN Roku TV is compatible with Amazon Alexa, Google Assistant-enabled, and HomeKit devices. Use voice commands to find movie titles, launch or change channels, and switch inputs.



Image: Graphics indicating compatibility with Apple AirPlay, Apple Home, Alexa, and Google Home.

5. Mobile App Usage

Control your ONN Roku TV with the free Roku mobile app for iOS or Android. The app allows for quick search, voice control, private listening through headphones, and casting photos or videos from your phone.

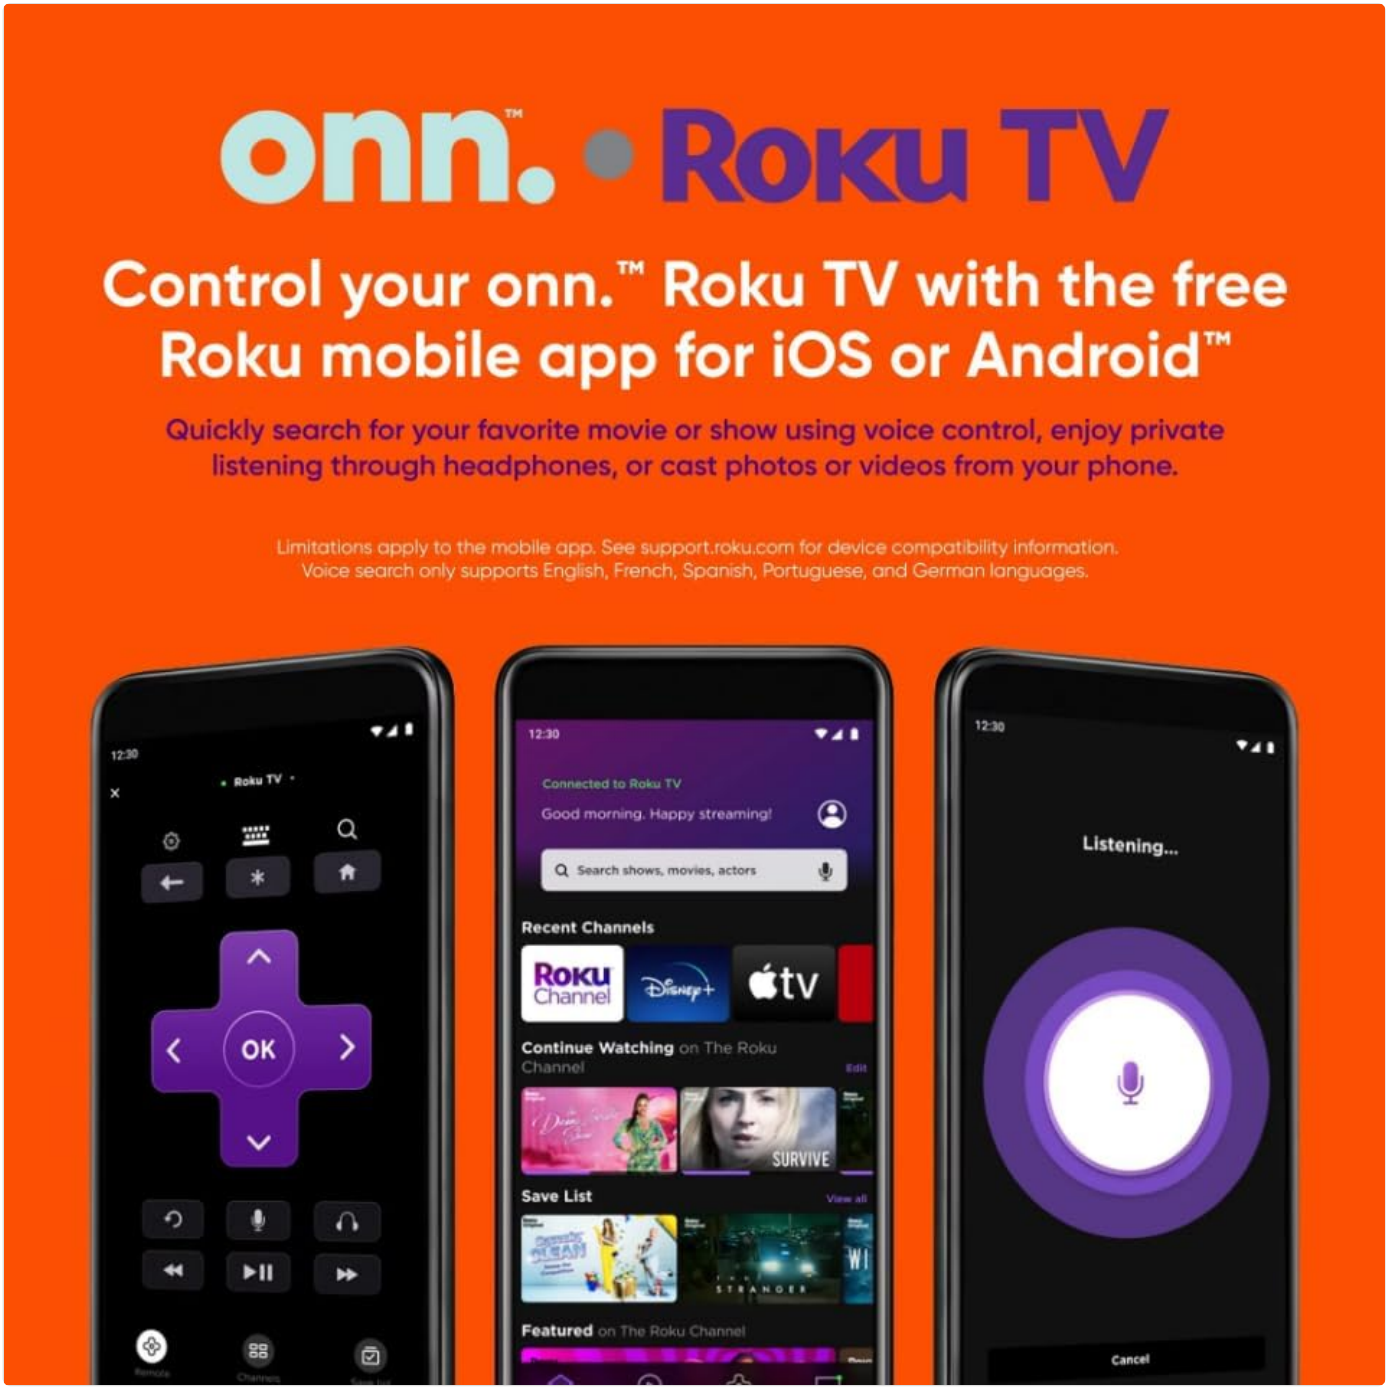


Image: Three smartphones displaying different screens of the Roku mobile app, including remote control, channel browsing, and voice search.

6. Picture and Sound Settings

Adjust picture settings (brightness, contrast, color, sharpness) and sound settings (volume, audio mode) through the TV's menu to optimize your viewing experience. The HDR10+ technology enhances colors and contrast for a dynamic picture.



Image: A split screen on a TV demonstrating the difference between HDR10 High Dynamic Range and Standard Dynamic Range, highlighting richer colors.

Maintenance

To ensure the longevity and optimal performance of your ONN Smart TV, follow these maintenance guidelines:

- **Cleaning the Screen:** Gently wipe the screen with a soft, dry microfiber cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Avoid harsh chemicals or abrasive materials.
- **Cleaning the Body:** Use a soft, dry cloth to clean the TV's frame and stand.
- **Software Updates:** Ensure your TV's software is up-to-date. Roku TVs typically update automatically when connected to the internet, but you can manually check for updates in the Settings menu.
- **Ventilation:** Ensure proper ventilation around the TV. Do not block the ventilation openings on the back of the TV.
- **Power Management:** Unplug the TV from the power outlet during lightning storms or when it will be left unattended for long periods.

Troubleshooting

If you encounter issues with your ONN Smart TV, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
No Power	Power cable disconnected; power outlet issue.	Ensure power cable is securely connected to TV and outlet. Try a different outlet.
No Picture/Sound	Incorrect input selected; external device issue; cable connection issue.	Press the 'Input' button on the remote to cycle through inputs. Check all cable connections (HDMI, Composite). Ensure external devices are powered on.
No Wi-Fi Connection	Incorrect password; router issue; TV too far from router.	Verify Wi-Fi password. Restart your router and modem. Move TV closer to router or use a Wi-Fi extender.
Remote Not Responding	Low batteries; obstructed signal.	Replace remote batteries. Ensure no obstructions between remote and TV's IR sensor.
Apps Not Loading/Crashing	Network issue; app specific issue; low memory.	Check internet connection. Restart the TV. Remove and re-add the problematic app.

If problems persist after trying these solutions, please refer to the Support section for further assistance.

Specifications

- **Brand:** ONN
- **Model:** 65-Inch Class 4K HDR10+ Smart TV
- **Screen Size:** 65 Inches (166 cm visible diagonal)
- **Resolution:** 4K (3840 x 2160)
- **Display Technology:** LED
- **Refresh Rate:** 60 KHz
- **HDR Support:** HDR10+
- **Smart TV Platform:** Roku TV
- **Connectivity:** Wi-Fi, 3 HDMI, 1 Composite, 1 USB, 1 Optical, 1 Coaxial/Cable, 1 Headphone
- **Audio:** Dolby Audio, 2 built-in 8W speakers
- **Dimensions (Product):** 10"D x 49"W x 32"H
- **Item Weight:** 39.9 pounds
- **Special Features:** Works with Alexa & Google Assistant, Mobile App Control



Image: ONN branding with a 4K UHD logo, stating that 4K UHD brings out lifelike color, texture, and detail.

Warranty

This product is sold as an Amazon Renewed item. For specific warranty details and coverage, please refer to the Amazon Renewed program terms and conditions or contact the seller directly. Typically, Amazon Renewed products come with a minimum 90-day Amazon Renewed Guarantee.

Support

For further assistance, technical support, or service inquiries, please refer to the following resources:

- **Online Support:** Visit the official ONN or Roku support websites for FAQs, troubleshooting guides, and product registration.
- **Customer Service:** Contact the customer service department of the retailer where you purchased the TV, or refer to the contact information provided in your product packaging.
- **Roku Support:** For Roku-specific issues, visit support.roku.com.

© 2025 ONN. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question