ALLIMITY FORMULER-2-V3-OSVV

ALLIMITY GTV-IR1 V3 Replacement Remote Control User Manual

Model: FORMULER-2-V3-OSVV

1. Introduction

Thank you for choosing the ALLIMITY GTV-IR1 V3 Replacement Remote Control. This remote is designed to provide seamless control for various Formuler and Dreamlink set-top boxes. It offers a direct replacement solution without the need for complex setup or programming for basic functions. This manual will guide you through the installation, operation, and maintenance of your new remote control.

2. Product Overview

The ALLIMITY GTV-IR1 V3 remote control is a durable and ergonomic device made of ABS materials, designed for comfortable handling and long-lasting use. It serves as an ideal replacement for lost or damaged original remote controls.

2.1 Key Features

- Direct replacement for Formuler & Dreamlink Boxes.
- Compatible with models including Formuler Z7+ 5G, Z8, Z Alpha, ZX, GTV, Z8 PRO, Z+ Neo.
- No setup or programming required for immediate use (after battery insertion).
- Constructed from durable ABS materials for comfort and longevity.

2.2 Remote Control Layout





Figure 2.1: Front view of the ALLIMITY GTV-IR1 V3 remote control, showing all buttons including TV Control, navigation, number pad, and media controls.



Figure 2.2: Image illustrating the ALLIMITY GTV-IR1 V3 replacement remote on the left and an original Formuler V3 remote on the right, highlighting their similar appearance and functionality.

3. Setup

3.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

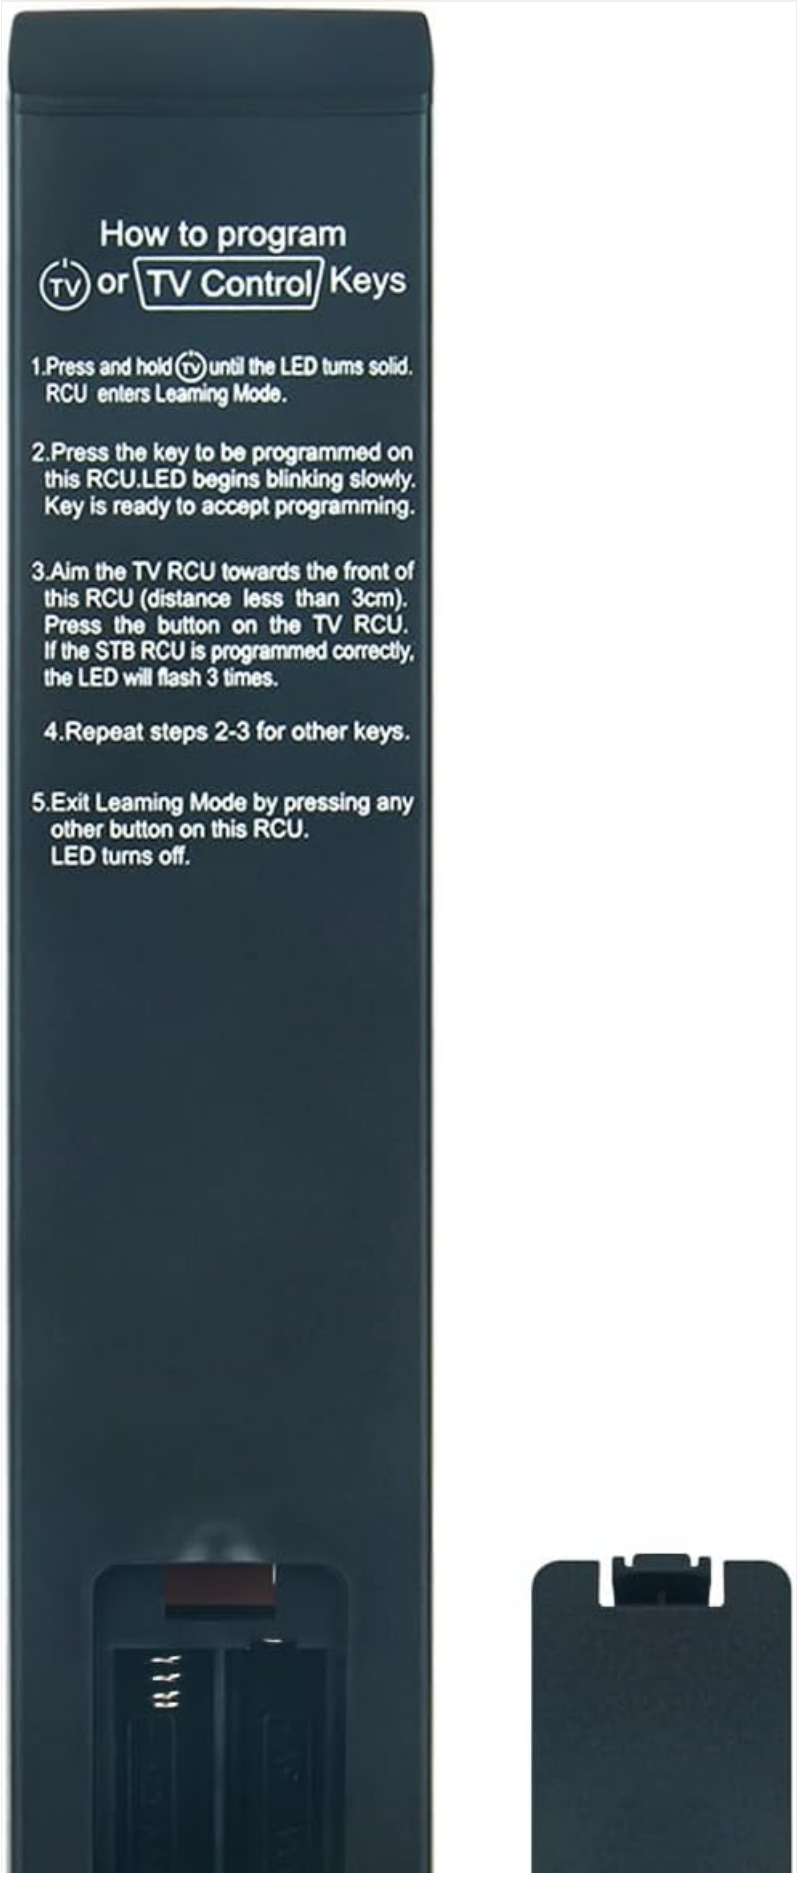




Figure 3.1: Back view of the remote control with the battery compartment open, showing where to insert two AAA batteries.

3.2 Programming TV Control Keys (Optional)

While the remote works out of the box for Formuler/Dreamlink boxes, you can program the "TV Control" keys (OK, Source, Vol-, Vol+) to control your television. This feature allows you to consolidate control of your TV's basic functions onto this remote.

1. Press and hold the **TV** button (located above the TV Control section) until the LED light on the remote turns solid. This indicates the remote has entered Learning Mode.
2. Press the key on the ALLIMITY remote that you wish to program (e.g.,**Vol+**). The LED will begin blinking slowly.
3. Aim your original TV remote control towards the front of the ALLIMITY remote (distance less than 3cm). Press the corresponding button on your TV remote (e.g., TV's Volume Up button).
4. If the programming is successful, the LED on the ALLIMITY remote will flash 3 times.
5. Repeat steps 2-3 for other TV control keys you wish to program.
6. To exit Learning Mode, press any other button on the ALLIMITY remote, or wait for the LED to turn off automatically.

4. Operating Instructions

Once batteries are installed, the remote is ready for immediate use with compatible Formuler and Dreamlink boxes. Point the remote directly at your set-top box and press the desired buttons.

4.1 Basic Functions

- **Power (STB)**: Turns the set-top box on or off.
- **OK**: Confirms selections or opens menus.
- **Navigation Arrows (Up, Down, Left, Right)**: Navigate through menus and options.
- **Vol+/-**: Adjusts the volume.
- **Ch/Pg+/-**: Changes channels or pages.
- **Number Pad (0-9)**: Direct channel entry.
- **Home**: Returns to the main menu.
- **Back**: Goes back to the previous screen.
- **Info**: Displays program information.
- **Guide**: Opens the electronic program guide.
- **Media Controls (Play, Pause, Stop, Rewind, Fast Forward)**: Control media playback.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Functionality varies depending on the application or menu.

5. Maintenance

Proper maintenance will ensure the longevity and optimal performance of your remote control.

- **Cleaning**: Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage**: If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store in a cool, dry place.
- **Avoid Damage**: Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

6. Troubleshooting

If you experience issues with your ALLIMITY GTV-IR1 V3 remote control, please refer to the following common solutions:

Problem	Possible Cause	Solution
Remote is not working.	Batteries are dead or incorrectly inserted.	Replace with new AAA alkaline batteries, ensuring correct polarity (+/-).
Remote has limited range or intermittent response.	Low batteries; Obstruction between remote and device; Remote not aimed correctly.	Replace batteries. Ensure a clear line of sight to the set-top box. Aim the remote directly at the device.
TV control keys are not working.	TV control keys not programmed or programming failed.	Refer to Section 3.2 "Programming TV Control Keys" and re-attempt programming. Ensure the original TV remote is working and close enough during programming.
Some buttons do not respond.	Button stuck or internal issue.	Gently press the button multiple times. If the issue persists, contact customer support.

7. Specifications

Feature	Detail
Model Number	FORMULER-2-V3-OSVV
Brand	ALLIMITY
Compatible Devices	Formuler Z7+ 5G, Z8, Z Alpha, ZX, GTV, Z8 PRO, Z+ Neo; Dreamlink Boxes
Power Source	2 x AAA Alkaline Batteries (not included)
Product Dimensions	6 x 2 x 0.6 inches
Item Weight	2.4 ounces
Material	ABS
Color	Black

8. Warranty and Support

Your ALLIMITY GTV-IR1 V3 remote control has been strictly inspected before being sent out to ensure quality and functionality.
If you have any questions or encounter any issues with your remote control, please do not hesitate to contact us as early as possible. We are committed to providing excellent customer service and promise to reply within 24 hours to address your concerns.
Please refer to your purchase documentation or the seller's information for specific contact details.

© 2023 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question