Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY MD81889

ALLIMITY Replacement Remote Control User Manual

For Medion TV Models MD81889, MD81888, MSN:5002 7604

1. Introduction

This manual provides instructions for the ALLIMITY Replacement Remote Control, designed to operate various Medion TV models. This remote control is a direct replacement and offers full functionality without the need for complex programming.

2. Setup: Battery Installation

To begin using your ALLIMITY replacement remote control, you must first install the batteries. No programming is required; simply insert the batteries, and the remote will be ready for use with compatible Medion TV models.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.





Figure 1: Back view of the remote control, illustrating the battery compartment location.

3. Operating Instructions

The ALLIMITY replacement remote control is designed to replicate the functions of your original Medion TV remote. Point the remote control directly at your television's infrared receiver for optimal performance.

3.1. Button Layout and Functions



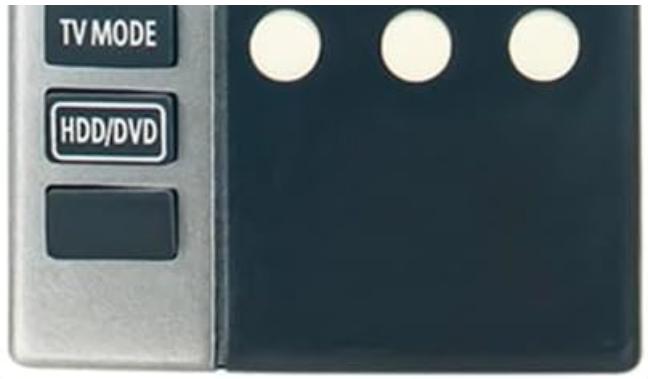


Figure 2: Front view of the ALLIMITY replacement remote control, displaying all functional buttons.

- **Power Button ( )**: Turns the TV on or off.
- **TV/DVD/SAT/AUX/NAVI Buttons**: Selects the input source or device mode.
- **Number Buttons (0-9)**: Directly selects channels or enters numerical data.
- **Volume Up/Down (+/-)**: Adjusts the audio volume.
- **Channel Up/Down (P+/P-)**: Changes TV channels.
- **Mute Button ( )**: Mutes or unmutes the TV audio.
- **Navigation Buttons (Up, Down, Left, Right, ENTER)**: Navigates through menus and confirms selections.
- **MENU Button**: Accesses the TV's main menu.
- **EXIT Button**: Exits the current menu or function.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)**: Controls media playback on compatible devices (e.g., DVD).
- **DISPLAY/GUIDER/TOP MENU/EPG Buttons**: Accesses specific TV functions like display information, program guide, or top menu.
- **SOURCE/AUDIO/SUBTITLE/ANGLE Buttons**: Selects input sources, audio tracks, subtitle options, or camera angles.

4. Compatibility

This ALLIMITY replacement remote control is compatible with the following Medion TV models:

- MD81889
- MD81888
- MSN:5002 7604
- MSN50027604

The remote is designed to function immediately with these models upon battery installation, requiring no additional setup.

5. Specifications

Brand	ALLIMITY
Compatible Devices	Medion TV (MD81889, MD81888, MSN:5002 7604, MSN50027604)
Connectivity Technology	Infrared
Battery Type	AAA Alkaline (not included)

Maximum Range	10 Meters
Item Weight	0.06 Kilograms
Product Dimensions	4 x 12 x 0.3 cm

6. Troubleshooting

- **Remote Not Responding:**
  - Ensure batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA alkaline batteries.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Ensure you are within the maximum operating range (10 meters) and pointing the remote directly at the TV.
- **Certain Buttons Not Working:**
  - Verify that the button is applicable to your specific TV model or current input source.
  - Clean the remote control buttons and surface to ensure no debris is interfering with button presses.

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

8. Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.

© 2025 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CHM5QD4Y

More documents and user manuals: **https://manuals.plus/**