Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Csasan J90 Pro

Csasan Wireless Earbuds J90 Pro Instruction Manual

Model: J90 Pro | Brand: Csasan

Introduction

The Csasan J90 Pro Wireless Earbuds are designed to provide a superior audio experience with advanced features for daily use and active lifestyles. This manual provides detailed instructions on setting up, operating, and maintaining your earbuds to ensure optimal performance.



Image: Csasan J90 Pro Wireless Earbuds in their open charging case, displaying the LED power indicator.

What's in the Box

- 2x Wireless Headphones (L/R)
- 1 x Fast Charging Case
- 3 x Pairs of Earplugs (S, M, L)
- 1 x Type-C Charging Cable
- 1 x Instruction Manual



Image: The complete package contents of the Csasan J90 Pro earbuds, neatly arranged.

Setup

Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the provided Type-C charging cable to the charging case and a power source. The LED digital display on the case will show the battery percentage, indicating charging progress. A full charge takes approximately 1.5 hours.



Image: The charging case with earbuds, highlighting the 40-hour total playtime and 1.5-hour fast charging capability.

Bluetooth Pairing

1. Ensure the earbuds are charged and inside the charging case.
2. Open the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings.
4. Search for "J90 Pro" in the list of available devices and select it to connect.
5. Once connected, the earbuds are ready for use. They will automatically reconnect to your device when the case is opened for subsequent uses.

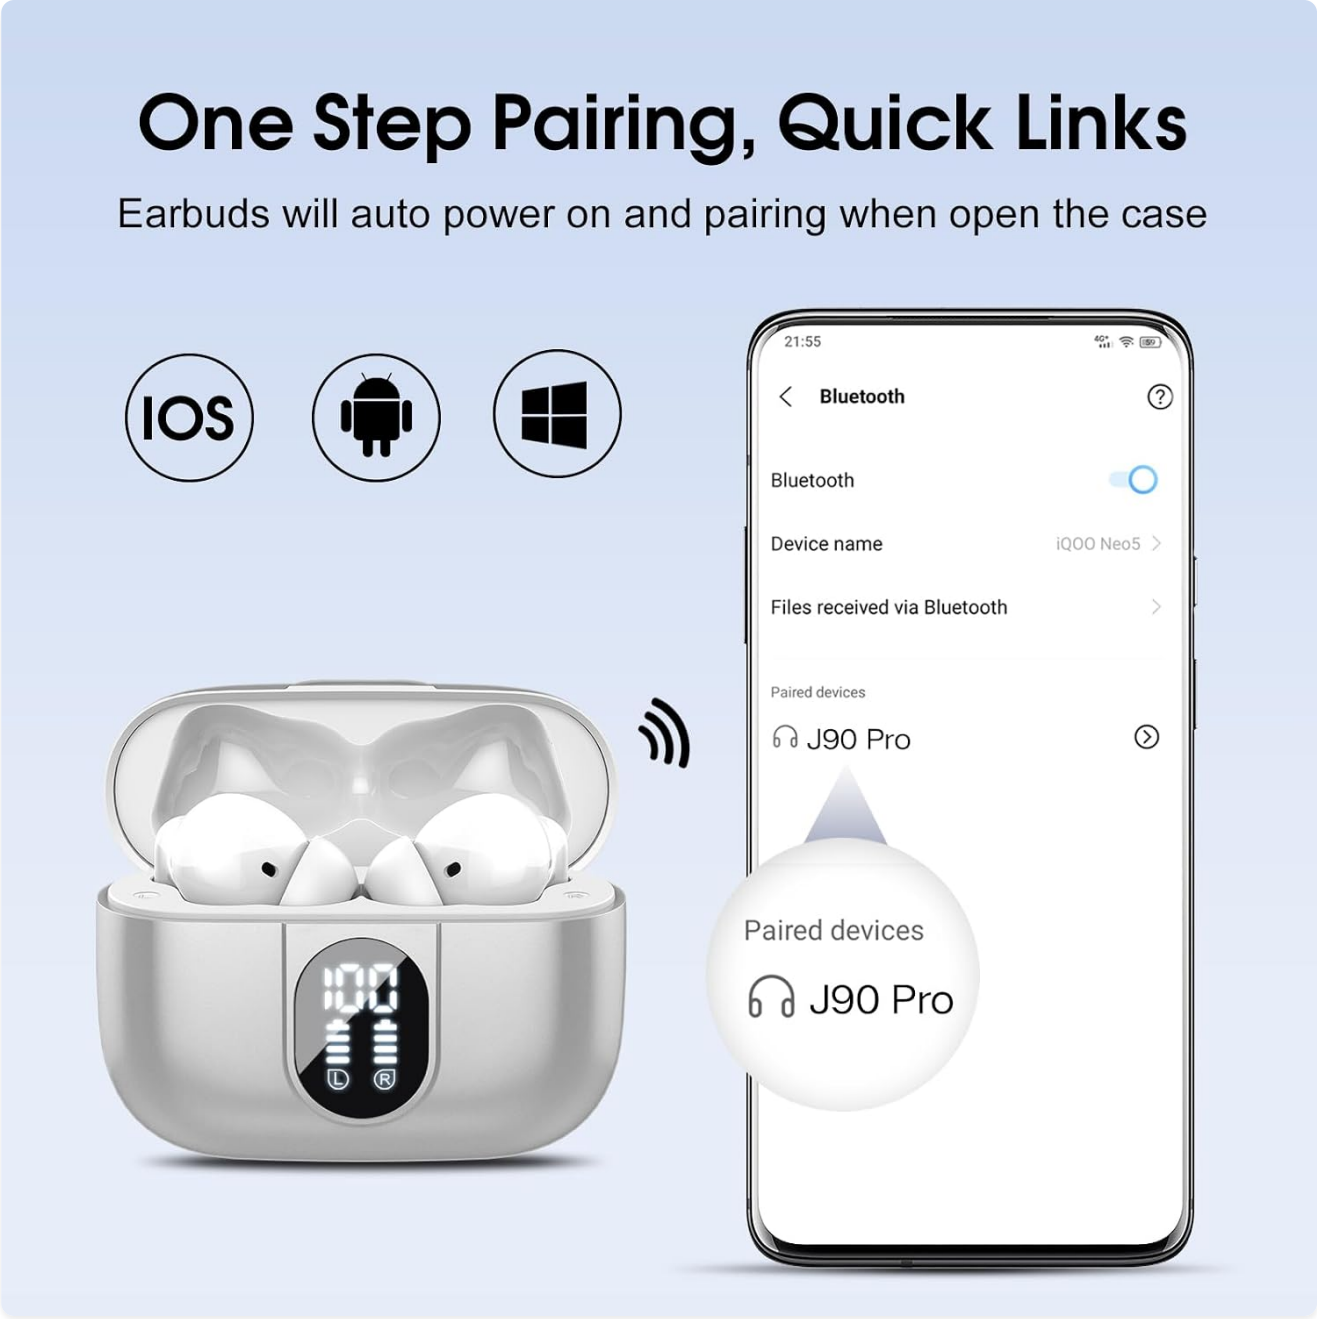


Image: A visual representation of the one-step auto-pairing process for the J90 Pro earbuds with a mobile device.

Operating

Touch Controls

The J90 Pro earbuds feature sensitive touch control panels on both the left and right earbuds for convenient management of music and calls.

Action	Left Earbud	Right Earbud
Play/Pause Music	Tap Twice	Tap Twice
Answer/End Call	Tap Once	Tap Once
Reject Call	Press and Hold 2s	Press and Hold 2s

Action	Left Earbud	Right Earbud
Volume Up	-	Tap Once
Volume Down	Tap Once	-
Next Track	-	Press and Hold 2s
Previous Track	Press and Hold 2s	-
Activate Digital Assistant	Tap 3 Times	Tap 3 Times



Image: Detailed illustration of the smart touch controls available on the J90 Pro earbuds.

Sound Quality and Noise Cancellation

These earbuds feature 13mm large composite diaphragms and AAC codec for professional-grade HiFi stereo sound. Equipped with ENC noise reduction dual microphones, they passively cancel up to 80% of background noise, ensuring crystal-clear calls and an immersive listening experience.



Image: An exploded view of the earbud's internal structure, highlighting the 13mm super large dynamic speaker for powerful stereo sound.



Image: A user enjoying the earbuds, illustrating the ENC noise-cancelling microphone's effectiveness in reducing background noise by up to 40dB.

Maintenance

Waterproofing (IP7)

The J90 Pro earbuds are IP7 waterproof, meaning they are protected against immersion in water up to 1 meter for up to 30 minutes. This makes them suitable for use during workouts, in rainy conditions, or by the pool. However, they are not designed for swimming or prolonged submersion.

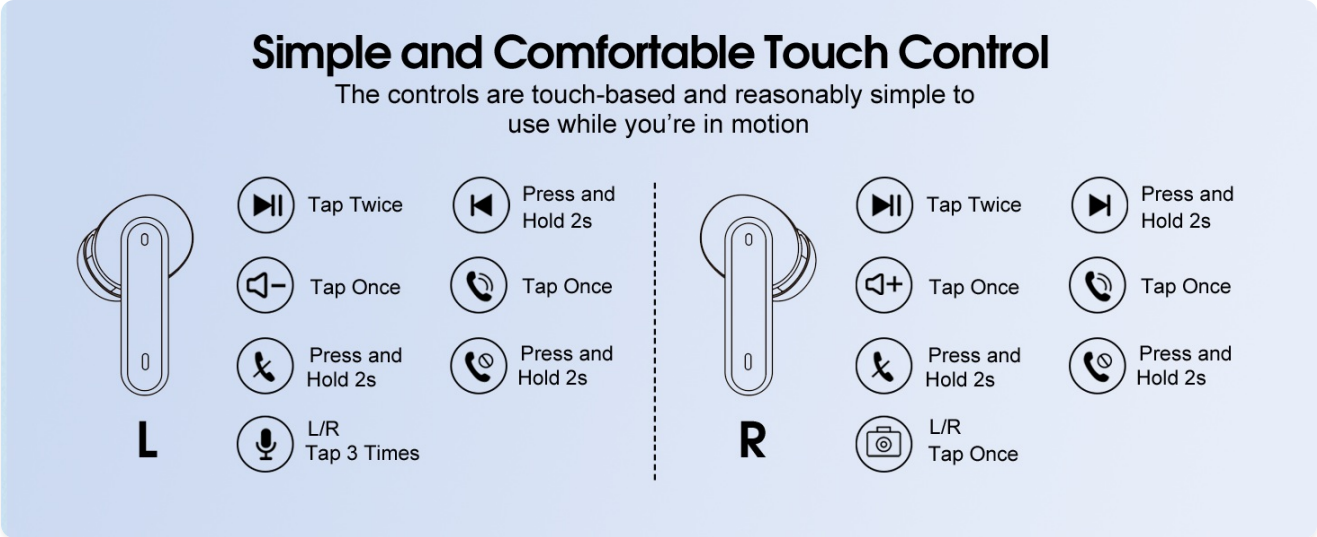


Image: A person demonstrating the IP7 waterproof capability of the earbuds during an outdoor activity.

Cleaning and Storage

To maintain optimal performance and hygiene, regularly clean your earbuds with a soft, dry cloth. Avoid using abrasive materials or harsh chemicals. Store the earbuds in their charging case when not in use to protect them and ensure they remain charged.

Troubleshooting

- **Earbuds not pairing:** Ensure Bluetooth is enabled on your device. Make sure the earbuds are charged and within 10 meters of your device. Try resetting the earbuds by placing them back in the case and closing it for a few seconds, then reopening.
- **Only one earbud working:** Place both earbuds back into the charging case, close the lid, and wait for a few seconds. Reopen the case and try pairing again. Ensure both earbuds have sufficient charge.
- **Poor sound quality:** Check the ear tip size for a secure fit. A proper seal is crucial for optimal sound. Ensure the earbuds are clean and free from debris.
- **Charging issues:** Verify the Type-C cable is securely connected to both the case and the power source. Check if the charging port is clean.

Specifications

Feature	Detail
Model Name	J90 Pro
Bluetooth Version	5.3
Audio Driver Size	13mm
Total Playtime	Up to 40 Hours (with charging case)

Feature	Detail
Single Charge Playtime	6-8 Hours
Charging Time	1.5 Hours
Water Resistance	IP7 Waterproof
Noise Control	ENC Noise Cancelling Mics
Control Method	Touch
Wireless Range	10 Meters

Warranty and Support

Csasan offers a **2-year warranty** for the J90 Pro Wireless Earbuds. For any product inquiries, technical assistance, or warranty claims, please contact our customer service. We aim to provide a **24-hour customer service response** to ensure your satisfaction.
For further assistance, please visit the official Csasan Store on Amazon:Csasan Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CHRB4PDF

More documents and user manuals: **https://manuals.plus/**