PowerLocus P19

PowerLocus P19 Wireless Headphones User Manual

Model: **P19** | Brand: **PowerLocus**

1. Introduction

Thank you for choosing the PowerLocus P19 Wireless Bluetooth Headphones. This manual provides detailed instructions on how to set up, operate, and maintain your headphones to ensure optimal performance and longevity. Please read this manual carefully before using the product.

2. Package Contents

Ensure all items listed below are present in your package:

- 1x PowerLocus P19 Wireless Headphones
- 1x 3.5mm Audio Cable
- 1x USB-C Charging Cable
- 1x Elegant Hard Shell Carry Case

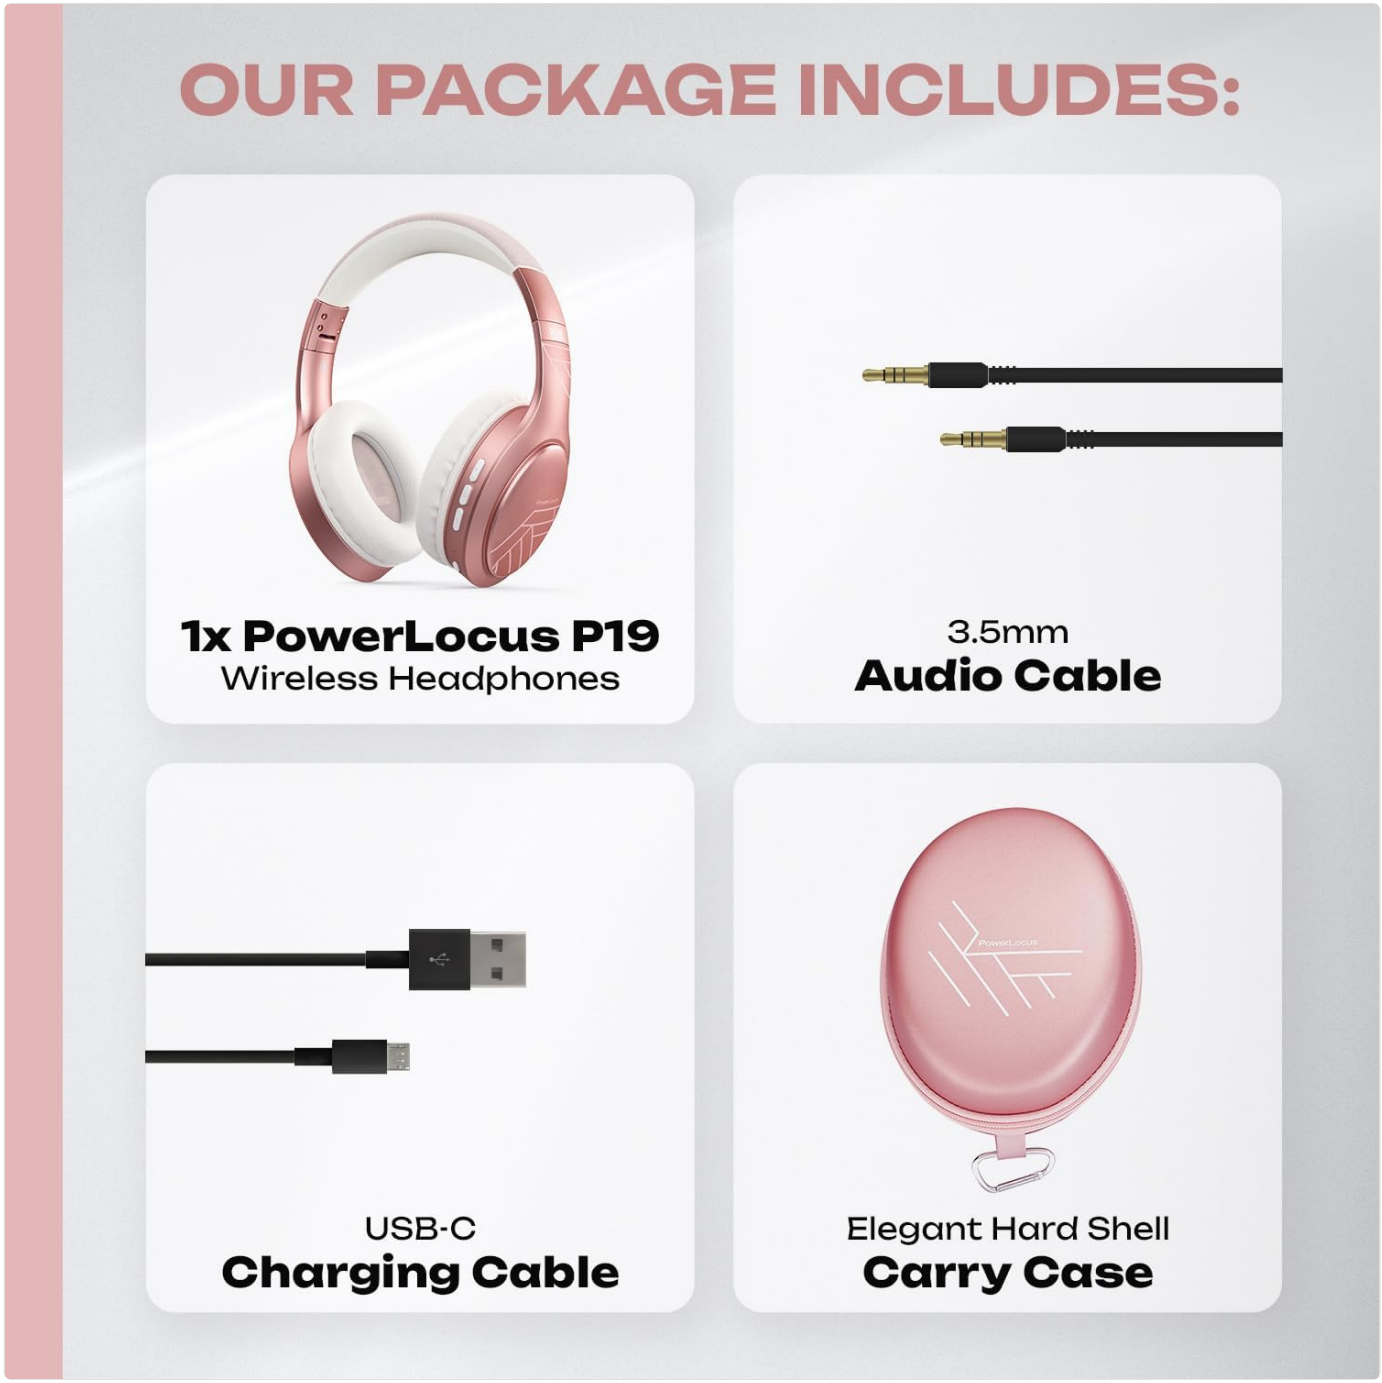


Image: Contents of the PowerLocus P19 headphone package, including the headphones, audio cable, USB-C cable, and carry case.

3. Product Overview

The PowerLocus P19 headphones are designed for comfort and superior audio quality. Familiarize yourself with the main components and controls:



Image: A front-facing view of the PowerLocus P19 Wireless Headphones in Rose Gold.

Key Features:

- **Hi-Fi Stereo Sound:** Experience rich and clear audio with deep bass.
- **3 EQ Modes:** Customize your listening experience with Pop, Bass, and Vocal modes.
- **HD Microphones:** Integrated microphone for clear calls and online meetings.
- **Stable Wireless Connectivity:** Bluetooth 5.3 for reliable connection.

- **Foldable Design:** Easy to store and transport with the included carry case.
- **Long Playtime:** Up to 60 hours of battery life on a single charge.
- **Wired Mode:** Use with the 3.5mm audio cable when battery is low or for non-Bluetooth devices.
- **Soft Memory Foam Earmuffs:** Designed for comfortable, extended wear.
- **Fabric Headband & Snug Pad:** Enhances comfort and fit.
- **Extendable Sides:** Adjustable to fit various head sizes.



Image: An infographic highlighting the Hi-Fi Stereo Sound, 3 EQ Modes, HD Microphones, Stable Wireless Connectivity, Foldable Design, Long Playtime, and Wired Mode features of the P19 headphones.

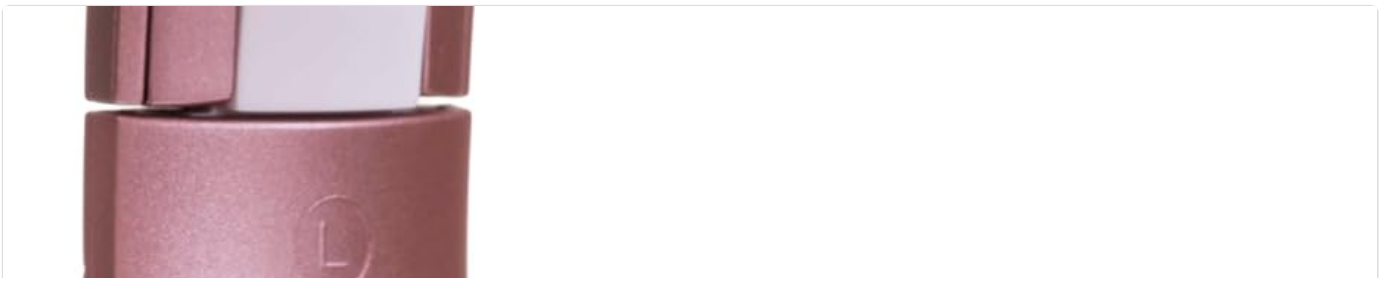




Image: Detailed views of the soft memory foam earmuffs, fabric headband with snug pad, durable quality, and extendable sides of the P19 headphones.

4. Setup

4.1. Initial Charging

Before first use, fully charge your PowerLocus P19 headphones. Connect the supplied USB-C cable to the charging port on the headphones and the other end to a USB power source (e.g., computer, wall adapter). The LED indicator will show charging status and turn off when fully charged. A full charge takes approximately 3 hours.

4.2. Bluetooth Pairing

1. Ensure the headphones are turned off.
2. Press and hold the Power button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "PowerLocus P19" from the list of devices.
5. Once connected, the LED indicator will turn solid blue or flash slowly.

4.3. Multi-Point Connection

The PowerLocus P19 supports multi-point connection, allowing you to connect to two Bluetooth devices simultaneously (e.g., a smartphone and a laptop). This feature enables seamless switching between audio sources without re-pairing.

1. Pair the headphones with the first device as described in section 4.2.
2. Disable Bluetooth on the first device.
3. Put the headphones back into pairing mode and pair with the second device.
4. Once the second device is connected, re-enable Bluetooth on the first device. The headphones should automatically connect to both devices.



Image: An illustration demonstrating the multi-point connection capability of the PowerLocus P19 headphones, allowing connection to two devices simultaneously.

5. Operating Instructions

5.1. Basic Controls

Button/Action	Function
Power Button (Long Press)	Power On/Off, Enter Pairing Mode
Play/Pause Button (Single Press)	Play/Pause Music, Answer/End Call

Button/Action	Function
Play/Pause Button (Long Press)	Reject Call, Activate Voice Assistant
Volume + Button (Single Press)	Increase Volume
Volume + Button (Long Press)	Next Track
Volume - Button (Single Press)	Decrease Volume
Volume - Button (Long Press)	Previous Track

5.2. EQ Modes

The PowerLocus P19 headphones feature three equalizer modes to optimize your audio experience for different content types:

- **Pop Mode:** Enhanced clarity for vocals and balanced sound.
- **Bass Mode:** Boosted low frequencies for a powerful bass experience.
- **Vocal Mode:** Optimized for clear voice reproduction, ideal for podcasts or audiobooks.

To switch between EQ modes, press the dedicated EQ button on the headphones. Cycle through the modes to find your preferred setting.



Image: A visual representation of the three EQ modes (Pop, Bass, Vocal) available on the PowerLocus P19 headphones, showing different audio experiences.

6. Charging and Battery Life

The PowerLocus P19 headphones offer an impressive battery life and convenient charging options:

- **Battery Life:** Enjoy over 60 hours of continuous playtime on a single charge.
- **Charging Port:** USB-C for fast and efficient charging.
- **Charging Time:** Approximately 3 hours for a full charge.

When the battery is low, the headphones will provide an audible alert. Connect the USB-C cable to recharge.



Image: An infographic showing the PowerLocus P19 headphones with icons for endless battery life, 70 hours playtime, and USB-C fast charging technology.

6.1. Wired Mode

If your battery runs out or you prefer a wired connection, use the included 3.5mm audio cable. Simply plug one end into the headphone's audio jack and the other into your device's 3.5mm port. The headphones will function as passive wired headphones, conserving battery life.

7. Maintenance

To ensure the longevity and optimal performance of your PowerLocus P19 headphones, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.

- **Storage:** When not in use, store the headphones in the provided hard shell carry case to protect them from dust, scratches, and impacts.
- **Temperature:** Avoid exposing the headphones to extreme temperatures (hot or cold) or high humidity.
- **Water Resistance:** The headphones are not waterproof. Avoid contact with liquids.

7.1. Foldable Design

The foldable design allows for compact storage and easy portability. Gently fold the earcups inwards towards the headband before placing them in the carry case.



Image: The PowerLocus P19 headphones in their folded state, next to their elegant hard shell carry case, demonstrating their portability.

8. Troubleshooting

If you encounter any issues with your PowerLocus P19 headphones, please refer to the following common problems and

solutions:

Problem	Possible Solution
Headphones do not turn on	Ensure the headphones are charged. Connect to a power source and try again.
Cannot pair with device	Ensure headphones are in pairing mode (flashing blue/red LED). Turn off and on Bluetooth on your device. Move headphones closer to the device. Clear previous Bluetooth connections on your device.
No sound or low volume	Check volume levels on both headphones and connected device. Ensure headphones are properly paired. Try playing different audio.
Sound distortion or crackling	Move closer to the connected device to avoid interference. Ensure no obstacles are between the headphones and device. Try disconnecting and re-pairing.
Microphone not working	Ensure the headphones are connected and selected as the input device on your computer/phone settings. Check for any mute functions.

If the issue persists after trying these solutions, please contact PowerLocus customer support for further assistance.

9. Specifications

Feature	Detail
Model Number	P19
Wireless Communication Technology	Bluetooth 5.3
Battery Type	Lithium-ion
Charging Time	3 hours
Playtime	60+ hours
Weight	185 Grams
Impedance	32 ohms
Frequency Range	2.4 Hz - 2.48 kHz
Ear Placement	Over-Ear
Special Features	Multi-point pairing, Foldable, Surround Sound, Built-in Equalizer
Compatible Devices	Game Console, Computer, Laptop, Tablet, Phone

10. Warranty and Support

PowerLocus stands behind the quality of its products. Your P19 Wireless Headphones come with the following:

- **2-Year Manufacturer's Warranty:** Covers defects in materials and workmanship for two years from the date of purchase.
- **45-Day Refund Policy:** If you are not satisfied with your purchase, you may be eligible for a refund within 45 days.
- **Dedicated Customer Support:** Friendly and responsive customer service is available to assist you with any questions or issues. Please refer to the contact information provided with your product or visit the official PowerLocus website for support details.

© 2024 PowerLocus. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question