Konex audio K-Cube-PP

Konex audio K-Cube-PP Portable Bluetooth Speaker User Manual

Model: K-Cube-PP | Brand: Konex audio

Introduction

Thank you for purchasing the Konex audio K-Cube-PP Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product and retain it for future reference.

Safety Information

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water and other liquids. This product is not waterproof.
- Use only the provided USB charging cable for charging.
- Keep out of reach of children.

Package Contents

Please check the package for the following items:

- Konex audio K-Cube-PP Portable Bluetooth Speaker
- USB charging cable
- User Manual (this document)

Product Overview

Familiarize yourself with the components and controls of your K-Cube-PP speaker.



Figure 1: Front view of the K-Cube-PP speaker. The speaker features a minimalist design with a large grille covering the front and two circular buttons for control.

Controls and Ports

- **Front Buttons:** The speaker has two circular buttons on the front grille, marked with a minus (-) and a plus (+). These buttons control various functions including power, playback, and volume.
- **Micro USB Port:** Located on the side/back, this port is used for charging the speaker and for 3.5mm Aux-in connection.

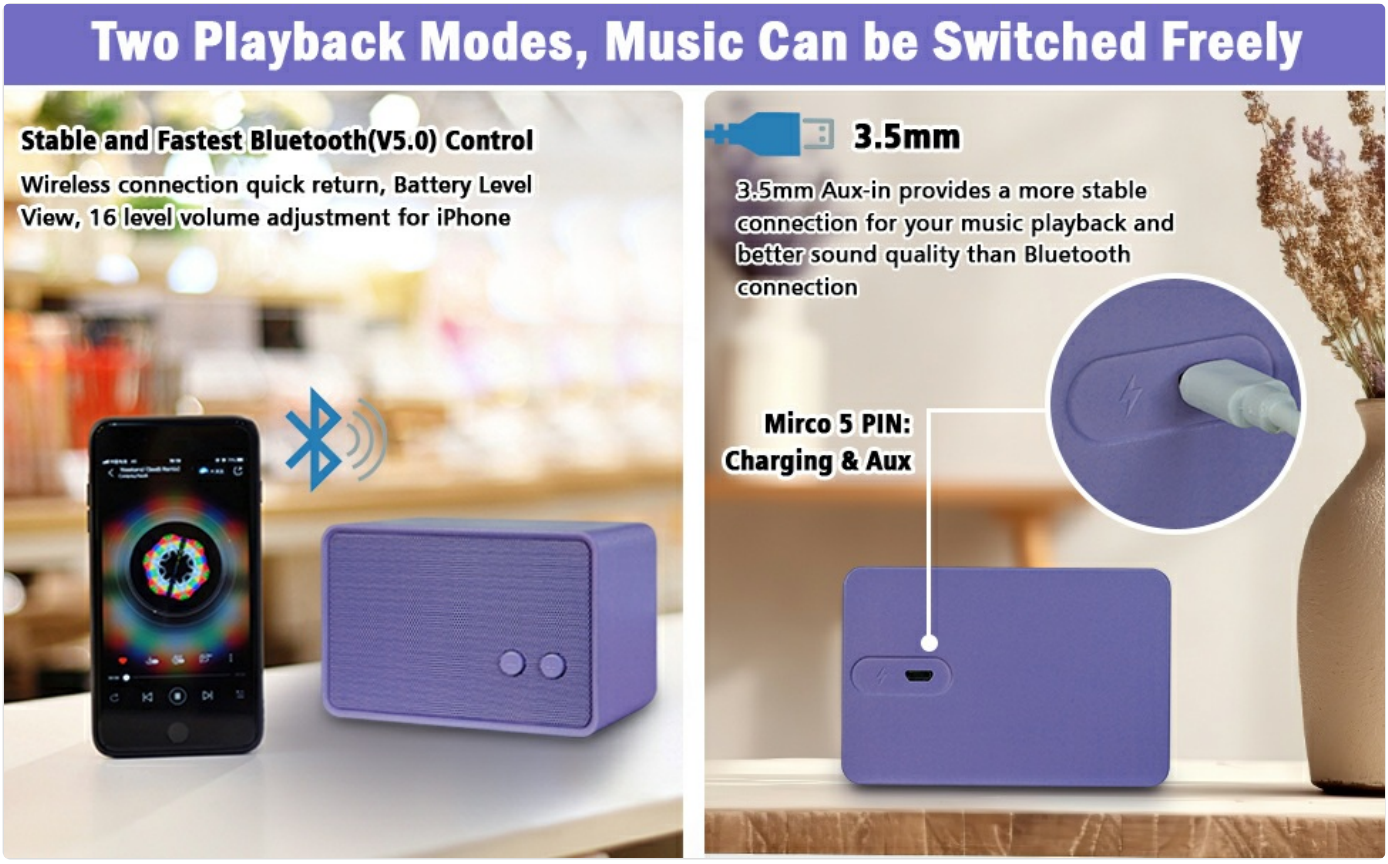


Figure 2: The Micro USB port serves as both the charging port and the 3.5mm Aux-in connection.

Setup

1. Charging the Speaker

Before first use, fully charge the speaker. The K-Cube-PP has a built-in 1200mAh Li-Ion rechargeable battery, providing up to 12 hours of playtime on a full charge.

- Connect the provided USB charging cable to the Micro USB port on the speaker.
- Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
- A charging indicator light (if present, refer to product for exact behavior) will illuminate during charging and turn off when fully charged. A full charge typically takes approximately 3 hours.



Figure 3: Battery specifications and charging time.

2. Powering On/Off

- **To Power On:** Press and hold the **+** (plus) button for a few seconds until you hear an audible indication or see an indicator light.
- **To Power Off:** Press and hold the **+** (plus) button again for a few seconds until the speaker powers down.

3. Bluetooth Pairing

The K-Cube-PP speaker uses Bluetooth V5.0 for stable and fast wireless connection.

1. Ensure the speaker is powered on. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light (if present).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "K-Cube-PP" from the list of found devices.
4. Once paired, the speaker will provide an audible confirmation, and the LED indicator will stop flashing and remain solid.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

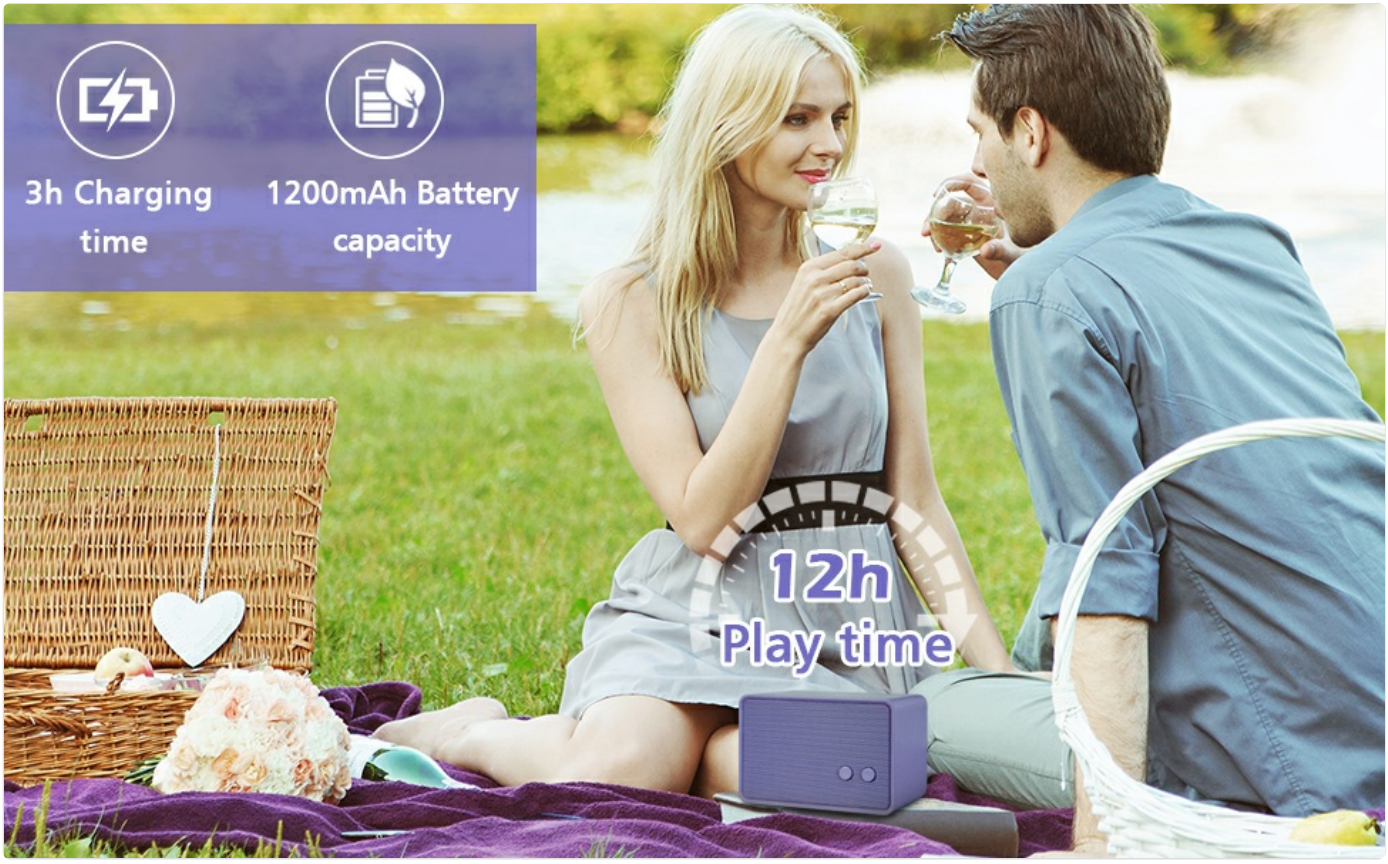


Figure 4: Bluetooth V5.0 connectivity for stable audio streaming.

4. Aux-in Connection

For devices without Bluetooth or for a more stable connection, you can use the 3.5mm Aux-in mode.

- Connect a 3.5mm audio cable (not included) from your audio source to the Micro USB port on the speaker. Note: This port functions as a combined charging and Aux-in port.
- The speaker should automatically switch to Aux-in mode. If not, briefly press the **+** (plus) button to cycle through modes until Aux-in is active.

Operating Instructions

The K-Cube-PP speaker features a unique control scheme using its two front buttons.

Button Functions

Button	Action	Function
+ (Plus) Button	Long Press	Power On/Off
+ (Plus) Button	Short Press	Play/Pause music, Answer/End Call, Switch between Bluetooth/Aux modes
- (Minus) Button	Long Press	Increase Volume
- (Minus) Button	Short Press	Decrease Volume

Important Note on Controls: The K-Cube-PP features a simplified control interface. Volume adjustment is achieved by a *long press* on the **-** (minus) button to increase volume, and a *short press* on the **-** (minus) button to decrease volume. Track navigation (Next/Previous) is primarily managed through your connected Bluetooth device for a more intuitive experience. The **+** (plus) button handles power, play/pause, mode switching, and call management.

Making/Receiving Calls

- When connected via Bluetooth, the speaker can be used as a hands-free device.
- **Answer Call:** Short press the + (plus) button.
- **End Call:** Short press the + (plus) button during a call.
- **Reject Call:** Long press the + (plus) button when an incoming call rings.

Maintenance

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully using the provided USB cable.
No sound.	Volume too low on speaker or source device; incorrect mode; not paired.	Increase volume on both speaker and source. Ensure correct mode (Bluetooth/Aux). Re-pair Bluetooth device.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device too far; interference; previously paired device connected.	Ensure speaker is in pairing mode. Move device closer. Turn off other Bluetooth devices. Disconnect from other paired devices.
Sound distortion.	Volume too high; low battery; poor signal.	Reduce volume. Charge speaker. Move speaker closer to source device.

Specifications

Detailed technical specifications for the K-Cube-PP Portable Bluetooth Speaker.

Feature	Detail
Model Name	K-Cube-PP
Brand	Konex audio
Speaker Type	Single Speaker
Speaker Maximum Output Power	5 Watts
Connectivity Technology	Wireless (Bluetooth)

Feature	Detail
Wireless Communication Technology	Bluetooth V5.0
Audio Output Mode	Mono
Battery Life	12 Hours
Battery Capacity	1200 Milliamp Hours
Charging Time	Approx. 3 Hours
Power Source	Battery Powered
Product Dimensions	3.94"D x 2.56"W x 2.64"H
Item Weight	13.7 ounces
Is Waterproof	FALSE (Not Waterproof)
Included Components	USB charging cable
Control Method	Button
Recommended Uses	Indoor/Outdoor (Home, Office, Party, Hiking, Biking, Beach)
Color	Purple
UPC	721545978752

Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Konex audio website. Keep your proof of purchase for any warranty claims.
For further assistance, you may contact Konex audio customer service through their official channels.

© 2024 Konex audio. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question