Kuizil C16

Kuizil C16 Wireless Earbuds User Manual

Model: C16

1. INTRODUCTION

Thank you for choosing the Kuizil C16 Wireless Earbuds. This manual provides detailed instructions to help you set up, operate, and maintain your earbuds for optimal performance. Please read this manual thoroughly before use and retain it for future reference.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- Kuizil C16 Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- User Manual
- Multiple Sizes of Ear Tips (S, M, L)

Image: Contents of the Kuizil C16 Wireless Earbuds package.

3. PRODUCT OVERVIEW

The Kuizil C16 Wireless Earbuds are designed for comfort and performance, featuring ear hooks for secure fit and touch controls for easy operation.

4. Setup

Image: Kuizil C16 Wireless Earbuds and charging case with LED display.

Key Features:

- Bluetooth 5.4 for stable connection
- 13mm dynamic drivers for Hi-Fi stereo sound
- ENC Noise Cancelling for clear calls
- IP7 Waterproof rating
- Ergonomic ear hook design
- Smart touch controls
- Up to 50 hours total playtime with charging case
- LED digital power display

4. Setup

4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case.

1. Place the earbuds into the charging case.
2. Connect the USB-C charging cable to the charging port on the case and to a power source.
3. The LED digital display on the case will show the battery percentage. The earbuds' individual battery indicators will also be visible.
4. A full charge takes approximately 1.5 hours.

Image: LED digital display on the charging case indicating battery levels.

4.2 Pairing with a Device

The earbuds utilize Bluetooth 5.4 for a stable and efficient connection.

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth.
4. Search for Bluetooth devices and select "C16" from the list.
5. Once connected, a voice prompt will confirm successful pairing.

After the initial pairing, the earbuds will automatically connect to the last paired device when taken out of the charging case.

UPGRADED BLUETOOTH 5.4 CHIP
3x clearer music and call than other wireless earbuds
thanks to latest Bluetooth 5.4 chip

15M   15M

Faster Connection   **Stronger Signal**   **Lower Power Consumption**

Image: Illustration of the Bluetooth 5.4 chip and its benefits.

4.3 Fitting the Earbuds

Proper fit is essential for sound quality and comfort. The C16 earbuds feature flexible ear hooks and come with multiple ear tip sizes.

1. Select the ear tips that provide the best seal and comfort for your ears. (Medium size is pre-installed).
2. Place the ear hook over your ear.
3. Gently insert the earbud into your ear canal.
4. Adjust the earbud and ear hook for a secure and comfortable fit.

Image: Guide for fitting the earbuds with ear hooks and interchangeable ear tips.

5. OPERATING INSTRUCTIONS

The Kuizil C16 earbuds feature smart touch controls for various functions.

5.1 Touch Control Functions

Action	Function
Single Tap (L/R)	Play/Pause music, Answer/End call
Double Tap (L)	Previous Song
Double Tap (R)	Next Song
Triple Tap (L)	Volume Down
Triple Tap (R)	Volume Up
Long Press (2s) (L/R)	Reject Call, Activate Voice Assistant

Image: Smart touch control functions diagram.

5.2 Calling Functions

- **Answer/End Call:** Single tap either earbud.
- **Reject Call:** Long press either earbud for 2 seconds.

The built-in HD microphones and ENC noise cancellation ensure clear call quality.

5.3 Voice Assistant

To activate your device's voice assistant (e.g., Siri, Google Assistant), long press either earbud for 2 seconds.

5.4 Mono Mode

You can use either the left or right earbud independently. Simply take one earbud out of the case, and it will automatically connect to your device. The other earbud can remain in the charging case.

6. Maintenance

6.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Do not use abrasive cleaners or solvents.

6.2 Water Resistance

The Kuizil C16 earbuds are IP7 waterproof, meaning they can resist sweat, rain, and minor water splashes. They are not designed for swimming or submersion in water.

- Do not intentionally submerge the earbuds in water.
- If the earbuds get wet, wipe them dry thoroughly before placing them back in the charging case to prevent damage to the charging contacts.

Image: IP7 Waterproof and Sweatproof features.

6.3 Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged.

7. TROUBLESHOOTING

If you encounter issues with your earbuds, refer to the following common solutions:

- **Earbuds not pairing:** Ensure earbuds are charged. Turn off and on Bluetooth on your device. Forget "C16" from your device's Bluetooth list and re-pair.
- **Only one earbud working:** Place both earbuds back in the charging case, close the lid, then open it again and take them out. Ensure both are charged.
- **No sound:** Check volume levels on both your device and the earbuds. Ensure earbuds are properly connected to your device.
- **Charging issues:** Ensure the charging cable is securely connected. Clean the charging contacts on the earbuds and inside the case.
- **Poor sound quality:** Ensure ear tips provide a good seal. Try different ear tip sizes. Clean any debris from the earbud nozzles.

If the issue persists, try resetting the earbuds (refer to manufacturer's website for specific reset instructions if not detailed here) or contact customer support.

8. SPECIFICATIONS

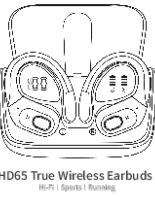| Feature	Detail
Model Name	C16
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Bluetooth Range	Up to 15 meters
Audio Driver Size	13 mm
Frequency Range	20 Hz - 20,000 Hz
Noise Control	Active Noise Cancellation (ENC for calls)
Battery Life (Earbuds)	6-8 hours (single charge)
Total Playtime (with Case)	Up to 50 hours
Charging Time	Approx. 1.5 hours (case)
Water Resistance Level	IP7 Waterproof
Control Type	Touch Control
Material	Plastic
Item Weight	4.6 ounces

9. SAFETY INFORMATION

- Do not disassemble or modify the product.
- Keep away from extreme temperatures, direct sunlight, and open flames.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Keep out of reach of children and pets.
- Dispose of the product and batteries responsibly according to local regulations.

10. Warranty and Support

Kuizil products come with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your package or visit the official Kuizil website.

For technical support, troubleshooting assistance, or any inquiries regarding your Kuizil C16 Wireless Earbuds, please contact Kuizil customer service through their official website or the contact information provided in your product packaging.

Related Documents - C16

	Kuizil Q76-BY Wireless Earbuds: Quick Start Guide and Features Learn how to use your Kuizil Q76-BY wireless earbuds, including touch controls, pairing, charging, and Bluetooth connectivity. This guide provides essential information for sports and workout use.
	HD65 True Wireless Earbuds - User Manual & Features Discover the HD65 True Wireless Earbuds by Kuizil. This comprehensive guide covers pairing, functions, charging, product specifications, and FAQs for these Hi-Fi, sports-ready, IPX7 waterproof earbuds with Bluetooth 5.4 and long battery life.
	C16 True Wireless Stereo Earphones User Guide User guide for C16 True Wireless Stereo Earphones, covering specifications, setup, functions, charging, maintenance, and troubleshooting.
	Occiam C16 True Wireless Earbuds User Manual Comprehensive user manual for Occiam C16 True Wireless Earbuds, covering setup, Bluetooth connection, controls, charging, specifications, troubleshooting, and FCC compliance.