Luqeeg Luqeegrp7gwa90ck-12

Luqeeg MP4 Player User Manual

Model: Luqeegrp7gwa90ck-12

Product Overview

The Luqeeg MP4 Player is a versatile portable digital media player designed for high-fidelity audio and video playback. It features a full touch HD screen, robust connectivity options, and a long-lasting battery, making it suitable for various activities including sports, study, and travel.

Key Features:

- **OCTA CORE MTK CHIP:** Equipped with an octa-core MTK chip for fast response and smooth operation. Features full-featured duplex Bluetooth for stable connections with headphones, speakers, and car stereos.
- **5IN FULL TOUCH HD SCREEN:** A 5.0-inch, 16-million color HD screen supports high-resolution video and HiFi lossless music playback.
- **4 PLAYBACK SEQUENCES:** Songs can be sorted by title, folder, album, artist, genre, or album plus artist. Supports quick search and bulk playlist additions. Playback sequences include random, sequential, loop, and list loop.
- **LARGE CAPACITY LITHIUM BATTERY:** Built-in high-capacity lithium battery provides up to 50 hours of continuous music playback or 8 hours of video playback, with up to 670 hours of standby time.
- **EASY FILE TRANSFER:** Supports file transfer via USB cable, Bluetooth, and Wi-Fi, allowing easy sharing between the player and smartphones, especially Android devices.



Image: Front and back view of the Luqeeg MP4 Player, showcasing its sleek design and controls.



Image: Illustration of the 5-inch high-definition large screen, highlighting its clarity and touch responsiveness.



Image: The MP4 player displaying 1080P HD video playback, demonstrating its capability for smooth, lag-free video.

Your browser does not support the video tag.

Video: An official product video demonstrating the MP4 Player with Bluetooth connectivity.

What's in the Box

Upon opening the package, please verify that all the following components are included:

- Luqeeg MP4 Player
- User Manual
- Earphone
- Type C Cable



Image: All included components: the MP4 player, user manual, earphones, and Type-C charging cable.

Setup

1. Initial Charging

Before first use, fully charge the MP4 player using the provided Type-C cable and a compatible USB power adapter (not included). The charging indicator will show progress and turn off when fully charged.

2. Powering On/Off

- **To Power On:** Press and hold the power button (usually on the side) until the screen lights up.
- **To Power Off:** Press and hold the power button, then select "Power Off" on the screen.

3. Inserting Micro SD Card (Optional)

If you wish to expand storage, insert a Micro SD card into the designated slot. Ensure the card is inserted correctly until it clicks into place.

4. Connecting to Wi-Fi

1. Go to "Settings" on the device.
2. Select "Wi-Fi" and turn it on.

3. Choose your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap "Connect".

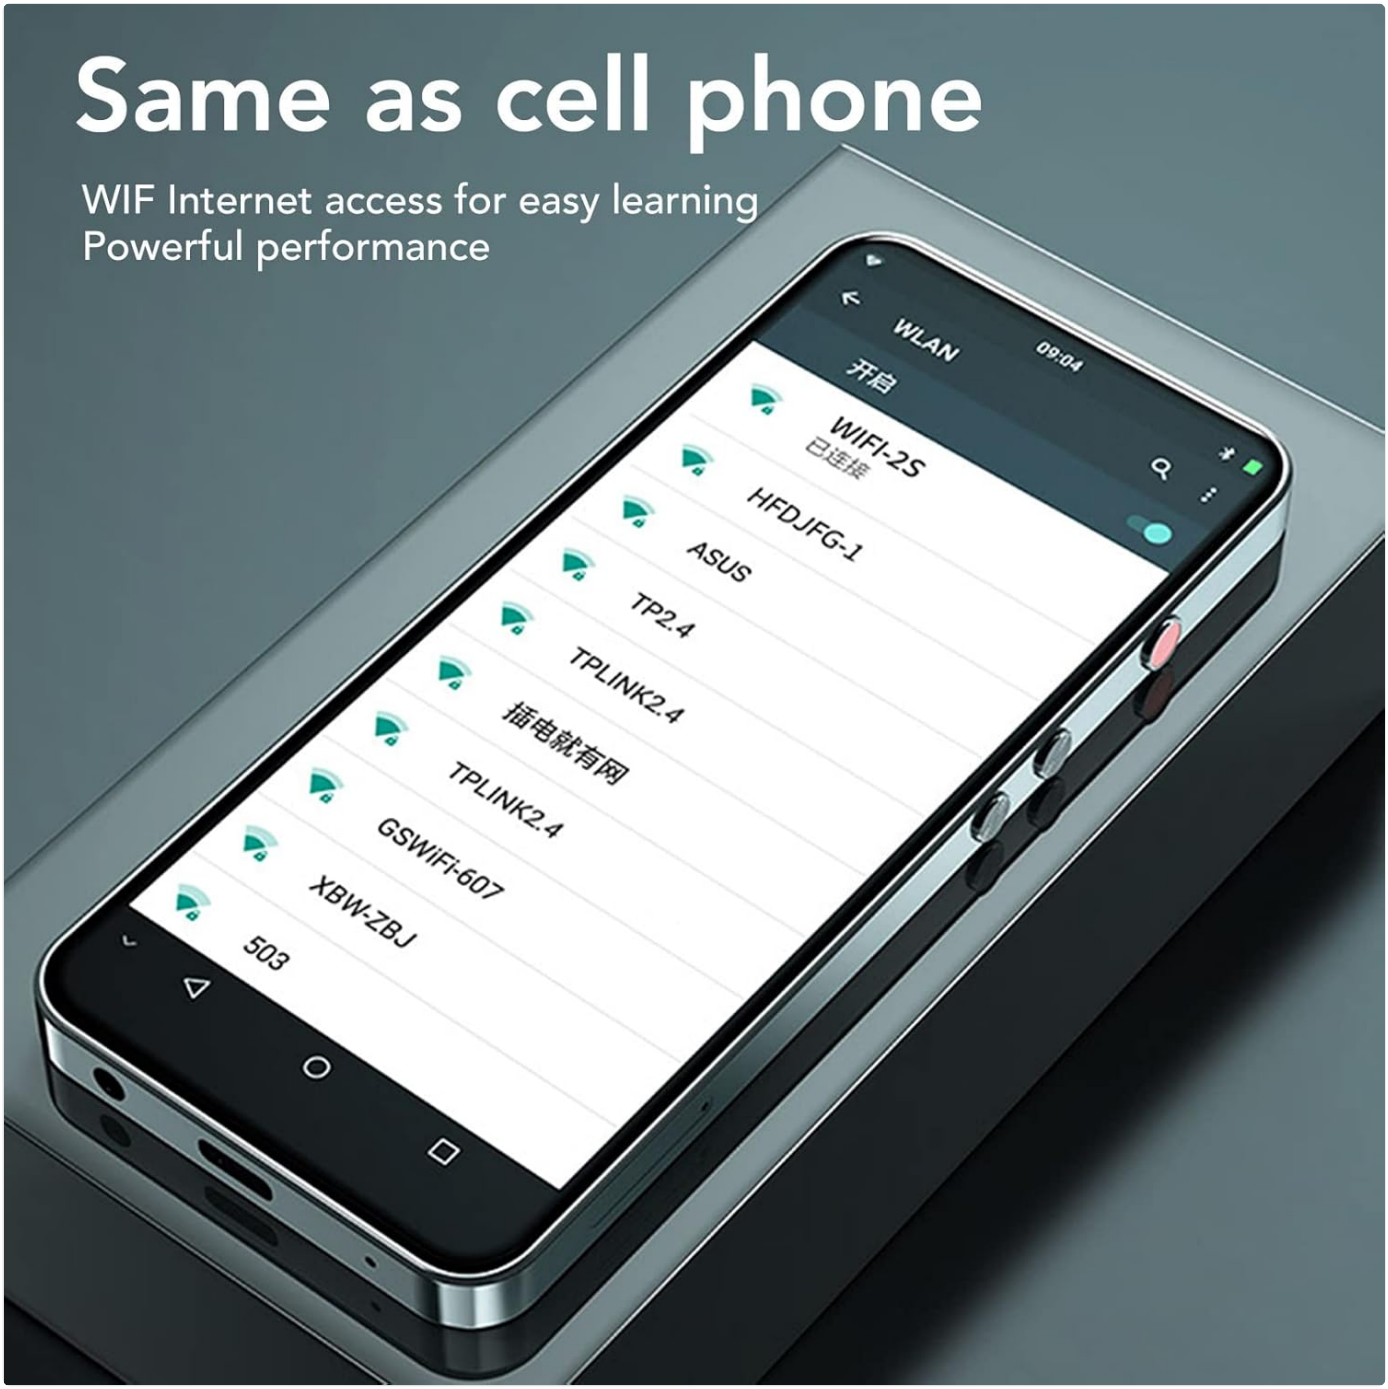


Image: The MP4 player screen showing available Wi-Fi networks, similar to a smartphone interface.

5. Connecting Bluetooth Devices

1. Go to "Settings" on the device.
2. Select "Bluetooth" and turn it on.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. Select your device from the list of available devices to pair.



Image: The MP4 player connected to wireless earbuds, illustrating its stable Bluetooth connection capability.

Operating Instructions

1. Navigation

The device features a full touch screen for intuitive navigation. Swipe left/right to switch between screens, tap icons to open applications, and use the back/home buttons at the bottom of the screen for navigation.

2. Transferring Files

- **Via USB Cable:** Connect the player to your computer using the Type-C cable. The player will appear as a removable disk. Drag and drop music, video, or other files into the appropriate folders.
- **Via Bluetooth/Wi-Fi:** Use compatible file sharing applications or features on the player and your smartphone (especially Android devices) to transfer files wirelessly.

3. Playing Music and Videos

- **Music Playback:** Open the music application. You can browse by artist, album, song, or folder. Select a song to begin playback. Use the on-screen controls for play/pause, skip, and volume adjustment.
- **Video Playback:** Open the video application. Select a video file to play. The 5-inch HD screen provides a clear viewing experience.



Image: The MP4 player's music playback interface, emphasizing its Dolby Atmos and stereo speaker capabilities for an immersive listening experience.

4. Playback Sequences

The player supports various playback modes:

- **Random Play:** Plays songs in a shuffled order.
- **Sequential Play:** Plays songs in the order they appear in the list.
- **Loop Play:** Repeats the current song.
- **List Loop:** Repeats the entire playlist.

Maintenance

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and body of the device. Avoid using harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods. Store in a cool, dry place.
- **Software Updates:** Periodically check for software updates through the device's settings (if available) to ensure optimal performance and access to new features.
- **Storage:** Store the device in a protective case or pouch to prevent scratches and damage.

Troubleshooting

Problem	Possible Solution
Device does not turn on.	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, perform a hard reset (refer to device specific instructions if available, usually holding power button for 10+ seconds).
Cannot connect to Bluetooth.	Ensure Bluetooth is enabled on both devices. Place devices close to each other. Put the other device in pairing mode. Forget and re-pair the device.
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled. Verify the Wi-Fi password. Restart your router and the MP4 player.
Poor audio quality.	Check earphone connection or Bluetooth connection. Ensure audio files are not corrupted. Adjust volume settings.
Device is slow or unresponsive.	Close unnecessary background applications. Clear cache. Restart the device. Consider a factory reset if issues persist (backup data first).

If the problem persists after trying these solutions, please refer to the warranty and support section for further assistance.

Specifications

Feature	Detail
Brand	Luqeeg
Model Name	Luqeegrp7gwa90ck-12
Screen Size	5 Inches
Memory Storage Capacity	128 GB (Internal)
Connectivity Technology	Wi-Fi, Bluetooth
Special Feature	Touch Screen
Compatible Devices	Headphone, Personal Computer
Media Type	Micro SD

Feature	Detail
Item Weight	8.4 ounces
Package Dimensions	6.65 x 3.58 x 1.65 inches
Manufacturer	Luqeeg
Country of Origin	China

Warranty and Support

This Luqeeg MP4 Player comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty duration and coverage details.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Luqeeg customer service through their official website or the contact information provided on the product packaging.

Keep your purchase receipt and product serial number handy when contacting support.

© 2024 Luqeeg. All rights reserved.