Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

jiehome X3-1100

JIEHOME X3-1100 Golf Rangefinder User Manual

Model: X3-1100

Introduction

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your JIEHOME X3-1100 Golf Rangefinder. This device offers high-precision distance measurement with advanced features designed for golfing, hunting, and bowhunting.



Image: The JIEHOME X3-1100 Golf Rangefinder, showcasing its compact design and primary features.

What's in the Box

Upon opening your JIEHOME X3-1100 Golf Rangefinder package, please verify that all the following items are included:

- Golf Rangefinder * 1
- Hard Shell Carry Case * 1
- USB Type-C Charging Cable * 1
- Mountaineering Buckle * 1
- User Manual * 1
- Lens Cleaning Cloth * 1



Image: All components included in the JIEHOME X3-1100 Golf Rangefinder package.

Setup

Before first use, ensure your rangefinder is fully charged. The device is equipped with a 750mAh rechargeable Lithium-ion battery.

1. **Charging the Device:** Connect the provided USB Type-C charging cable to the rangefinder's charging port and to a suitable USB power source. The battery indicator will show charging status. A full charge allows for approximately 30,000 measurements.
2. **Adjusting the Eyepiece:** Rotate the eyepiece to adjust the focus until the display and target appear clear.



Image: The JIEHOME X3-1100 Golf Rangefinder connected to a USB-C charging cable.

Operating Instructions

The JIEHOME X3-1100 Golf Rangefinder features 5 distinct operating modes to suit various measurement needs. Press the "Mode" button briefly to cycle through the available modes.

1. Straight-Line Distance Measurement

This is the default mode for measuring the direct distance to a single target. Aim the crosshairs at your desired target and press the power button. The distance will be displayed instantly.

2. Continuous Scan Measurement

For measuring multiple targets or moving objects, press and hold the power button. The rangefinder will continuously scan and display distances as you pan across the landscape. This mode is useful for hunting or observing moving targets.

Your browser does not support the video tag.

Video: Demonstration of the continuous scan mode for measuring distances to multiple objects, such as deer.

3. Flagpole Locking Mode with Vibration

This mode is designed for golf to accurately measure the distance to the flagpole, even with background objects. When the slope switch is off, aim at the flagpole. The device will vibrate once the flagpole is locked, providing a precise distance. This mode is USGA-compliant when slope compensation is disabled.

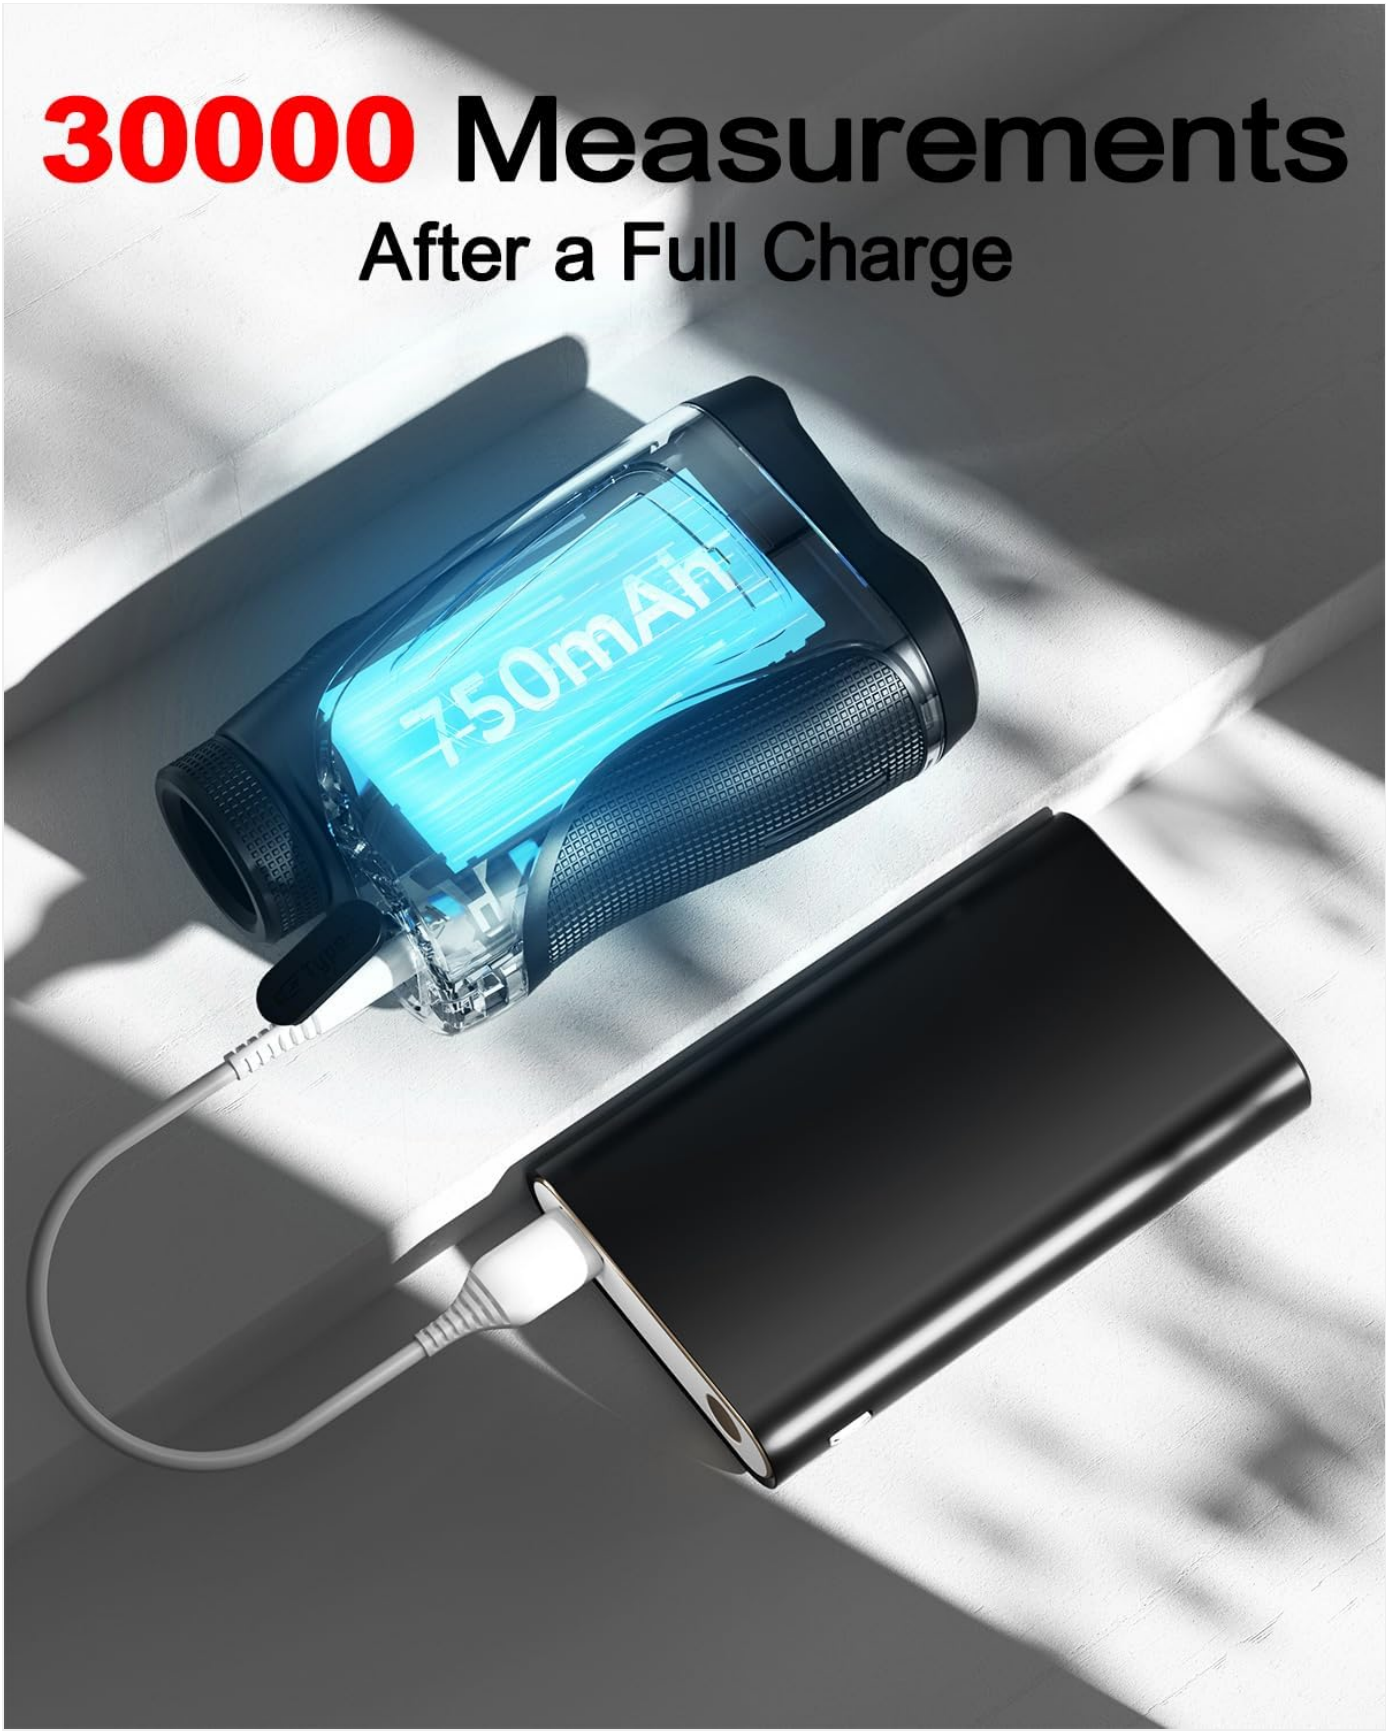


Image: The rangefinder display showing a locked flagpole target with distance measurement.

Your browser does not support the video tag.

Video: A demonstration of the flagpole locking feature with vibration feedback on the golf course.

4. Slope Compensation Mode

The rangefinder features advanced slope compensation technology. It measures the angle of incline or descent and

calculates the adjusted distance, providing a more accurate "play as" distance for uphill or downhill shots. The slope switch on the side of the device allows you to manually turn this feature ON or OFF. Turn it OFF for tournament legal play.

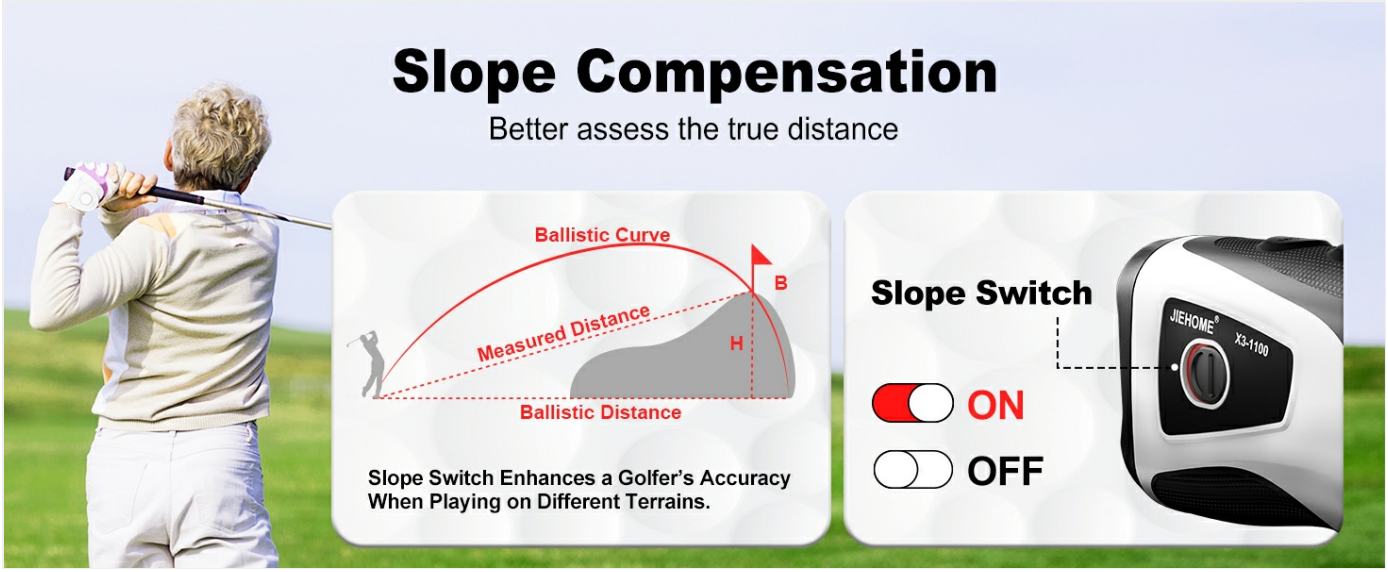


Image: Diagram illustrating how slope compensation calculates the adjusted distance based on elevation changes.

5. Speed Measurement Mode

This mode allows you to measure the speed of a moving target. Follow the instructions displayed on the screen to accurately track and measure the target's velocity. This is suitable for various outdoor activities beyond golf.

Features

- **High Accuracy:** Measures distances up to 1100 yards with an accuracy of +/- 0.5 yards.
- **7X Magnification:** Provides clear and bright images for easy target acquisition.
- **Built-in Magnetic:** Allows the rangefinder to securely attach to metal objects, such as a golf cart frame.
- **IP54 Water-Resistant:** Offers protection against splashes and light rain, ensuring durability in various weather conditions.
- **Ergonomic Design:** Engineered for comfortable handling during extended use.
- **Anti-Reflective Green Film:** Reduces light reflection and improves light transmittance for a clear view.
- **Automatic Power Off:** Conserves battery life by automatically shutting down after a period of inactivity.



Image: Rangefinder showing its magnetic grip feature.



Image: Rangefinder demonstrating its IP54 water-resistant capability.



Image: Rangefinder highlighting its ergonomic design for comfortable use.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your JIEHOME X3-1100 Golf Rangefinder.

- **Cleaning the Lenses:** Use the provided lens cleaning cloth to gently wipe the optical lenses. Avoid using abrasive materials or harsh chemicals that could damage the coatings.
- **Storage:** When not in use, store the rangefinder in its hard shell carry case to protect it from dust, moisture, and physical impact.
- **Water Resistance:** The device is IP54 water-resistant, meaning it can withstand splashes. Do not submerge the device in water. Dry it thoroughly if it gets wet.
- **Battery Care:** Recharge the battery regularly, even if not in frequent use, to maintain battery health. Avoid extreme temperatures during charging and storage.

Troubleshooting

If you encounter issues with your JIEHOME X3-1100 Golf Rangefinder, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not power on.	Low battery or battery depleted.	Charge the device using the provided USB Type-C cable.
Inaccurate distance readings.	Lens is dirty; target is too small or reflective; environmental interference (fog, heavy rain).	Clean the lenses with the cleaning cloth. Ensure a clear line of sight to the target. Avoid use in extreme weather conditions.

Problem	Possible Cause	Solution
Flagpole lock not engaging.	Slope compensation is enabled; target is not distinct enough.	Ensure the slope switch is in the OFF position. Aim steadily at the flagpole, allowing the device to differentiate it from the background.
Display is blurry.	Eyepiece not properly focused.	Rotate the eyepiece to adjust the focus until the display is clear.

If the problem persists after attempting these solutions, please contact JIEHOME customer support for further assistance.

Specifications

Feature	Detail
Brand	jiehome
Model Number	X3-1100
Measuring Range	Up to 1100 yards
Accuracy	+/- 0.5 yards
Magnification	7X
Battery Type	750mAh Rechargeable Lithium-ion Polymer
Water Resistance	IP54 (Water Resistant)
Laser Class	Class 1, output power <5mW
Material	Plastic
Item Weight	0.38 Kilograms
UPC	703532965624

Warranty and Support

JIEHOME is committed to providing high-quality products and excellent customer service.

- **Warranty Period:** Your JIEHOME X3-1100 Golf Rangefinder comes with a 12-month warranty from the date of purchase. JIEHOME also provides 2-years VIP support.
- **Contact Support:** If you encounter any problems during use or have questions, please feel free to contact JIEHOME customer service. Have your order number ready for faster assistance.
- **Lifetime Service:** JIEHOME is dedicated to helping you with any needs related to your product throughout its lifespan.

© 2026 JIEHOME. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CJ4L4BLQ

More documents and user manuals: **https://manuals.plus/**