Lemorele G96

Lemorele HDMI Splitter Switch 5 in 1 Out User Manual

Model: G96

Introduction

The Lemorele HDMI Splitter Switch 5 in 1 Out (Model G96) is designed to expand your HDMI connectivity, allowing you to connect up to five HDMI source devices to a single HDMI display. This device simplifies your home entertainment or professional setup by eliminating the need to constantly swap HDMI cables. It supports high-resolution video and audio, ensuring a seamless viewing experience.



Image: The Lemorele HDMI Splitter Switch (Model G96) shown with its included remote control. The switch features five HDMI input ports and one HDMI output port, along with LED indicators for active inputs.

Package Contents

Please check the package carefully to ensure all items are present:

- 1 x Lemorele HDMI Switch 5 in 1 Out
- 1 x IR Remote Control
- 1 x USB C Charging Cable
- 1 x Instruction Manual



Image: A visual representation of the package contents, including the HDMI switch, IR remote control, USB-C cable, and the product box.

Key Features

- **5-in-1 HDMI Switching:** Connects up to five HDMI source devices to a single HDMI display, allowing easy switching

between them.

- **High Resolution Support:** Supports resolutions up to 4K (4096 x 2160) at 30Hz, 2560x1440 at 60Hz, and 1080P at 120Hz. Compatible with HDMI 2.0 and supports bandwidth up to 10.2 Gbps, ensuring no delay or loss of image/video quality.
- **Multiple Switching Methods:** Offers three convenient ways to switch inputs: automatic switching, infrared remote control, and manual button switching on the device.
- **Universal Compatibility:** Works with a wide range of HDMI-enabled devices, including computers, gaming consoles (Xbox, PlayStation, Switch), Blu-Ray/DVD players, TV boxes, and more. Output compatible with UHD TVs, monitors, and projectors.
- **Plug and Play:** No drivers or software installation required. Simply connect your devices and enjoy. LED indicators clearly show the active input.



Image: An illustration demonstrating the HDMI switch's capability to support up to 4K resolution at 30Hz, showcasing various connected devices like gaming consoles and a laptop.

Setup Guide

Follow these steps to set up your HDMI Splitter Switch:

1. **Connect HDMI Input Devices:** Connect up to five HDMI source devices (e.g., game consoles, Blu-Ray players, computers) to the HDMI IN 1-5 ports on the switch using HDMI cables.
2. **Connect HDMI Output Device:** Connect your display device (e.g., TV, monitor, projector) to the HDMI OUT port on the switch using an HDMI cable.
3. **Connect Power:** Connect the included USB C charging cable to the USB C port on the switch and plug the other end into a USB power source (e.g., a USB port on your TV, a USB wall adapter).
4. **Power On Devices:** Power on your HDMI source devices and your display device. The HDMI switch will automatically detect the active input.



Image: A diagram illustrating how to connect various HDMI input devices (like PS5, Xbox, Switch, Blu-ray player) to the HDMI switch's input ports and how the switch connects to an HDMI output device (like a TV or monitor).

Operating Instructions

The Lemorele HDMI Switch offers three convenient methods for switching between your connected devices:

- **Automatic Switching:** The switch will automatically detect and switch to the latest activated HDMI input device. If the current active device is disconnected or loses signal, it will automatically switch to the next active port.
- **Infrared (IR) Remote Control:** Use the included IR remote control to select your desired input. Simply press the corresponding number button (1-5) on the remote to switch to that HDMI input. The "NEXT" button cycles through the inputs.
- **Manual Button Switching:** Press the physical button on the HDMI switch to cycle through the inputs. To manually select a specific input, press and hold the ON/OFF button for 5 seconds; the currently running HDMI device will be indicated by the corresponding LED.

The LED indicators on the front of the switch correspond to each HDMI input (1-5), making it easy to identify which device is currently active.



Image: This image illustrates the two primary methods of switching inputs: using the IR remote control and manually pressing the button on the HDMI switch itself.

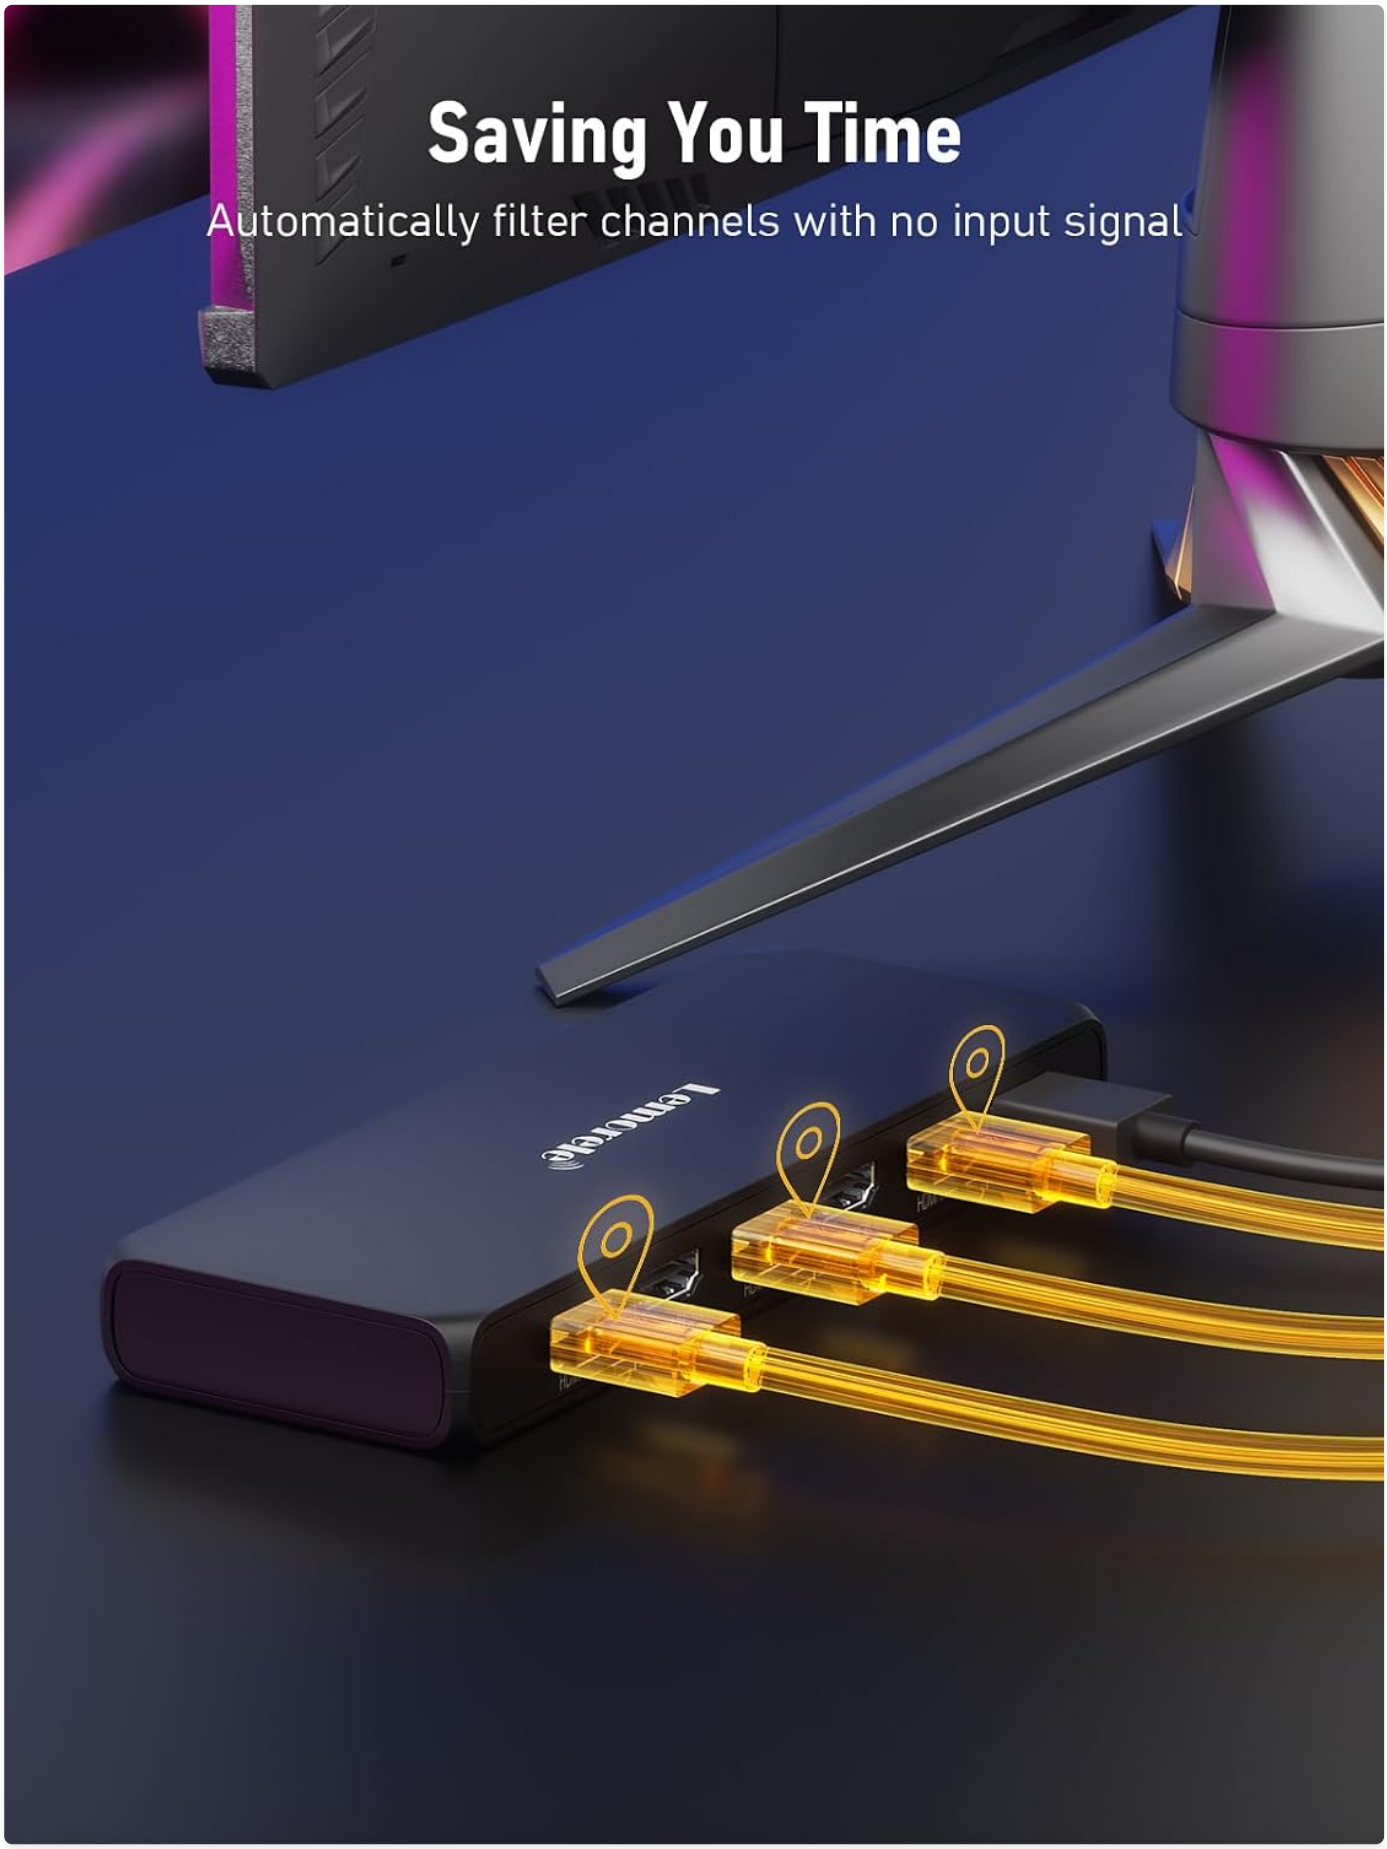


Image: A close-up view of the HDMI switch with cables connected, highlighting its ability to automatically filter channels that have no input signal, thereby saving time for the user.

Compatibility

The Lemorele HDMI Splitter Switch is broadly compatible with devices featuring a standard HDMI interface.

Compatible Input Devices:

- Computers / Laptops
- Gaming Consoles (Xbox 360, Xbox One, PS3, PS4, PS5, Nintendo Switch)
- Blu-Ray DVD Players
- TV Boxes / Streaming Devices (e.g., Firestick, Apple TV)
- Satellite Receivers

Compatible Output Devices:

- UHD TVs
- Monitors
- Projectors
- VR Headsets (with HDMI input)



Image: The HDMI switch integrated into a professional meeting room setup, demonstrating its versatility for connecting multiple laptops to a single display for presentations or collaborative work.

Technical Specifications

Brand	Lemorele
Model Number	G96
Product Dimensions	16.1 x 5.8 x 1.8 cm
Weight	160 g
Color	Black
Connector Type	HDMI
Cable Type	HDMI, USB
Max Resolution Support	4K@30Hz, 2560x1440@60Hz, 1080P@120Hz
Bandwidth	Up to 10.2 Gbps
HDCP Support	Yes
HDR Support	Yes



Image: A visual representation of the HDMI switch's compact dimensions, showing its length of 6.3 inches and width of 2.2 inches, highlighting its sleek and space-saving design.

Troubleshooting

- **No Signal / Black Screen:**
  - Ensure all HDMI cables are securely connected to both the switch and your devices.
  - Verify the USB C power cable is connected and the switch is receiving power.
  - Try switching to a different input port on the switch.
  - Test the HDMI cables directly between the source and display to rule out cable issues.
  - Ensure your display is set to the correct HDMI input.
- **Flickering / Unstable Picture:**
  - Use high-quality HDMI 2.0 cables, especially for 4K resolutions.
  - Ensure the total length of HDMI cables is not excessive.
  - Try a different HDMI input port on the switch or display.
- **Remote Control Not Working:**
  - Check if the battery in the remote control needs replacement.
  - Ensure there are no obstructions between the remote and the switch's IR receiver.
  - Point the remote directly at the front of the HDMI switch.
- **Automatic Switching Not Functioning:**
  - Ensure only one source device is active at a time for automatic switching to work optimally.
  - Some devices may not provide a consistent HDMI signal for reliable auto-detection. Use manual or remote switching if needed.

Maintenance

To ensure the longevity and optimal performance of your HDMI Splitter Switch, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or aerosols, as they may damage the unit.
- **Storage:** When not in use for extended periods, store the switch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping or subjecting the device to strong impacts. Do not attempt to disassemble or modify the switch, as this will void the warranty.

Warranty and Support

Lemorele products are designed for reliability and performance. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact Lemorele customer support.
If you encounter any issues or have questions regarding your HDMI Splitter Switch, please do not hesitate to contact our dedicated support team. Our team is available 24 hours a day and aims to answer your inquiries within 24 hours.
For support, please visit the official Lemorele website or refer to the contact information provided in your product packaging.

© 2024 Lemorele. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question