Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AVSIILE AV-YS-C91

AVSIILE Kitchen Faucet Instruction Manual

Model: AV-YS-C91 | Brand: AVSIILE

Introduction

This manual provides comprehensive instructions for the installation, operation, and maintenance of your AVSIILE Brushed Nickel Single Hole Kitchen Faucet. Designed for convenience and durability, this faucet features a pull-down sprayer with multiple spray modes, a robust stainless steel construction, and a leak-free ceramic valve. Please read this manual thoroughly before installation and use to ensure proper function and longevity of your product.

Specifications

Brand	AVSIILE
Model Name	AV-YS-C91
Color	Brushed Nickel
Material	Stainless Steel
Finish Type	Brushed
Mounting Type	Deck Mount
Hole Count	1
Number of Handles	1
Maximum Flow Rate	1.8 Gallons Per Minute
Valve Type	Ceramic Cartridge Valve
Product Dimensions	8.5"D x 10"W x 12.5"H
Spout Height	12.4 Inches
Spout Reach	8.48 Inches
Special Features	Pull Down Sprayer, Leak Resistant, BPA Free, Lead Free, Tarnish Resistant

Package Contents

Your AVSIILE Kitchen Faucet package includes all necessary components for a complete installation:

- Kitchen Faucet Assembly with Pull-Down Sprayer
- Aerator
- Deck Plate (for three-hole sinks)
- Handle
- Hot and Cold Water Supply Hoses
- Mounting Hardware (nuts, washers, screws)
- Counterweight for Pull-Down Sprayer
- Instruction Manual (this document)



Main components of the AVSIILE Kitchen Faucet.

Setup & Installation

Before You Begin

- Ensure all package contents are present and undamaged.
- Turn off the main water supply to your kitchen sink.
- Clear the area under the sink for easy access.
- Gather necessary tools: adjustable wrench, screwdriver, flashlight, plumber's putty or silicone sealant (optional).

Installation Steps

The AVSIILE Kitchen Faucet is designed for effortless and quick installation, typically taking less than 25 minutes. Follow these steps for a smooth setup:

1. **Prepare the Sink Hole:** If installing on a single-hole sink, no deck plate is needed. For three-hole sinks, place the included deck plate over the holes.
2. **Insert the Faucet:** Feed the faucet's supply lines and mounting shank through the sink hole (or deck plate hole). Ensure the faucet is properly oriented.
3. **Secure the Faucet:** From underneath the sink, slide the rubber washer, then the metal washer, and finally the mounting nut onto the threaded shank. Tighten the mounting nut securely using an adjustable wrench.

4. **Connect Water Supply Lines:** Connect the hot and cold water supply lines from the faucet to your home's hot and cold water valves. The hoses are clearly labeled (red for hot, blue for cold). Tighten connections firmly but do not overtighten.
5. **Install the Counterweight:** Attach the counterweight to the pull-down sprayer hose. This weight ensures the sprayer retracts smoothly and securely back into the spout. Position it correctly as indicated on the hose (usually with a label "Install weight here").
6. **Test for Leaks:** Slowly turn on the main water supply. Check all connections for any leaks. If leaks occur, tighten the connections further.
7. **Flush the Faucet:** Remove the aerator from the sprayer head. Turn on the faucet and let water run for a few minutes to flush out any debris from the lines. Reinstall the aerator.



Visual guide for the easy installation process.

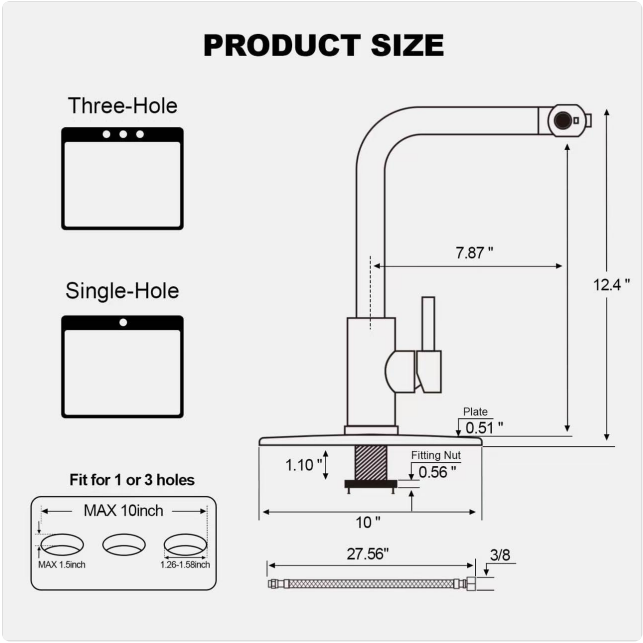


Diagram showing product dimensions and compatibility with single or three-hole sinks.

Operating Instructions

Water Flow and Temperature Control

The AVSIILE faucet features a simple one-handle operation for precise control of both water flow and temperature. Move the lever

handle left for hot water, right for cold water, and up/down to adjust the water flow intensity.

Spray Modes

Your pull-down sprayer offers three distinct spray modes to suit various tasks:

- **Stream Mode:** Provides a steady, aerated flow of water, ideal for everyday tasks like washing hands or filling containers.
- **Sweep Mode:** Delivers a powerful, wide blade of water, perfect for sweeping food debris off dishes or cleaning the sink surface. Activate by pressing the button on the sprayer head.
- **Waterfall Mode:** Offers a gentle, elegant sheet of water, suitable for washing fruits and vegetables or for a calming aesthetic. Activate by rotating the sprayer head.



Illustrations of the different spray patterns available.



The elegant waterfall mode minimizes splashing.



The pull-down sprayer offers extended reach and flexibility.



The magnetic docking system ensures the sprayer head stays securely in place.

Care & Maintenance

Proper care will ensure the longevity and pristine appearance of your AVSIILE Kitchen Faucet. Its anti-fingerprint and easy-clean features simplify maintenance.

- **Cleaning:** Use a soft, damp cloth and mild liquid dish soap to clean the faucet surface. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- **Spot Removal:** For water spots or smudges, simply wipe the surface with a soft, dry cloth.
- **Ceramic Cartridge:** The faucet is built with a premium ceramic cartridge and precise seals, ensuring a leak-free experience. No special maintenance is required for the cartridge itself, but regular cleaning of the aerator (see below) helps maintain optimal flow.
- **Aerator Cleaning:** Periodically unscrew the aerator from the sprayer head and rinse any debris or mineral buildup under running water. This helps maintain consistent water flow.



The durable ceramic disc valves ensure long-lasting, leak-free performance.

Troubleshooting

If you encounter any issues with your AVSIILE Kitchen Faucet, please refer to the common problems and solutions below:

- **Low Water Pressure:**
  - Check if the main water supply valves are fully open.
  - Clean the aerator for any mineral buildup or debris.
  - Inspect the supply lines for kinks or obstructions.
- **Leaking from Faucet Base:**
  - Ensure the mounting nut underneath the sink is securely tightened.
  - Check if the rubber washer is properly seated.
- **Sprayer Not Retracting Properly:**
  - Ensure the counterweight on the hose is positioned correctly and not obstructed.
  - Check the hose for any kinks or obstructions under the sink.
- **Water Temperature Issues:**
  - Verify that both hot and cold water supply lines are connected correctly.
  - Ensure your water heater is functioning properly.

If the problem persists after attempting these solutions, please contact AVSIILE customer support for further assistance.

Warranty & Support

Your AVSIILE Kitchen Faucet comes with an extended warranty. For specific warranty details, terms, and conditions, please refer to the warranty card included in your original packaging or visit the official AVSIILE website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact AVSIILE customer service through their official channels. Contact information can typically be found on the product packaging or the brand's website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I clean the ceramic cartridge on the AVSIILE AV-YS-C91 kitchen faucet?

According to the AVSIILE AV-YS-C91 instruction manual, the faucet is equipped with a premium ceramic cartridge designed for a leak-free experience and no special maintenance is required for the cartridge itself. However, if you...

Read full answer

How do I clean the aerator on the AVSIILE AV-YS-C91 Waterfall Kitchen Faucet to fix slow water flow?

To clean the aerator on your AVSIILE AV-YS-C91 kitchen faucet and restore water flow, follow these steps: Remove the Aerator: Periodically unscrew the aerator from the sprayer head. Depending on the specific model variant,...

Read full answer

Open the live page

https://manuals.plus/asin/B0CJ6NLX3S

More documents and user manuals: **https://manuals.plus/**