Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CMF BY NOTHING B163

CMF Buds Pro Wireless Earbuds User Manual

Brand: CMF BY NOTHING
Model: B163

Introduction

Thank you for choosing CMF Buds Pro Wireless Earbuds. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance and longevity. Please read this manual thoroughly before using the earbuds.



Image: CMF Buds Pro earbuds resting in their open charging case.

What's in the Box

Your CMF Buds Pro package includes the following items:

- One (1) Pair of CMF Buds Pro Earbuds
- One (1) Charging Case
- One (1) USB-A to Type-C Cable
- Three (3) Pairs of Ear Tips (Sizes S, M, L)

- Safety Information and Warranty Information
- User Guide (this manual)

Setup

1. Initial Pairing

1. Ensure earbuds are fully charged.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light on the case.
3. On your device (smartphone, tablet, computer), enable Bluetooth.
4. Search for "CMF Buds Pro" in the list of available Bluetooth devices.
5. Select "CMF Buds Pro" to connect. Once connected, the LED light on the case will turn solid.

2. App Installation (CMF BY NOTHING APP)

For full functionality and customization, download the CMF BY NOTHING APP from your device's app store (available for Android & iOS). The app allows you to:

- Customize touch controls.
- Adjust equalizer settings.
- Toggle noise cancellation modes.
- Activate Low Latency Mode for gaming.
- Check battery levels for earbuds and case.
- Perform firmware updates.

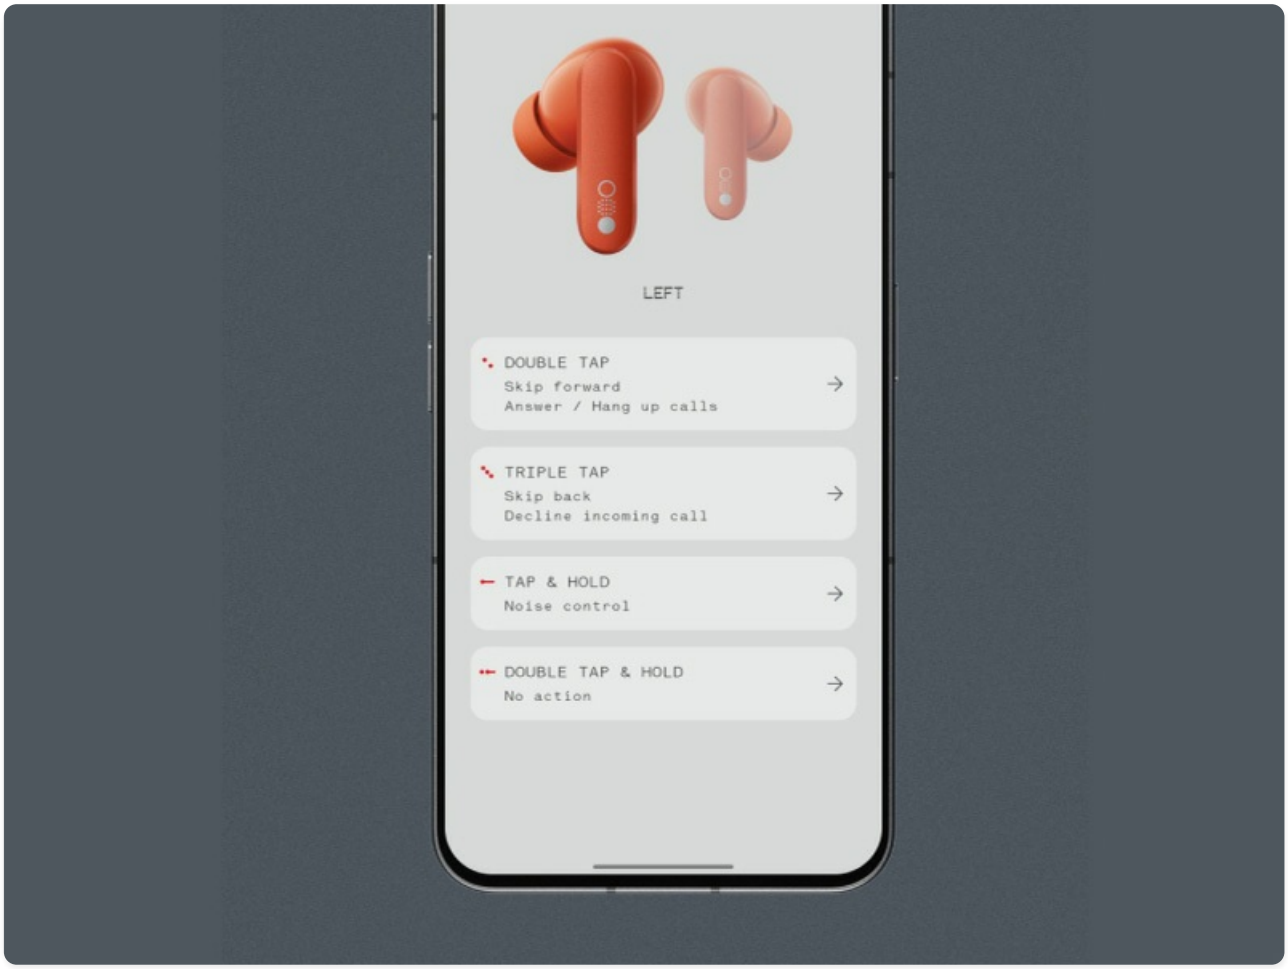


Image: Screenshot of the CMF Buds Pro app interface, displaying customizable touch controls for the earbuds.

Operating Instructions

Touch Controls

The CMF Buds Pro feature intuitive touch controls on the stem of each earbud. These controls can be customized via the CMF BY NOTHING APP.

Action	Function (Default)
Double Tap	Play/Pause, Answer/Hang up calls
Triple Tap	Skip Back (Left Earbud), Skip Forward (Right Earbud), Decline incoming call
Tap & Hold	Noise Control (Cycle through ANC/Transparency/Off)
Double Tap & Hold	Volume Down (Left Earbud), Volume Up (Right Earbud)

Note: Single tap functionality is not available. Customization options are available in the CMF BY NOTHING APP.

Noise Cancellation Modes

The CMF Buds Pro offer advanced noise control features:

- **Active Noise Cancellation (ANC):** Reduces ambient noise by up to 45dB across an ultra-wide frequency range of up to 5000 Hz, ideal for noisy environments.
- **Transparency Mode:** Allows you to hear your surroundings clearly without removing the earbuds, enhancing safety and awareness.
- **Off:** Disables both ANC and Transparency modes.

Cycle through these modes by tapping and holding the earbud stem, or manage them directly in the CMF BY NOTHING APP.



Image: Visual representation of 45dB Hybrid Active Noise Cancellation with a 5000 Hz extreme wide band noise cancellation.

Ultra Bass Technology

The earbuds feature Ultra Bass Technology, which enhances bass sound quality. This can be further customized using the adjustable equalizer in the CMF BY NOTHING APP for a more immersive music experience.

Low Latency Mode

Activate Low Latency Mode via the CMF BY NOTHING APP to minimize audio delay, providing a more synchronized experience for gaming and video playback.

Multi-point Connection

The CMF Buds Pro support multi-point connection, allowing you to connect to two devices simultaneously. To switch between devices, simply pause playback on the active device and start playback on the other. The earbuds will automatically switch audio sources.

Your browser does not support the video tag.

Video: An official product video showcasing the CMF Buds Pro, highlighting key features and design.

Battery and Charging

The CMF Buds Pro offer extended battery life for prolonged listening:

- **Earbuds Only:** Up to 6.5 hours of playback with ANC on, and up to 11 hours with ANC off.
- **Total Playback (with Charging Case):** Up to 22 hours with ANC on, and up to 39 hours with ANC off.
- **Fast Charging:** A 10-minute charge provides 3-5 hours of use (depending on mode).

To charge the earbuds, place them in the charging case. To charge the case, connect it to a power source using the provided USB-A to Type-C cable.

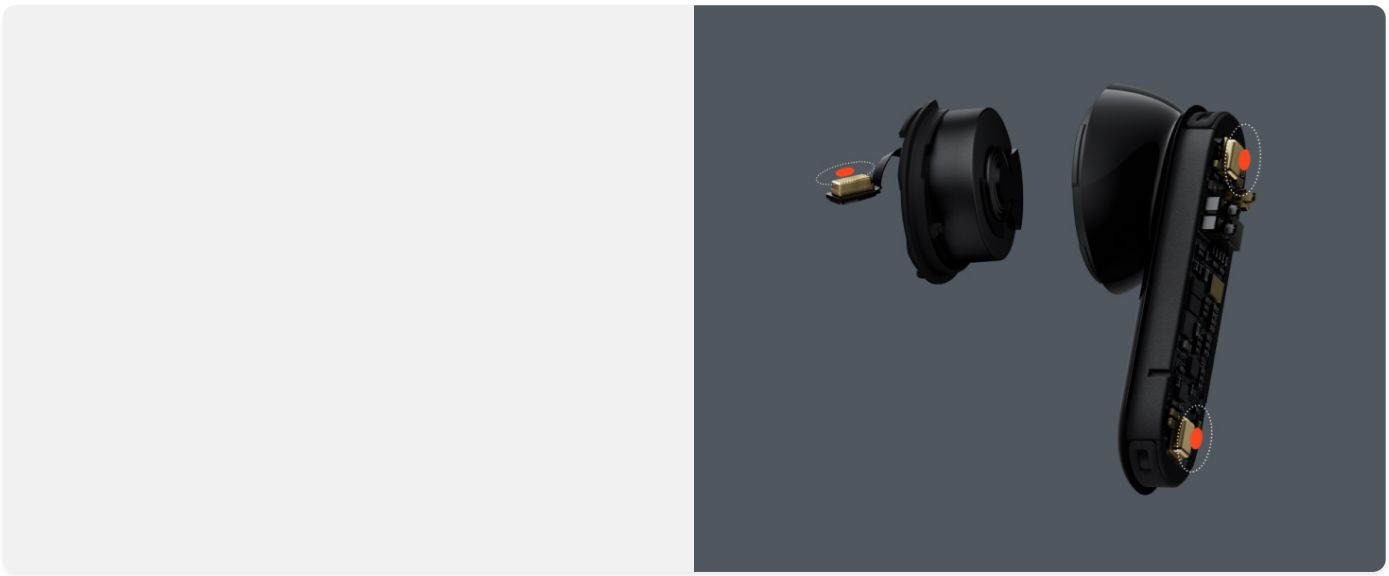


Image: Diagram illustrating the extended battery life of CMF Buds Pro, showing hours for earbuds only and total with charging case, both with ANC on and off.

Maintenance

Proper maintenance ensures the longevity and performance of your earbuds.

Cleaning

- Regularly clean the ear tips with a soft, dry cloth.
- Gently wipe the earbuds and charging case with a clean, damp cloth. Avoid using harsh chemicals or abrasive materials.
- Ensure charging contacts on both earbuds and case are clean and dry.

Water Resistance

The CMF Buds Pro earbuds are rated IP54 for dust and water resistance. This means they are protected against limited dust ingress and water splashes from any direction. The charging case is also IP54 rated.
Note: IP54 rating does not mean the earbuds are waterproof. Do not submerge them in water or expose them to heavy rain or sweat for prolonged periods. Damage due to liquid exposure is not covered under warranty.

Troubleshooting

If you encounter any issues with your CMF Buds Pro, try the following solutions:

- **No Sound:**
  - Ensure earbuds are charged and connected to your device.
  - Check device volume and media playback.
  - Try re-pairing the earbuds.
- **Connection Issues:**
  - Ensure Bluetooth is enabled on your device and within range (up to 10 meters).
  - Forget "CMF Buds Pro" from your device's Bluetooth list and re-pair.
  - Restart your device.
- **Noise Cancellation Not Working:**
  - Ensure ANC mode is activated via touch control or the app.
  - Check ear tip fit for a proper seal.
- **Earbuds Not Charging:**
  - Ensure charging contacts on earbuds and case are clean.
  - Verify the charging cable and power source are working.
  - Check the charging case battery level.
- **Touch Controls Unresponsive:**
  - Ensure earbuds are clean and dry.
  - Restart the earbuds by placing them in the case and closing it for a few seconds.
  - Check app settings for control customization.

If issues persist, please refer to the warranty and support section for further assistance.

Specifications

Feature	Detail
Model Name	B163
Connectivity Technology	Wireless (Bluetooth 5.3)
Noise Control	Active Noise Cancellation, Hybrid Noise Cancellation (up to 45dB)
Frequency Range	Up to 5000 Hz (ANC)
Microphones	6 HD Microphones with Clear Voice Technology
Battery Life (Earbuds, ANC Off)	11 Hours
Total Playback (with Case, ANC Off)	39 Hours
Fast Charging	10 minutes charge for 3-5 hours use
Water Resistance Level	IP54 (Earbuds & Charging Case)
Control Method	Touch
Material	Plastic

Feature	Detail
Item Weight	54.5 Grams (1.92 ounces)
Product Dimensions	2.28 x 2.28 x 0.94 inches
Manufacturer	CMF BY NOTHING

Warranty and Support

For warranty information and customer support, please refer to the "Safety information and warranty information" document included in your product packaging. You may also visit the official CMF BY NOTHING website or contact their customer service for assistance.

Online Support: CMF BY NOTHING Store on Amazon

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CJ8QPBCL

More documents and user manuals: **https://manuals.plus/**