ONGTEED B0CJFZV6VP

ONGTEED Portable AM FM Analog Radio User Manual

Model: B0CJFZV6VP

Your guide to setting up, operating, and maintaining your ONGTEED radio.

Product Overview

The ONGTEED Portable AM FM Analog Radio is a versatile audio device featuring multiple power sources, classic analog tuning, Bluetooth connectivity, and MP3 playback capabilities. Its compact and retro design makes it suitable for various indoor and outdoor settings.



Front view of the ONGTEED Portable AM FM Analog Radio, showcasing its vintage design, tuning dial, and top-mounted controls.

Key Features

- **3 Types of Power Source:** Operates via AC-110V-50Hz, built-in 1200 mAh rechargeable battery, or 2x D batteries (not included) for versatile use.
- **Classic Retro Analogue AM FM Radio:** Frequency range FM 87-108MHz, AM 520-1730kHz with a powerful DSP chip and 21.8" rotatable telescopic antenna for strong signal reception.
- **Bluetooth Speaker and MP3 Playing:** Supports Bluetooth 5.0 for fast wireless connection (10 ft range) and MP3 playback via USB and TF card.
- **Great Quality Sound:** Features a premium built-in 5W speaker for clear and loud audio.
- **Portable Design:** Compact (9.0 x 2.3 x 4.8 inches, 1.1 pounds) with an attached swivel handle for easy portability.

Setup

Powering Your Radio

Your ONGTEED radio offers three convenient ways to power up:

1. **AC Power:** For indoor use, connect the included AC charging cable to the radio's DC 5V IN port and plug it into a standard 110V-50Hz wall outlet. This also charges the built-in rechargeable battery.
2. **Built-in Rechargeable Battery:** The radio features a 1200 mAh rechargeable battery, ideal for portable use. Ensure the battery is fully charged before extended use. Charging occurs automatically when connected to AC power.
3. **D Batteries:** For emergencies or when AC power is unavailable, insert two D-size batteries (not included) into the battery compartment located on the back of the unit. Ensure correct polarity.



Illustration of the three power options: internal rechargeable battery, AC power connection, and the compartment for two D-size batteries.

Operating Instructions

General Controls

- **Power/Volume Knob:** Located on the side. Rotate to turn the unit ON/OFF and adjust the volume.
- **Mode Switch:** Located on the side. Slide to select between USB/TF/BT (Bluetooth/MP3), FM, or AM radio modes.
- **Tuning Dial:** Located on the front. Rotate to tune into desired radio frequencies.
- **Telescopic Antenna:** Extend and rotate the antenna for optimal AM/FM reception.

AM/FM Radio Operation

1. Slide the Mode Switch to 'FM' or 'AM'.
2. Extend the telescopic antenna for better reception.
3. Rotate the Tuning Dial to find your desired station. The frequency display will indicate the current station.




A user enjoying the radio, demonstrating the extended antenna for enhanced AM/FM signal reception.

Bluetooth Playback

1. Slide the Mode Switch to 'USB/TF/BT'. The radio will announce 'Bluetooth device is ready to pair' or similar.

2. On your mobile device, enable Bluetooth and search for 'BT-Speaker' or similar.
3. Select the radio from the list to pair. Once connected, the radio will announce 'Bluetooth device is connected successfully'.
4. Begin playing audio from your paired device.

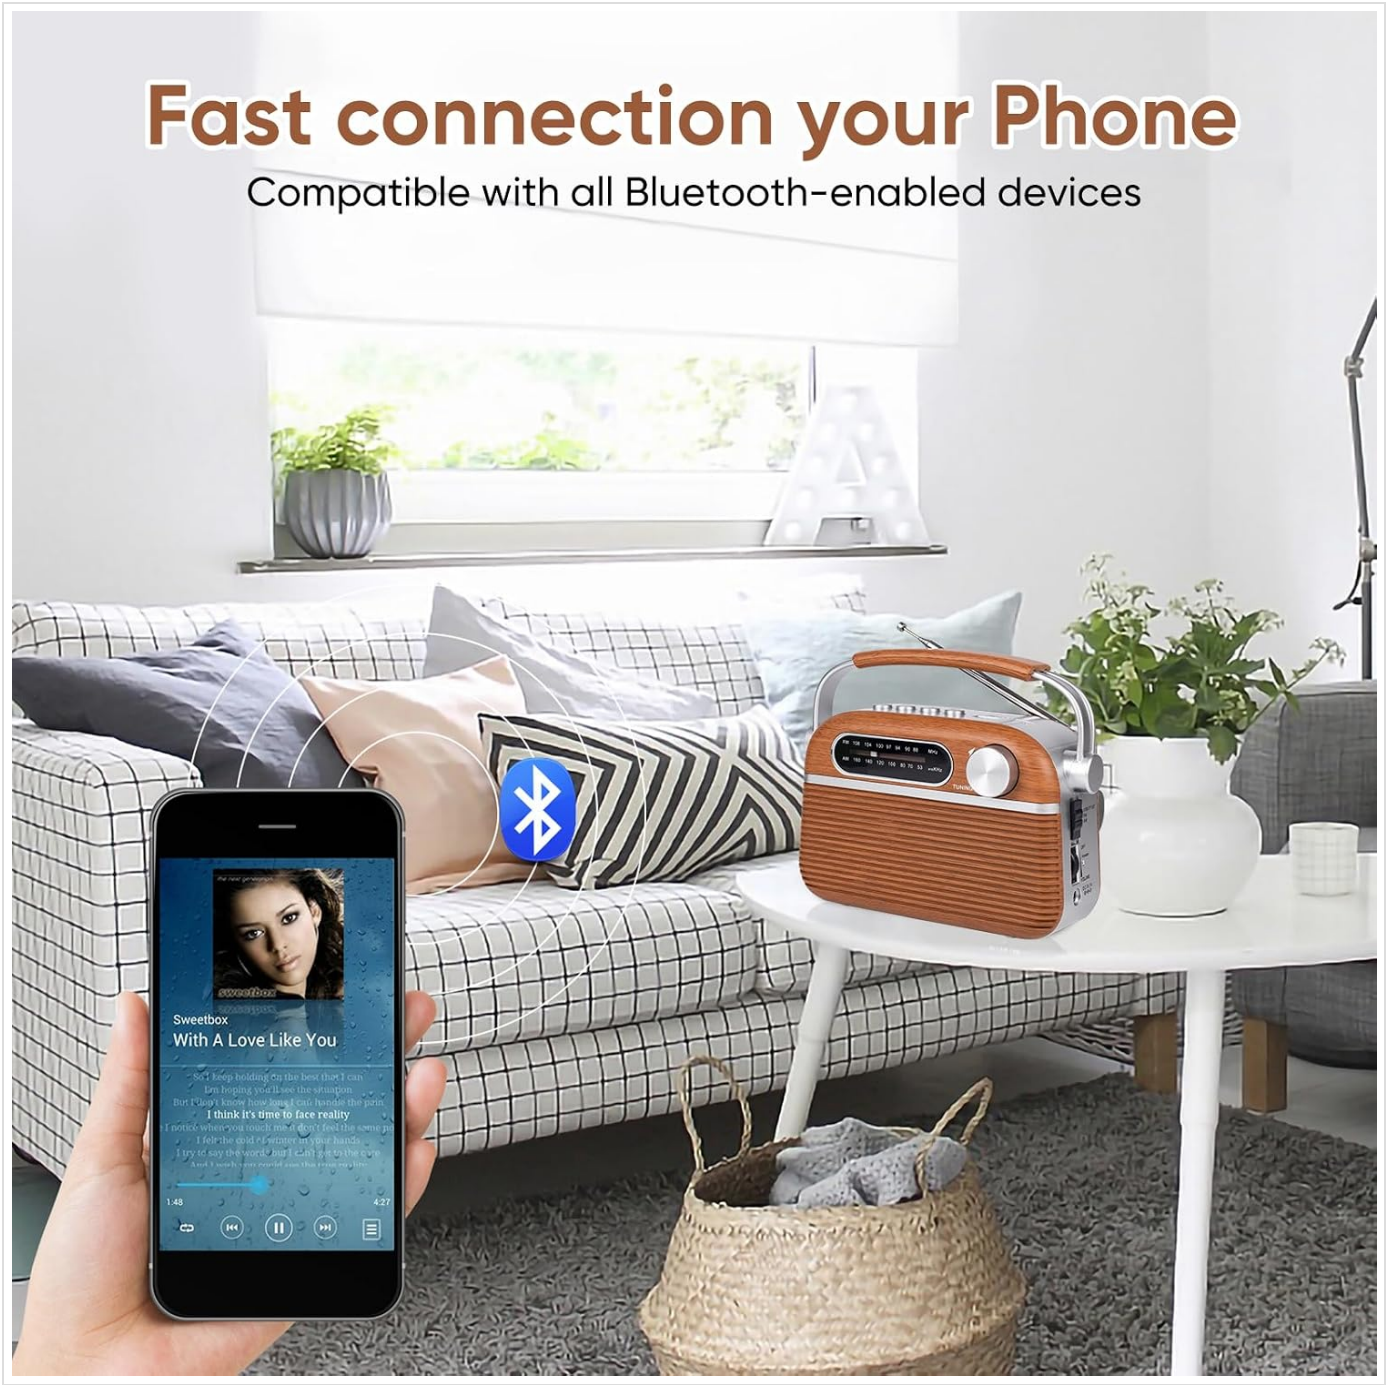

A smartphone wirelessly connected to the radio via Bluetooth, illustrating the fast and easy pairing process.

Official product video demonstrating the AM/FM radio and Bluetooth speaker functionality.

MP3 Playback (USB/TF Card)

1. Slide the Mode Switch to 'USB/TF/BT'.
2. Insert a USB flash drive or TF (Micro SD) card containing MP3 audio files into the corresponding port on the top of the radio.
3. The radio will automatically detect and begin playing the MP3 files. Use the control buttons on top to skip tracks or pause playback.



The radio's top panel showing the USB and TF card slots for direct MP3 audio playback.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the radio. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Care:** If using the built-in rechargeable battery, fully charge it before first use and periodically if the radio is stored for long periods to maintain battery health. When using D batteries, remove them if the radio will not be used for an extended time to prevent leakage.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Radio does not turn on.	No power, low battery, or incorrect power source selected.	Ensure AC cord is securely plugged in, or that the built-in battery is charged. If using D batteries, check if they are inserted correctly and are not depleted.
Poor AM/FM reception.	Antenna not extended or weak signal area.	Fully extend and rotate the telescopic antenna. Try moving the radio to a different location to improve signal strength.
Bluetooth not connecting.	Radio not in Bluetooth mode, device too far, or already paired.	Ensure the Mode Switch is set to 'USB/TF/BT'. Keep your device within 10 ft of the radio. Disconnect from other Bluetooth devices if necessary.
No sound from MP3 playback.	Volume too low, incorrect mode, or corrupted files.	Increase volume. Ensure Mode Switch is set to 'USB/TF/BT'. Check if MP3 files on USB/TF card are valid.

Specifications

Feature	Detail
Brand	ONGTEED
Model	B0CJFZV6VP
Product Dimensions	9 x 2.3 x 4.8 inches
Item Weight	1.1 pounds
Power Source	AC 110V-50Hz, Built-in 1200 mAh Rechargeable Lithium Ion Battery, 2x D Batteries (not included)
Radio Bands Supported	AM (520-1730kHz), FM (87-108MHz)
Connectivity Technology	Bluetooth 5.0, USB, TF Card
Speaker Output	5W
Special Features	Built-In AM Antenna, Lightweight, Rechargeable
Color	Brown
Style	Retro

What's in the Box

- Rechargeable AM FM Bluetooth Radio
- AC Cord
- Owner's Manual

Warranty and Support

For any product inquiries, technical support, or warranty claims, please contact ONGTEED customer service. Refer to the included Owner's Manual for specific contact details or visit the official ONGTEED website.
Please retain your proof of purchase for warranty purposes.

© 2025 ONGTEED. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question