Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TOZO T10

TOZO T10 Ergonomic Edition Wireless Earbuds User Manual

Model: T10

1. Introduction

Welcome to the user manual for your TOZO T10 Ergonomic Edition Wireless Earbuds. These earbuds feature Bluetooth 5.3 connectivity, IPX8 waterproofing, and up to 55 hours of playtime with the charging case. This guide will help you set up, operate, and maintain your earbuds for optimal performance.

2. Package Contents

Please check the package for the following items:

- TOZO T10 Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- Ear Tips (various sizes)
- Quick Start Guide
- User Manual (this document)

3. Setup

3.1 Initial Charge

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the USB-C cable to the charging case and a power source, or place the case on a wireless charging pad. The indicator lights on the case will show the charging status.



Image: TOZO T10 earbuds charging wirelessly and via USB-C.

The TOZO T10 charging case supports both wireless charging and USB-C cable charging. Ensure the earbuds are properly seated in the case for charging to begin. The LED indicators on the case will illuminate to show the battery level and charging status.

3.2 Pairing with Your Device

1. **Step 1:** Take both earbuds out of the charging case. They will automatically enter pairing mode, indicated by a flashing light on one of the earbuds.
2. **Step 2:** On your device (smartphone, tablet, etc.), go to the Bluetooth settings.
3. **Step 3:** Search for available devices and select "TOZO-T10" from the list.
4. **Step 4:** Once connected, you will hear a confirmation tone, and the earbud indicator lights will turn off.



Image: Seamless Bluetooth connection process for TOZO T10.

The image illustrates the simple pairing process. After removing the earbuds from the case, they become discoverable. Navigate to your device's Bluetooth settings and select "TOZO-T10" to establish a connection. The connection is designed to be fast and stable for uninterrupted listening.

3.3 Wearing the Earbuds

Choose the ear tips that provide the best seal and comfort for your ears. Gently insert the earbuds into your ear canal and rotate them slightly to secure a snug fit. A proper fit is crucial for optimal sound quality and noise isolation.

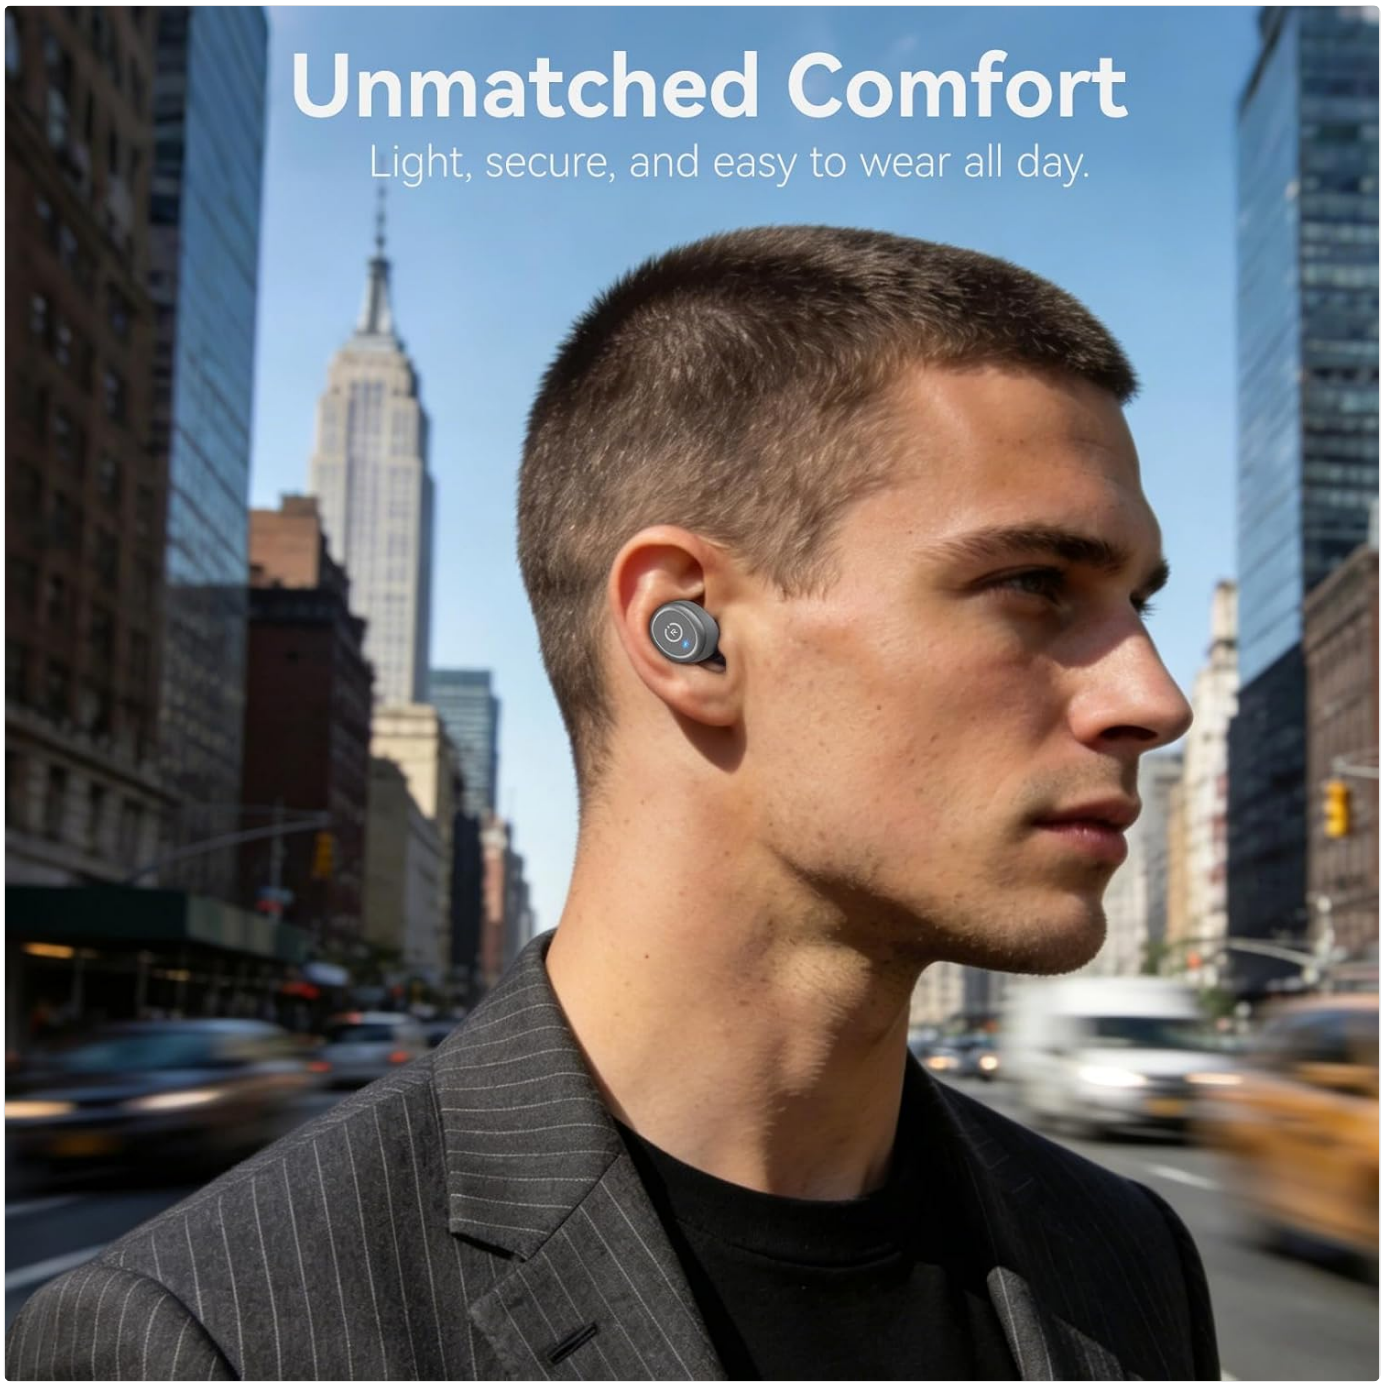


Image: Man wearing TOZO T10 earbud for unmatched comfort.

The TOZO T10 earbuds are designed for ergonomic comfort, ensuring a light, secure fit that can be worn throughout the day without discomfort. Experiment with the included ear tip sizes to find your perfect fit.

4. Operating Your Earbuds

4.1 Touch Controls

The TOZO T10 earbuds feature touch-sensitive controls on each earbud. Refer to the quick start guide for a detailed diagram of touch functions, which typically include:

- **Single Tap:** Play/Pause music, Answer/End call
- **Double Tap (Left/Right):** Previous/Next track
- **Triple Tap (Left/Right):** Volume Down/Up
- **Long Press:** Reject call, Activate voice assistant

4.2 TOZO App Customization

Enhance your audio experience by downloading the official TOZO app. The app allows you to:

- Personalize the equalizer (EQ) settings with 32 preset modes or create your own.
- Access over 100 white noise tracks.
- Explore user-shared EQ settings.
- Customize touch controls.
- Update earbud firmware.



Image: Customize your sound with the TOZO app.

The TOZO app provides extensive customization options for your T10 earbuds. From fine-tuning your audio with various EQ modes to exploring a library of white noise, the app allows you to tailor your listening experience to your preferences.

4.3 IPX8 Waterproof Rating

The TOZO T10 earbuds feature an IPX8 waterproof rating, meaning they are protected against immersion in water up to 1 meter for up to 30 minutes. This makes them suitable for workouts, running, and protection against rain and sweat. **Note:** The charging

case is not waterproof.



Image: TOZO T10 earbuds demonstrating IPX8 waterproof capability.

The IPX8 rating ensures your TOZO T10 earbuds are ready for various conditions, including sweat from intense workouts or unexpected rain. This durability extends the lifespan of the earbuds, making them a reliable companion for active lifestyles.

5. Charging Your TOZO T10 Earbuds

The TOZO T10 offers extended battery life and flexible charging options.

- **Earbud Playtime:** Up to 15 hours on a single charge.
- **Total Playtime:** Up to 55 hours with the charging case.
- **Fast Charging:** Less than 2 hours for a full charge of the case and earbuds.
- **Charging Options:** USB-C cable or wireless charging pad.



Image: TOZO T10 offering 55 hours of playtime.

The TOZO T10 earbuds provide long-lasting power, suitable for extended work sessions, travel, and daily use. With 15 hours of playback from a single charge and an additional 40 hours from the charging case, you can enjoy music and calls for prolonged periods.

6. Maintenance

6.1 Cleaning

- Regularly clean the ear tips with a soft, dry, lint-free cloth.
- Gently wipe the mesh screens of the earbuds to remove any earwax or debris.
- Clean the charging contacts on both the earbuds and inside the charging case with a dry cotton swab.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

6.2 Storage

When not in use, store the earbuds in their charging case to protect them from dust, damage, and to keep them charged. Avoid storing them in extreme temperatures.

7. Troubleshooting

7.1 Earbuds Not Pairing with Each Other

- Place both earbuds back into the charging case.
- Take them out again simultaneously. They should automatically pair with each other.
- If issues persist, try resetting the earbuds (refer to the quick start guide for specific reset instructions).

7.2 Earbuds Not Connecting to Device

- Ensure Bluetooth is enabled on your device.
- Make sure the earbuds are in pairing mode.
- Forget "TOZO-T10" from your device's Bluetooth list and try pairing again.
- Ensure the earbuds are charged.
- Try restarting your device.

7.3 No Sound or Low Volume

- Check the volume levels on both your device and the earbuds.
- Ensure the earbuds are properly connected to your device.
- Clean the earbud mesh screens to remove any obstructions.
- Try different ear tips for a better seal.

7.4 Charging Issues

- Ensure the charging cable is securely connected.
- Verify the power source is working.
- Clean the charging contacts on the earbuds and case.
- If using wireless charging, ensure the case is correctly placed on the charging pad.

8. Specifications

Model	TOZO T10
Bluetooth Version	5.3
Bluetooth Range	Up to 15 meters (49 feet)
Waterproof Rating	IPX8 (earbuds only)
Earbud Playtime	Up to 15 hours
Total Playtime (with case)	Up to 55 hours
Charging Port	USB-C

Wireless Charging	Supported
Audio Driver Size	8 mm
Control Method	Touch, Application
Weight	81.3 Grams (total)



Image: TOZO T10 precision-tuned sound with ORIGX 2.0 and Bluetooth 5.3.

The TOZO T10 earbuds are engineered with 8mm drivers and TOZO OrigX 2.0 acoustic technology to deliver precision-tuned sound. This ensures deep bass, natural vocals, and clear high notes, providing an immersive audio experience powered by Bluetooth 5.3 for stable connectivity.

9. Warranty and Support

TOZO products come with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or visit the official TOZO website. If you encounter any issues or have questions about your TOZO T10 earbuds, please contact TOZO customer support through their official website or the contact information provided in your product packaging.

Official TOZO Website: www.tozostore.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CJHYCNN8

More documents and user manuals: **https://manuals.plus/**