ChooChoo MC180007-BK-S

ChooChoo MC180007-BK-S Wall Mounted Bathroom Cabinet Instruction Manual

Model: MC180007-BK-S

Introduction

Thank you for choosing the ChooChoo Wall Mounted Bathroom Cabinet, model MC180007-BK-S. This cabinet is designed to provide versatile storage with its two doors and adjustable shelves, making it an ideal space-saving solution for your bathroom or other areas. Constructed from P2 quality MDF panels with a water-based paint finish, it offers durability and a modern aesthetic. Please read this manual carefully before assembly and use to ensure safe operation and proper maintenance of your new cabinet.

Safety Information

Important Safety Instructions:

- Always follow the assembly instructions provided with the product.
- Ensure that the wall chosen for installation can safely support the weight of the cabinet and its contents. Use appropriate wall anchors for your wall type.
- Keep fingers clear of the doors and shelves when adjusting or closing to prevent pinching.
- Use appropriate safety equipment, such as gloves and eye protection, during installation.
- Do not overload the shelves. Distribute weight evenly to maintain stability.
- This cabinet is intended for indoor use only.
- Keep small parts and packaging materials away from children to prevent choking hazards.

Setup and Assembly

The ChooChoo Wall Mounted Bathroom Cabinet requires assembly and wall mounting. Detailed step-by-step instructions, along with numbered parts and accessories, are included in the packaging. Please refer to the separate assembly guide for specific instructions.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the

assembly guide are present and undamaged.

2. **Assemble Cabinet Structure:** Follow the provided diagrams and instructions to assemble the main cabinet frame.
3. **Install Shelves:** The cabinet features adjustable shelves. Insert the shelf pins into the desired holes before placing the shelves.
4. **Attach Doors:** Secure the doors to the cabinet frame using the provided hinges. Ensure doors align properly and close smoothly. The cabinet includes a magnet door stop mechanism for secure closure.
5. **Wall Mounting:**
    - Choose a suitable location on a sturdy wall.
    - Measure and mark the drilling points accurately according to the assembly guide.
    - Drill pilot holes and insert appropriate wall anchors (not always included, depending on wall type).
    - Carefully lift and secure the cabinet to the wall using the provided mounting hardware. Ensure it is level and firmly attached.



Image: Cabinet dimensions. This diagram illustrates the overall dimensions of the cabinet (approximately 24" H x 21.1" W x 8.8" D) and internal shelf spacing.

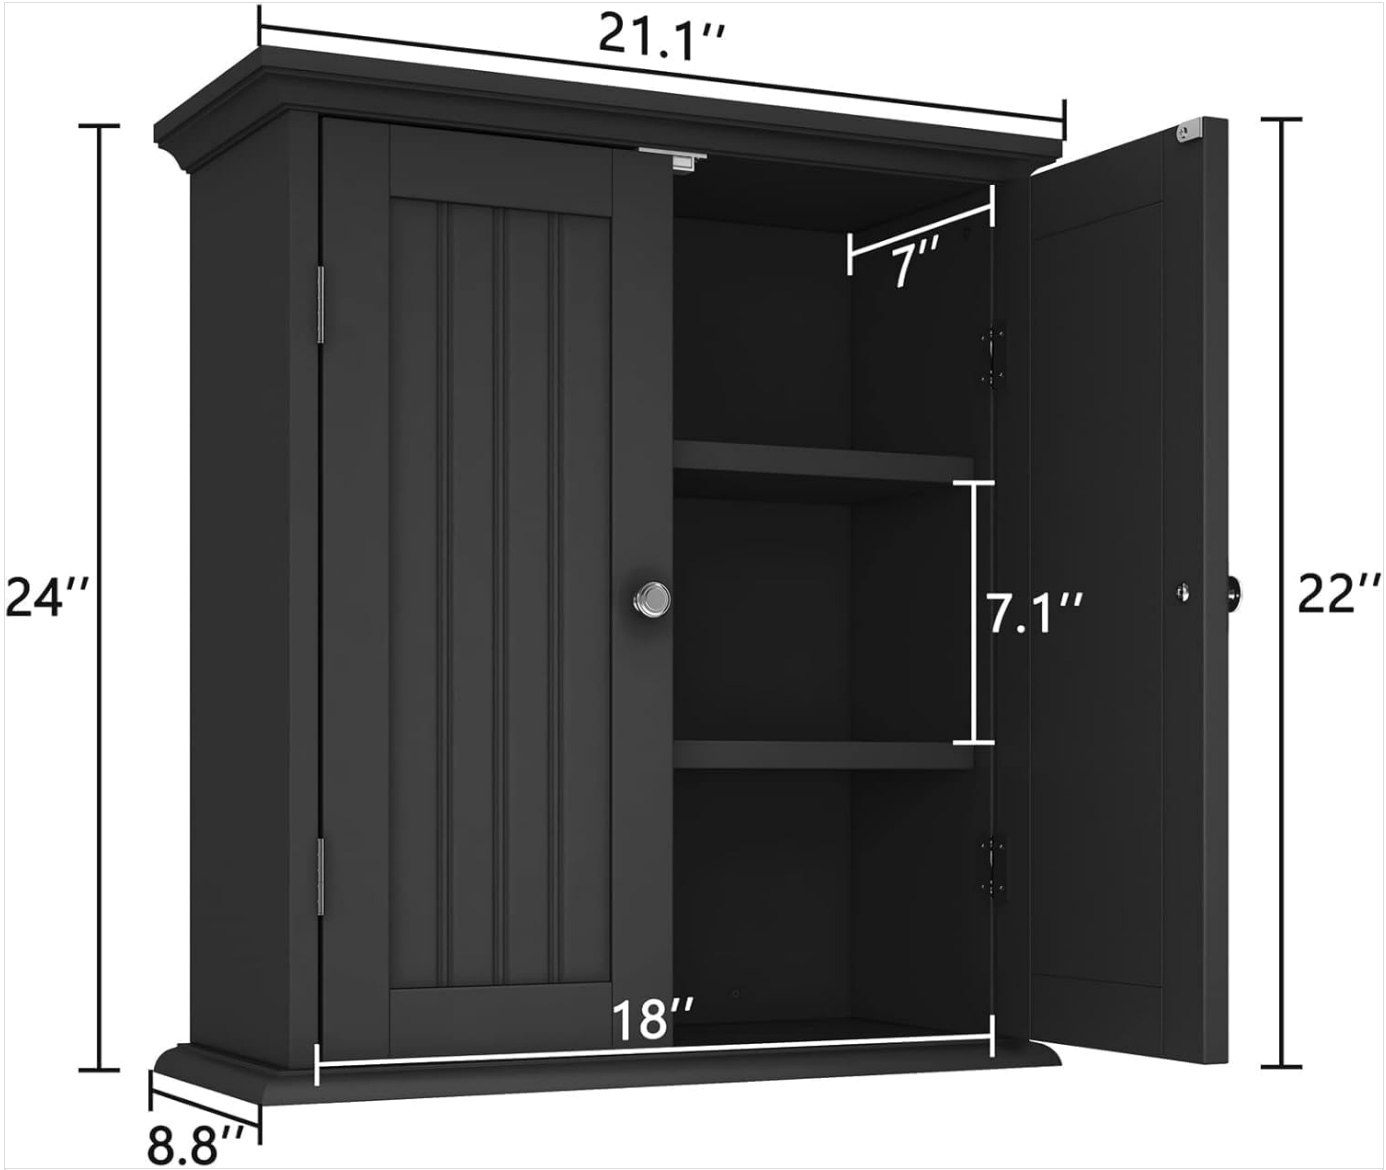


Image: Key features of the cabinet. This image highlights the simple line design on the cabinet doors, the movable shelf for flexible storage, and the magnet door stop for secure closure.

Operating Instructions

Using your ChooChoo Wall Mounted Bathroom Cabinet is straightforward:

- **Opening and Closing Doors:** Gently pull the knobs to open the cabinet doors. Push the doors firmly to close them; the magnet door stop will hold them securely.
- **Adjusting Shelves:** To adjust the height of the internal shelves, remove all items from the shelf. Carefully lift the shelf out, reposition the shelf pins into the desired holes, and then place the shelf back onto the pins. Ensure the shelf is level and stable before placing items on it.
- **Storage:** Utilize the adjustable shelves to organize various items such as toiletries, medicines, or other bathroom essentials. Distribute weight evenly across the shelves.



Image: Cabinet installed in a bathroom. This image shows the ChooChoo cabinet mounted above a toilet, demonstrating its intended use and space-saving design.

Maintenance

Proper care will extend the life and appearance of your cabinet:

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.
- **Spills:** Promptly wipe up any spills to prevent water damage or staining.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain stability.
- **Environment:** Avoid placing the cabinet in direct sunlight or near heat sources, which can cause fading or warping.

Troubleshooting

If you encounter any issues with your cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Doors do not align or close properly.	Hinges are loose or misaligned; cabinet is not level.	Adjust the hinges according to the assembly guide. Ensure the cabinet is mounted level on the wall.
Cabinet feels wobbly after installation.	Mounting hardware is not securely fastened; wall anchors are insufficient.	Retighten all mounting screws. Verify that appropriate wall anchors were used for your wall type. Consult a professional if unsure.
Shelves are not stable.	Shelf pins are not fully inserted or are damaged.	Ensure shelf pins are fully inserted into the support holes. Replace any damaged pins.

If the problem persists or is not listed here, please contact customer support.

Specifications

Feature	Detail
Model Number	MC180007-BK-S
Brand	ChooChoo
Color	Black
Material	Engineered Wood (P2 quality MDF)
Product Dimensions (D x W x H)	23 x 55 x 60 cm (approx. 9.06 x 21.65 x 23.62 inches)
Weight	Approximately 16.9 kg (37.26 lbs)
Number of Doors	2
Number of Shelves	2 (adjustable)
Mounting Type	Wall Mount
Special Features	Adjustable shelves, magnet door stop, simple line design

Warranty and Support

ChooChoo is committed to providing quality products and excellent customer service. While specific warranty details are not provided in this manual, we stand by the quality of our products.
If you have any questions, concerns, or require assistance with assembly, missing parts, or product issues, please do not hesitate to contact our customer support team. Refer to your purchase documentation or the retailer's website for contact information.

© 2026 ChooChoo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question