**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Maxitoc B0CJTHS792

# Universal TV Remote Control User Manual

**Brand:** Maxitoc
**Model:** Universal TV Remote Control (ASIN: B0CJTHS792)

## 1. Introduction

This manual provides comprehensive instructions for the Maxitoc Universal TV Remote Control. This remote is designed to simplify your home entertainment experience by allowing you to control up to three different audio and video components, including TVs, media streaming players, and soundbar audio systems, with a single device.

It is compatible with a wide range of major brands such as Samsung, LG, Sony, Philips, Hisense, Insignia, Toshiba, Emerson, and Vizio Smart TVs.




Figure 1: Front, side, and back views of the Maxitoc Universal TV Remote Control.

## 2. Safety Information

- Do not expose the remote control to direct sunlight, high humidity, or extreme temperatures.
- Avoid dropping or subjecting the remote to strong impacts.
- Do not attempt to disassemble or modify the remote control. This will void the warranty.
- **Battery Safety:**
  - Use only new AAA batteries of the same type. Do not mix old and new batteries, or different types of batteries.
  - Insert batteries with correct polarity (+/-) as indicated inside the battery compartment.
  - Remove batteries if the remote control will not be used for an extended period to prevent leakage.
  - Dispose of used batteries according to local regulations.

## 3. Package Contents

Please verify that all items are present in the package:

- 1 x Maxitoc Universal Remote Control
- 1 x User Guide (this document)
- 1 x Code List

*Note: AAA batteries are not included and must be purchased separately.*

## 4. Setup and Programming

### 4.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) alignment.
4. Close the battery cover securely.

### 4.2 Programming the Remote

The Maxitoc Universal Remote Control can be programmed to operate your devices using a 4-digit code from the included code list.

1. **Step 1:** Press and hold down the **SETUP** button for approximately 3 seconds until the red indicator light on the remote turns on.
2. **Step 2:** Press and release the device button on the remote for the type of device you wish to control. For example, press **TV** for a television, **STR** for a streaming player, or **AUD** for an audio device. The red indicator light will blink once and then remain lit.
3. **Step 3:** Enter the 4-digit code for your device brand from the provided code list. As you enter each digit, the red indicator light will blink. After entering the fourth digit, the light will turn off if the code is valid.
4. **Step 4:** Test the remote control by pressing various buttons (e.g., Power, Volume, Channel) to ensure it controls your device correctly. If it does not work, repeat the programming steps with a different code from the list for your device brand.

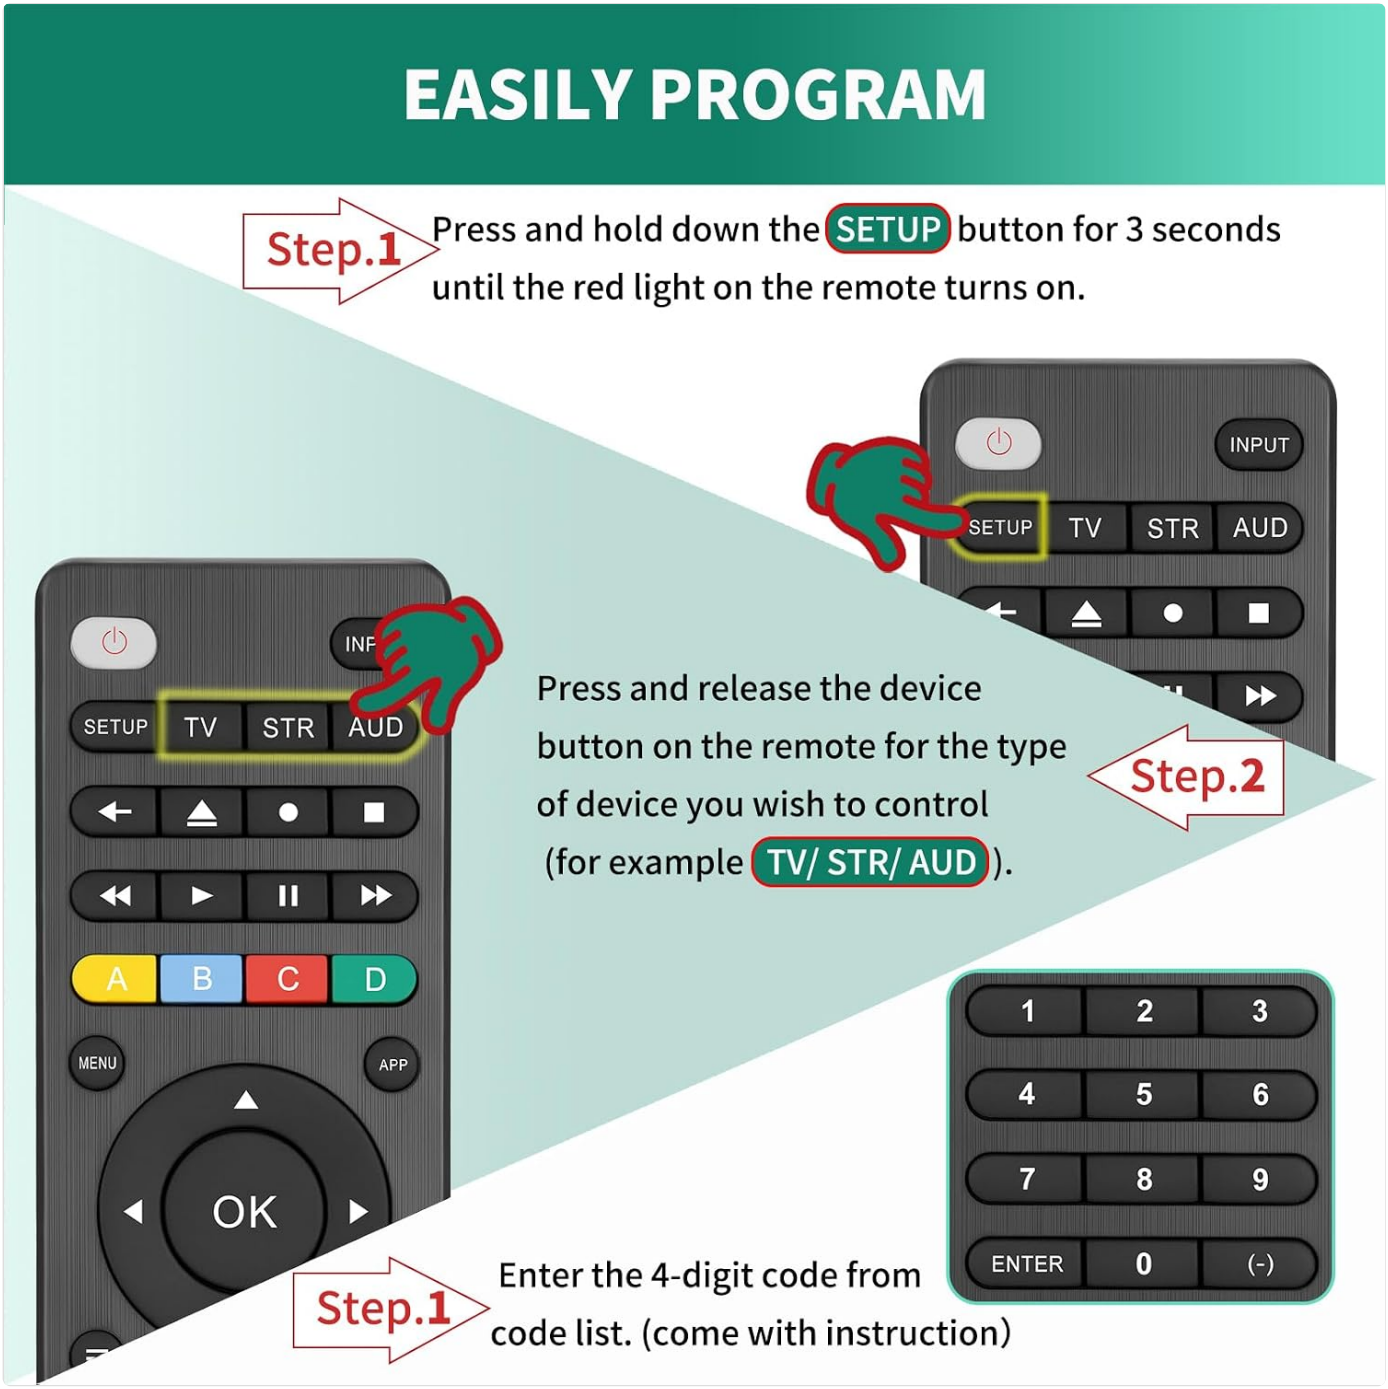



Figure 2: Visual guide for programming the remote control.

## 5. Operating Instructions

### 5.1 Button Functions

Familiarize yourself with the functions of the buttons on your Maxitoc Universal Remote Control:

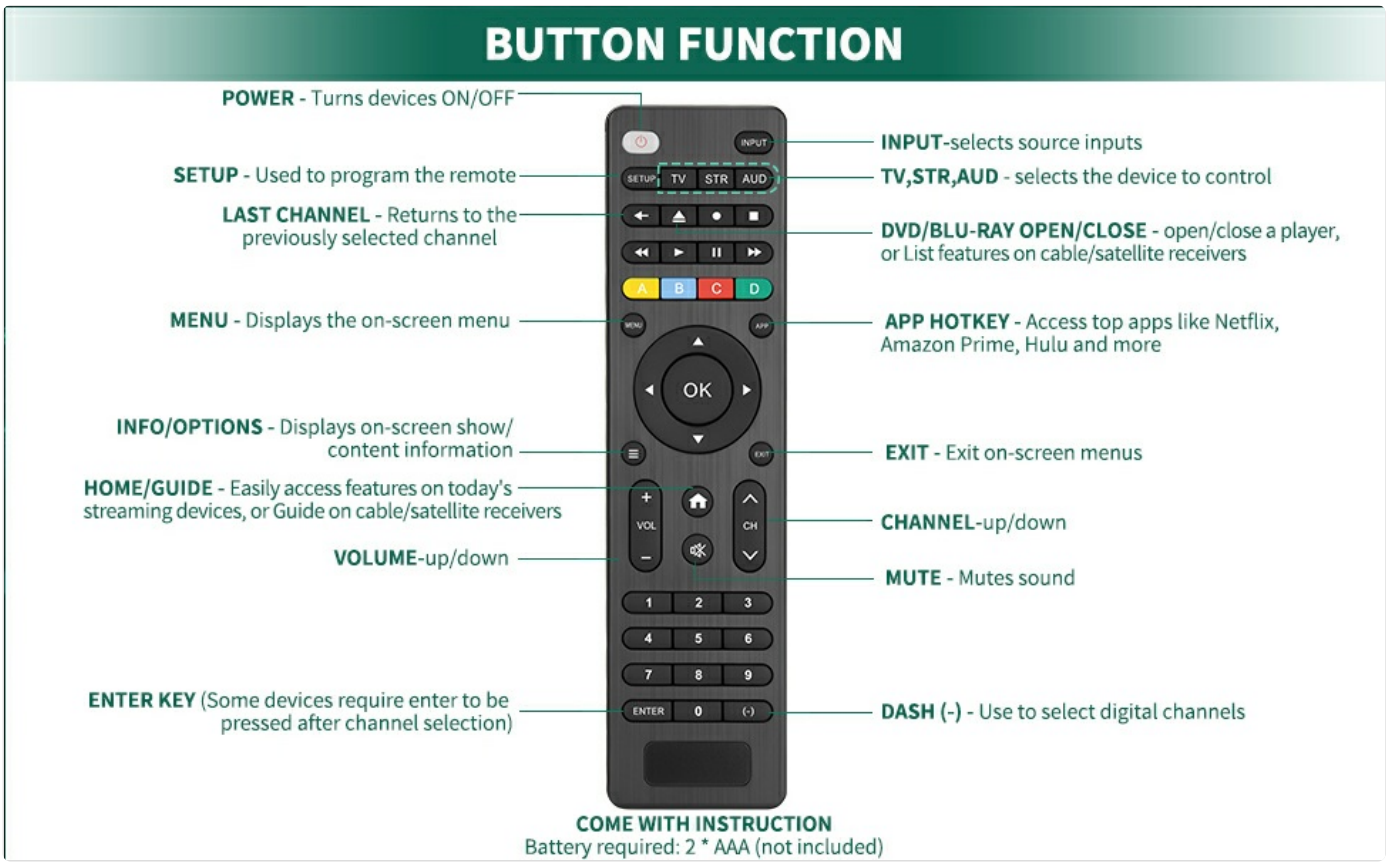



Figure 3: Detailed button function diagram.

- **POWER:** Turns devices ON/OFF.
- **SETUP:** Used to program the remote.
- **INPUT:** Selects source inputs.
- **TV, STR, AUD:** Selects the device to control (Television, Streaming Player, Audio Device).
- **LAST CHANNEL:** Returns to the previously selected channel.
- **DVD/BLU-RAY OPEN/CLOSE:** Opens/closes a player, or lists features on cable/satellite receivers.
- **MENU:** Displays the on-screen menu.
- **APP HOTKEY:** Accesses top applications like Netflix, Amazon Prime, Hulu, and more.
- **INFO/OPTIONS:** Displays on-screen show/content information.
- **EXIT:** Exits on-screen menus.
- **HOME/GUIDE:** Easily accesses features on today's streaming devices, or Guide on cable/satellite receivers.
- **CHANNEL up/down:** Navigates through channels.
- **VOLUME up/down:** Adjusts volume.
- **MUTE:** Mutes sound.
- **ENTER KEY:** Confirms selections (some devices require Enter to be pressed after channel selection).
- **DASH (-):** Used to select digital channels.

## 5.2 Using the APP Button

The dedicated **APP** button provides quick access to popular streaming applications such as Netflix, Amazon Prime Video, Hulu, and others, depending on your connected smart TV or streaming device.

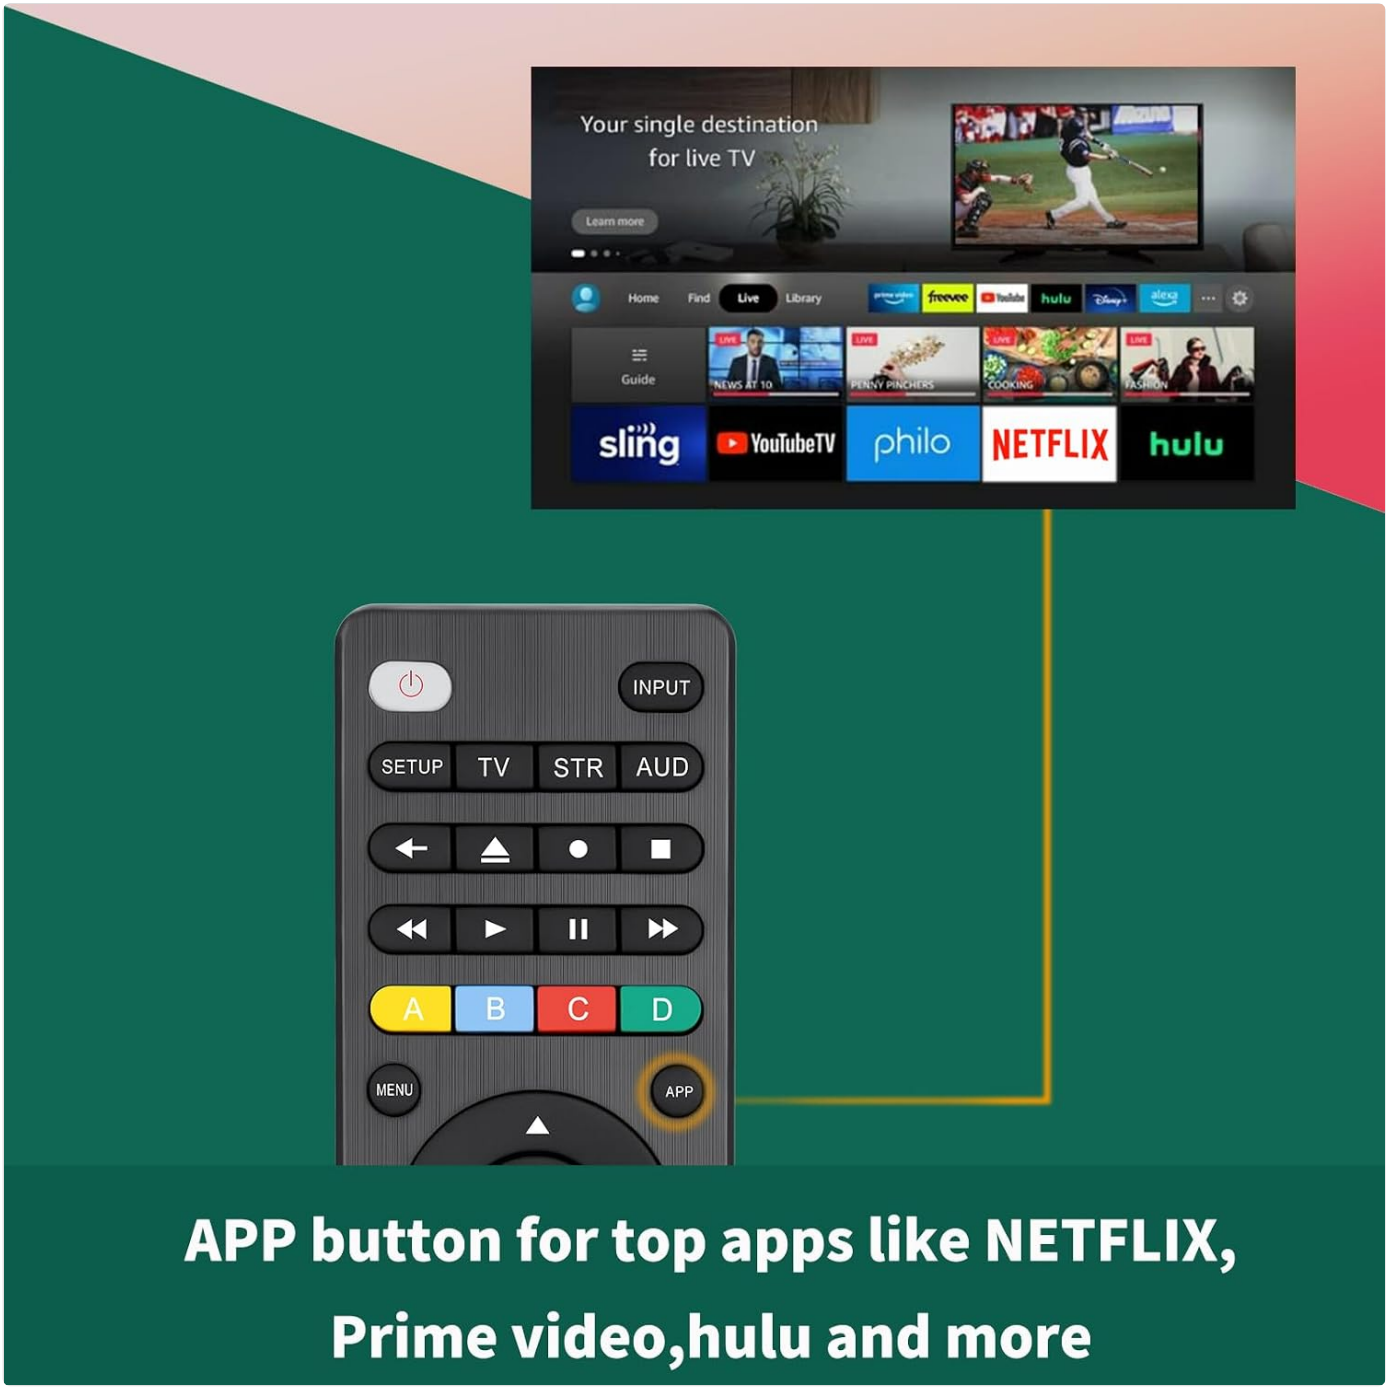



Figure 4: The APP button provides quick access to streaming services.

## 6. Compatibility

### 6.1 Compatible Devices

This universal remote control is designed to work with a wide range of major brands and supports thousands of the latest audio/video equipment. It can operate up to 3 different components simultaneously.

- **Televisions (TVs):** Compatible with brands such as Samsung, LG, Sony, Philips, Hisense, Insignia, Toshiba, Emerson, Vizio, Roku Smart TVs, and more.
- **Media Streaming Players:** Compatible with various media streaming players (*Note: This refers to IR-based streaming players, not RF streaming sticks*).
- **Sound Bar Audio:** Compatible with various soundbar audio systems.
- **DVD/Blu-ray Players:** Compatible with standard DVD and Blu-ray players.

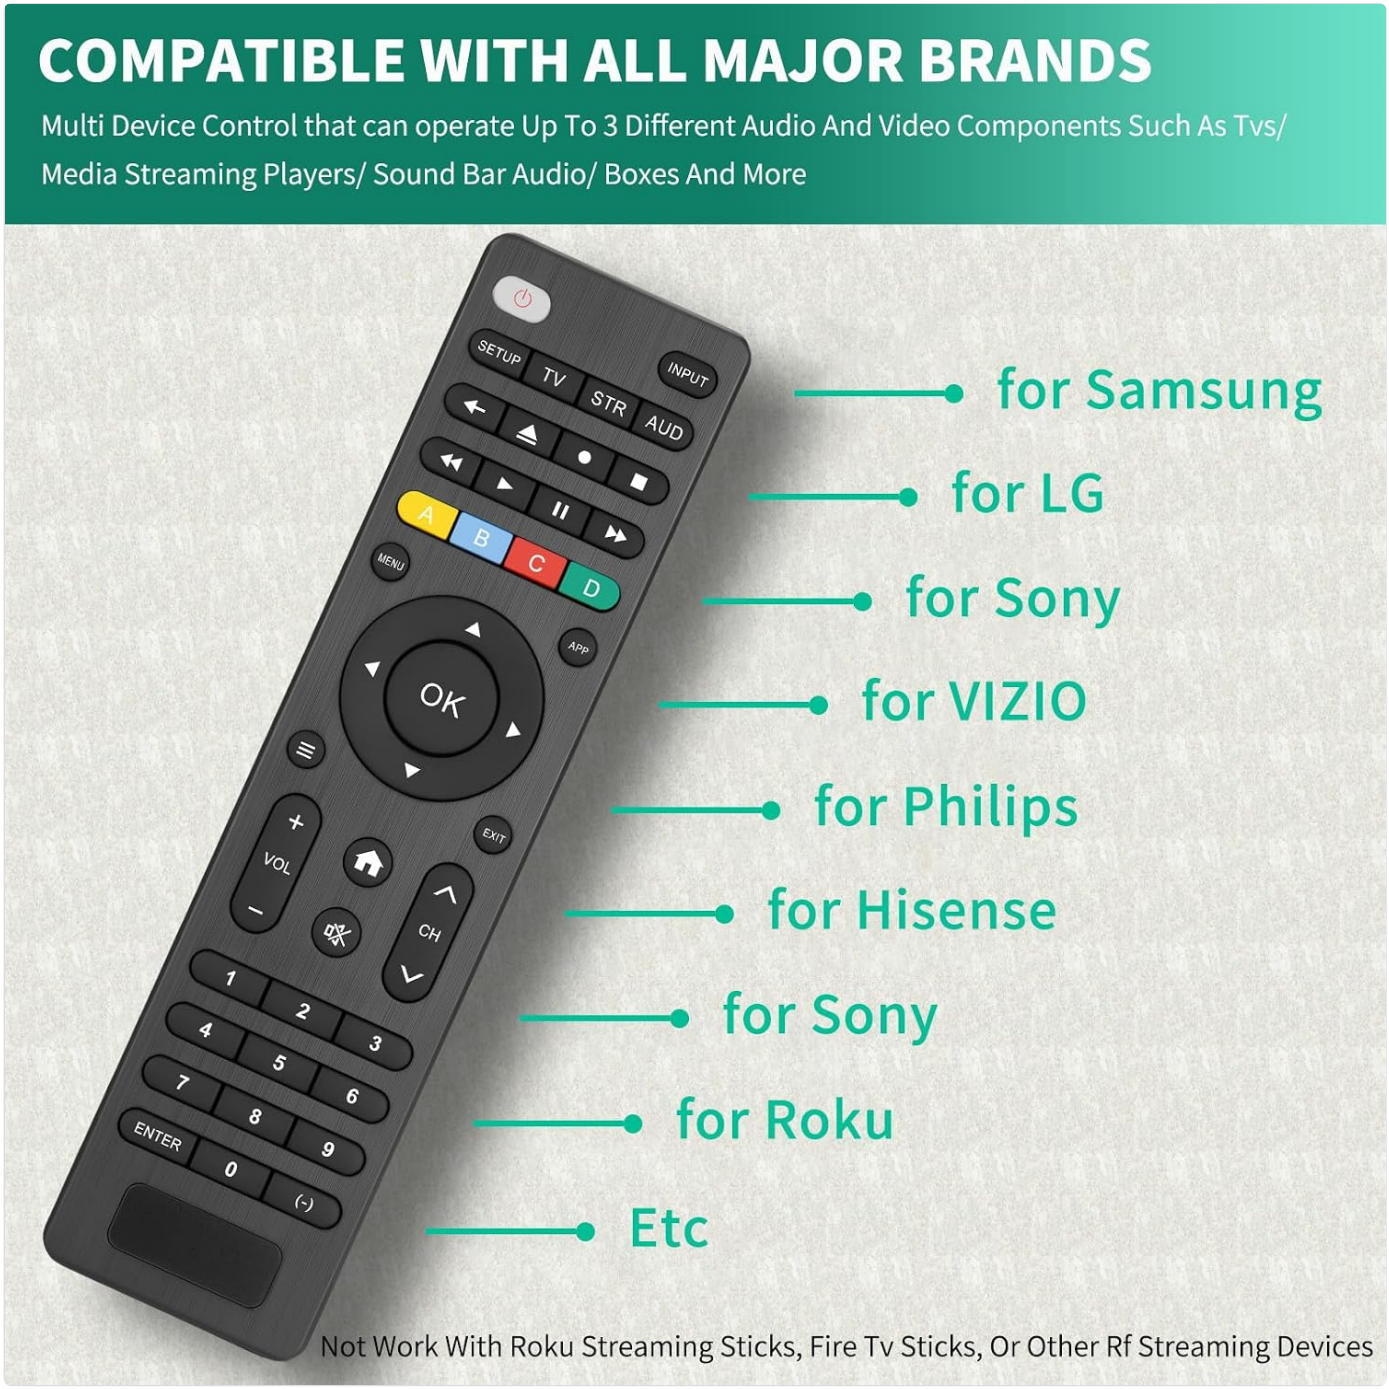



Figure 5: Examples of compatible major TV brands.




Figure 6: The remote can operate up to three separate devices.

### 6.2 Incompatible Devices

This universal remote control is **NOT compatible** with the following types of devices:

- Roku Streaming Sticks
- Fire TV Sticks
- Other RF (Radio Frequency) Streaming Devices




Figure 7: Devices that are not compatible with this remote control.

## 7. Troubleshooting

| Problem | Possible Cause / Solution |
| --- | --- |
| Remote does not control the device. | • Batteries are low or inserted incorrectly. Replace batteries or check polarity.<br>• Incorrect 4-digit code entered. Re-program the remote using a different code from the code list.<br>• The device is not compatible. Refer to the "Incompatible Devices" section.<br>• Obstruction between remote and device. Ensure a clear line of sight. |

| Problem | Possible Cause / Solution |
|---|---|
| Red indicator light does not turn on during programming. | • Batteries are dead or missing. Install new AAA batteries.<br>• SETUP button not held long enough. Hold for at least 3 seconds. |
| Some buttons work, but others do not. | • The selected code may not fully support all functions of your device. Try another code from the list.<br>• Some advanced functions may not be supported by a universal remote. |
| Remote is sluggish or unresponsive. | • Batteries are low. Replace with fresh AAA batteries.<br>• Infrared emitter might be dirty. Clean the front of the remote with a soft, dry cloth. |

## 8. Specifications

| Feature | Detail |
|---|---|
| Product Dimensions | 6.6 x 1.5 x 0.6 inches |
| Item Weight | 2.39 ounces |
| ASIN | B0CJTHS792 |
| Batteries Required | 2 AAA batteries (not included) |
| Max Number of Supported Devices | 3 |
| Compatible Devices | Television, DVD/Blu-ray Player, Media Streaming Players (IR-based), Sound Bar Audio |
| Color | Black |
| Manufacturer | Maxitoc |
| Date First Available | September 25, 2023 |

## 9. Maintenance

To ensure the longevity and optimal performance of your Maxitoc Universal Remote Control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish or internal components.
- **Storage:** When not in use for extended periods, store the remote in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for more than a few weeks.
- **Avoid Liquids:** Keep the remote away from water and other liquids. If liquid enters the remote, it can cause damage to the circuitry.

## 10. Warranty and Support

Maxitoc is committed to providing quality products. For any questions, technical support, or warranty inquiries regarding your Universal TV Remote Control, please contact Maxitoc customer service through the retailer where the product was purchased or visit the official Maxitoc website for support information.

Please retain your purchase receipt as proof of purchase for warranty claims.

© 2023 Maxitoc. All rights reserved.
This manual is for informational purposes only. Maxitoc reserves the right to make changes to product specifications without prior notice.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

**Open the live page**

**https://manuals.plus/asin/B0CJTHS792**

More documents and user manuals: **https://manuals.plus/**