Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

YOLOEMOT T10

YOLOEMOT T10 Bluetooth Speaker User Manual

Model: T10

Introduction

Thank you for purchasing the YOLOEMOT T10 Bluetooth Speaker. This portable speaker is designed to provide high-fidelity audio with enhanced bass, 12 hours of playtime, and IPX5 water resistance, making it suitable for various indoor and outdoor environments. Please read this manual carefully before use to ensure proper operation and to maximize your listening experience.



Image: The YOLOEMOT T10 Bluetooth Speaker in orange, highlighting its compact and portable design.

Package Contents

Please check the package for the following items:

- YOLOEMOT T10 Bluetooth Speaker
- USB Charging Cable
- 3.5mm Audio Cable (AUX Cable)
- Lanyard
- User Manual

Product Overview

Familiarize yourself with the speaker's components and controls.



Image: A diagram illustrating the various buttons and ports on the YOLOEMOT T10 speaker, including power, volume, play/pause, and input ports.



Image: A close-up view of the speaker's side panel, detailing the control buttons for power, volume, and mode selection.

Button Functions:

- **Power Button:** Press and hold to power on/off. Short press to play/pause.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Mode Button (M):** Short press to switch between Bluetooth, AUX, and TF Card modes.
- **TWS Button:** Press to initiate or cancel True Wireless Stereo pairing.

Setup

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show charging status and turn off when fully charged.
A full charge provides approximately 12 hours of playtime.

2. Power On/Off

- **To Power On:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the indicator light flashes.
- **To Power Off:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the indicator light turns off.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (the indicator light will flash blue).
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "YOLOEMOT T10" from the list of devices.
4. Once connected, you will hear a confirmation sound, and the indicator light will turn solid blue.

The speaker will automatically attempt to reconnect to the last paired device when powered on.

4. True Wireless Stereo (TWS) Pairing

To achieve a stereo sound experience, you can pair two YOLOEMOT T10 speakers together.



Image: Two YOLOEMOT T10 speakers positioned to demonstrate True Wireless Stereo (TWS) pairing for an immersive audio experience.

1. Ensure both T10 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), short press the TWS button. The speaker will enter TWS pairing mode, indicated by a flashing light.

3. The two speakers will automatically connect to each other. You will hear a confirmation sound once TWS pairing is successful.
4. Now, connect your device to the primary speaker via Bluetooth as described in "3. Bluetooth Pairing". The audio will play through both speakers in stereo.
5. To disconnect TWS, short press the TWS button on either speaker.

5. AUX-in Mode

For non-Bluetooth devices, use the 3.5mm audio cable.

1. Connect one end of the 3.5mm audio cable to the speaker's AUX-in port.
2. Connect the other end to the audio output jack of your device.
3. The speaker will automatically switch to AUX mode, or you can manually switch using the Mode button.

6. TF Card Mode

To play music directly from a memory card:

1. Insert a TF (MicroSD) card with MP3 audio files into the TF card slot on the speaker.
2. The speaker will automatically switch to TF Card mode, or you can manually switch using the Mode button.

Operating Instructions

Basic Music Controls

- **Play/Pause:** Short press the Power button.
- **Volume Up:** Short press the "+" button.
- **Volume Down:** Short press the "-" button.
- **Next Track:** Long press the "+" button.
- **Previous Track:** Long press the "-" button.

Call Functions (in Bluetooth Mode)

- **Answer Call:** Short press the Power button.
- **End Call:** Short press the Power button during a call.
- **Reject Call:** Long press the Power button.
- **Redial Last Number:** Double press the Power button.

Maintenance

- Keep the speaker away from extreme temperatures, direct sunlight, and corrosive substances.
- Clean the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the charging port's silicone cover is securely closed when near water to maintain IPX5 water resistance.
- Do not submerge the speaker directly in water. IPX5 rating protects against splashes and light rain.
- When not in use for extended periods, charge the speaker at least once every three months to preserve battery life.



Image: The YOLOEMOT T10 speaker shown with water splashing on it, illustrating its IPX5 water resistance for outdoor and wet environments.

Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Bluetooth not enabled on device; speaker not in pairing mode; too far from device.	Ensure Bluetooth is on. Put speaker in pairing mode. Move device closer (within 12 meters).
No sound.	Volume too low; incorrect mode selected; device not playing audio.	Increase speaker and device volume. Check if correct mode (Bluetooth/AUX/TF) is selected. Ensure audio is playing on the source device.
TWS pairing fails.	Speakers already connected to another device; speakers too far apart.	Disconnect speakers from any Bluetooth devices. Ensure speakers are close to each other during TWS pairing.
Poor sound quality/distortion.	Low battery; device too far; interference.	Charge the speaker. Move device closer. Avoid obstacles or other wireless devices causing interference.

Specifications

Model Name	T10
Brand	YOLOEMOT

Connectivity Technology	Bluetooth 5.3
Wireless Range	Up to 12 meters
Speaker Output Power	5 Watts
Audio Driver Size	45 Millimeters
Frequency Response	20 KHz (Upper limit)
Water Resistance	IPX5 (Splash-proof, rain-proof)
Battery Life	Up to 12 Hours
Charging Port	USB
Dimensions (D x W x H)	2.6" x 2.6" x 3.78" (66mm x 66mm x 96mm)
Weight	5.6 ounces
Audio Input	Bluetooth, 3.5mm AUX, TF Card

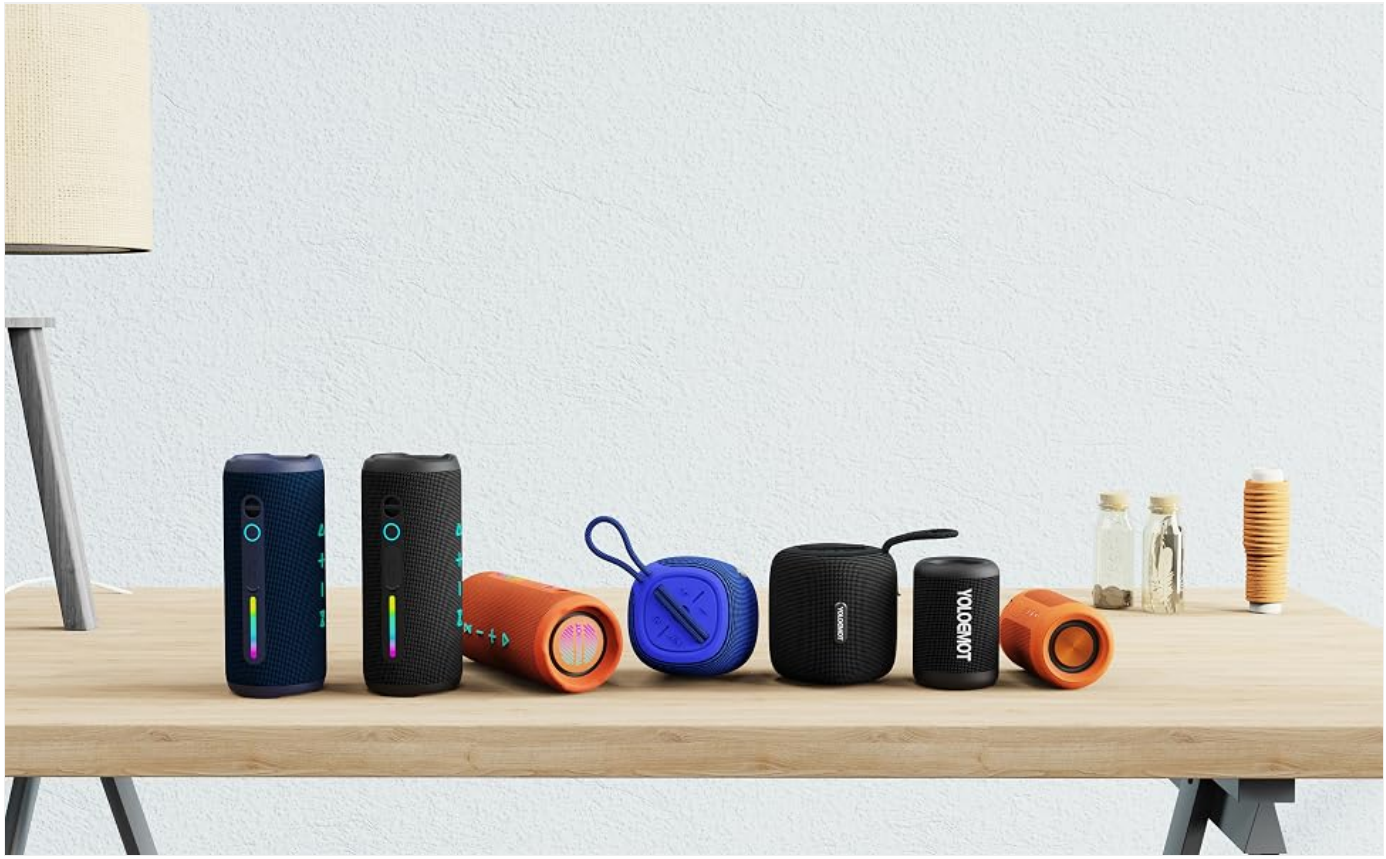


Image: A technical diagram detailing the dimensions (66mm x 66mm x 96mm) and port locations, including the waterproof silicone cover, of the YOLOEMOT T10 speaker.

Warranty and Support

The YOLOEMOT T10 Bluetooth Speaker comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.
The warranty does not cover:

- Damage caused by misuse, abuse, accident, or neglect.
- Damage from unauthorized repairs or modifications.

- Normal wear and tear.

For warranty claims or technical support, please contact YOLOEMOT customer service through the retailer where the product was purchased or visit the official YOLOEMOT website for contact information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CK125L67

More documents and user manuals: **https://manuals.plus/**