Beurer 10213

Beurer MP84BLK Nail Pro Deluxe - Instruction Manual

Model: 10213 | Brand: Beurer

Introduction

Thank you for choosing the Beurer MP84BLK Nail Pro Deluxe. This professional manicure and pedicure kit is designed to provide comprehensive nail care from the comfort of your home. It features a cordless, rechargeable electric nail file with various attachments, an integrated LED light, and a convenient charging and storage case. Please read this instruction manual thoroughly before first use to ensure safe and optimal operation.

Important Safety Information

Always read and follow all safety instructions provided in the full instruction manual before operating the device. Keep this manual for future reference.

Package Contents

Verify that all items listed below are included in your package:

- Beurer MP84BLK Nail Pro Deluxe Device
- 2-in-1 Charging and Storage Case
- 10 High-Quality Attachments (Sapphire and Felt)
- USB-C Charging Cable
- Protective Nail Dust Cap
- Instruction Manual



Image: The complete Beurer MP84BLK Nail Pro Deluxe kit, showcasing the main device, the charging and storage case, and the full set of 10 interchangeable attachments.

Setup and Charging

Initial Charging

Before first use, fully charge the device.

1. Connect the USB-C charging cable to the charging port on the storage case.
2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a computer USB port.
3. Place the Beurer MP84BLK device into the designated slot within the charging case.
4. The LED indicators on the device will illuminate to show charging progress. A full charge typically takes approximately 2 hours, providing up to 2 hours of cordless operation.



Image: The Beurer MP84BLK device securely placed within its charging and storage case, illustrating the integrated charging function.

Attaching and Removing Bits

The device comes with 10 high-quality attachments for various nail care tasks.

1. Ensure the device is turned off before attaching or removing any bits.
2. Gently push the desired attachment into the opening at the tip of the device until it clicks securely into place.
3. To remove an attachment, gently pull it straight out from the device.



Image: The Beurer MP84BLK device displayed alongside its 10 high-quality sapphire and felt attachments, ready for selection and use.

Operating Instructions

Powering On/Off and Speed Settings

The device features an intuitive control panel for easy operation.

- To turn on the device, press the power button.
- Use the '+' and '-' buttons to adjust between the 3 available speed settings. Lower speeds are suitable for delicate tasks like buffing natural nails or removing gel polish, while higher speeds are effective for grinding thick toenails or removing acrylic/dip nails.
- The integrated LED light automatically illuminates the treatment area for enhanced precision.
- To turn off the device, press the power button again.

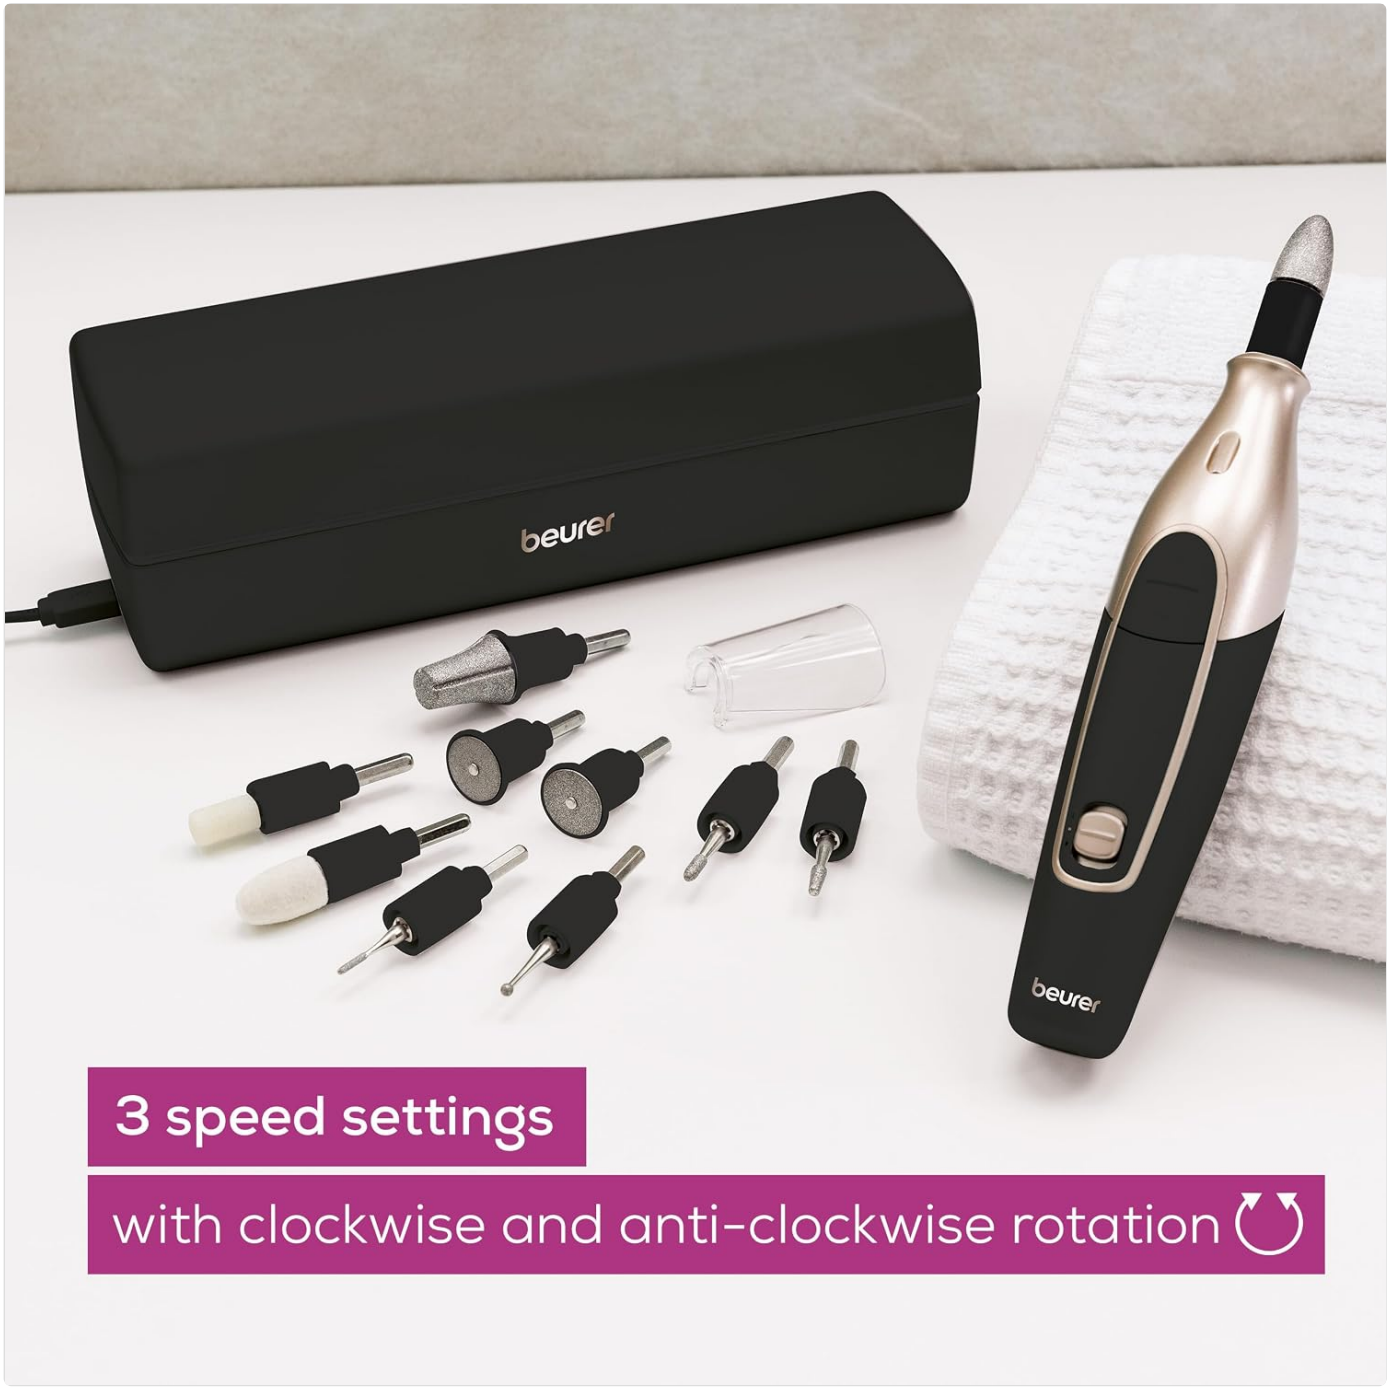


Image: Close-up of the Beurer MP84BLK device highlighting its control panel with buttons for adjusting the 3 speed settings and selecting clockwise or anti-clockwise rotation.

Dual Rotation

The device supports both clockwise and anti-clockwise rotation, allowing for comfortable use on both left and right hands/feet. Select the desired rotation direction using the dedicated switch on the device.

Using the Attachments

Each of the 10 attachments is designed for a specific purpose. Refer to the full instruction manual for detailed guidance on each attachment's function and recommended usage. Always apply gentle pressure and move the device smoothly over the nail or skin area.



Image: A hand comfortably holding the Beurer MP84BLK device, emphasizing its ergonomic design and cordless functionality for ease of use.

Care and Maintenance

Cleaning the Device and Attachments

- Always turn off and unplug the device before cleaning.
- Wipe the main unit with a soft, slightly damp cloth. Do not immerse the device in water.
- The attachments can be cleaned with a brush or a damp cloth. For thorough cleaning, some attachments may be disinfected with alcohol, as specified in the full manual.
- Ensure all parts are completely dry before storing.

Storage

Store the device and all attachments in the provided 2-in-1 charging and storage case. This keeps the components organized, protected, and ready for the next use. Store in a cool, dry place away from direct sunlight.

Troubleshooting

If you encounter any issues with your Beurer MP84BLK, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the USB-C cable and charging case.
Attachments are loose or fall out.	Attachment not inserted correctly.	Ensure the attachment is pushed firmly into the device until it clicks into place.
Device stops during use.	Overheating or low battery.	Allow the device to cool down. Recharge the battery if low. Avoid excessive pressure during use.
LED light not working.	Malfunction.	Contact customer support if the issue persists after charging.

For more detailed troubleshooting or issues not listed here, please consult the comprehensive instruction manual or contact Beurer customer support.

Technical Specifications

- **Model:** 10213 (MP84BLK)
- **Power Source:** Battery Powered (1 Lithium Ion battery, included)
- **Voltage:** 5 Volts (DC)
- **Battery Life:** Up to 2 hours cordless operation
- **Attachments:** 10 high-quality sapphire and felt attachments
- **Speed Settings:** 3 adjustable speeds
- **Rotation:** Clockwise and Anti-clockwise
- **Features:** Integrated LED light, Ergonomic anti-slip design, 2-in-1 charging and storage case, Protective nail dust cap
- **Product Dimensions:** 9.33 x 3.86 x 3.23 inches
- **Item Weight:** 0.67 Kilograms (1.48 Pounds)
- **Manufacturer:** Beurer
- **UPC:** 810110200272



Image: The Beurer MP84BLK device accompanied by a visual summary of its key features, including 2 hours of cordless operation, 10 attachments, LED display, dual rotation, 3 speed settings, protective dust cap, and charging storage box.

Warranty and Support

Beurer products are manufactured with high quality standards. For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included in your package or visit the official Beurer website.

Beurer Official Website: www.beurer.com

© 2024 Beurer GmbH. All rights reserved.