Emerson EPCD-2000

Emerson EPCD-2000 Portable Bluetooth CD Player

User Manual

1. Introduction

Thank you for purchasing the Emerson EPCD-2000 Portable Bluetooth CD Player. This device combines the classic experience of CD playback with modern Bluetooth connectivity and FM radio functionality. Designed for portability, it features a built-in speaker and a rechargeable battery, allowing you to enjoy your audio entertainment anywhere. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

2. Important Safety Instructions

Please read and understand all safety instructions before using this product. Keep these instructions for future reference.

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Clean only with a dry cloth.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
- Do not open the casing; there are no user-serviceable parts inside.
- Dispose of batteries properly, following local regulations.

3. Package Contents

Verify that all items listed below are included in your package:

- Emerson EPCD-2000 Portable Bluetooth CD Player
- Wired Stereo Earbuds

- User Manual
- Warranty Card

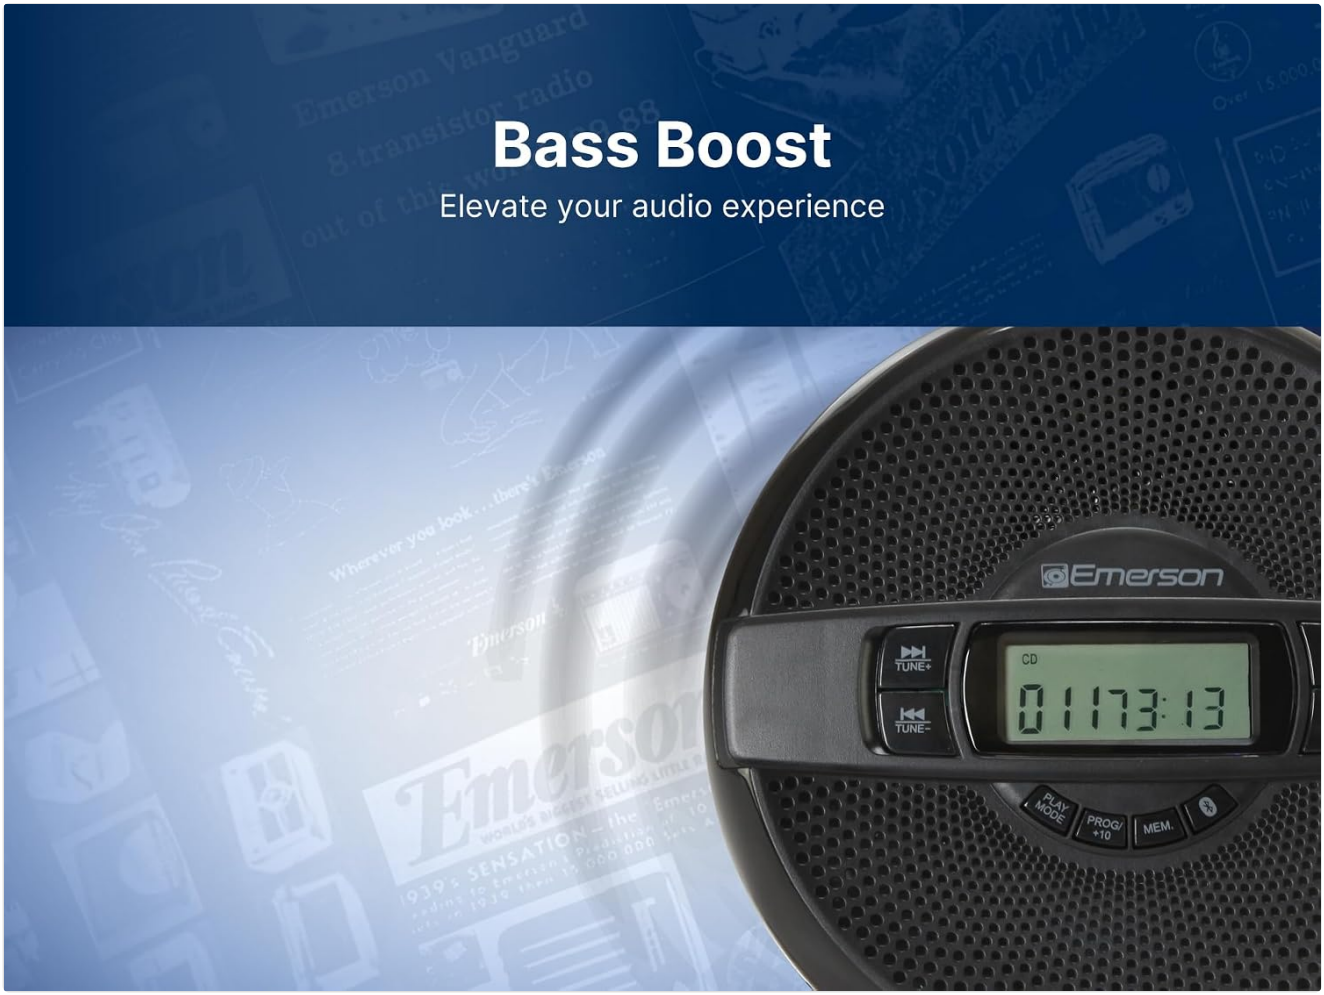


Image: The Emerson EPCD-2000 CD Player shown alongside its included wired earbuds.

4. Product Overview

The Emerson EPCD-2000 features a compact design with intuitive controls for easy operation across its various functions.



Image: Top view of the Emerson EPCD-2000 Portable Bluetooth CD Player, highlighting the central display and control buttons.

Key Features:

- **Portable CD Player:** Supports CD, CD-R, CD-RW, and CD-MP3 formats.
- **Bluetooth Connectivity:** Stream audio wirelessly to external Bluetooth speakers or headphones.
- **FM Radio:** Built-in FM tuner for listening to local radio stations.
- **Built-in Speaker:** Provides clear audio playback without external devices.
- **Rechargeable Battery:** Integrated battery for portable use.
- **Programmable Memory:** Create custom playlists with up to 20 tracks.
- **Bass Boost:** Enhance low-frequency audio for a richer sound experience.

5. Setup

5.1 Powering the Device

The EPCD-2000 can be powered via its internal rechargeable battery or by connecting it to a USB power source

(adapter not included).

- **Charging the Internal Battery:** Connect the included USB cable to the unit's USB port and to a standard USB power adapter (5V/1A recommended) or a computer's USB port. The charging indicator will illuminate.
- **Battery Operation:** Ensure the unit is fully charged for optimal portable use. A full charge provides up to 5 hours of playtime.



Image: The Emerson EPCD-2000 CD Player being used outdoors, demonstrating its battery-powered portability.

5.2 Initial Power On

Press and hold the **POWER** button to turn the unit on. The LCD display will illuminate.

6. Operating Instructions

6.1 CD Playback

1. Open the CD compartment cover by gently lifting it.
2. Place a CD with the label side facing up onto the spindle.
3. Close the CD compartment cover firmly until it clicks.
4. Press the **PLAY/PAUSE** button to start playback.
5. Use the **SKIP FORWARD** and **SKIP BACKWARD** buttons to navigate between tracks.
6. Press the **STOP** button to stop playback.



Image: A user enjoying CD playback with the Emerson EPCD-2000, demonstrating its primary function.

6.2 Bluetooth Pairing

The EPCD-2000 can transmit audio wirelessly to Bluetooth-enabled headphones or speakers.

1. Turn on the EPCD-2000.
2. Press the **MODE** button repeatedly until 'BT' appears on the display. The Bluetooth indicator will flash, indicating pairing mode.
3. Enable Bluetooth on your receiving device (headphones or speaker) and set it to pairing mode.
4. Select 'EPCD-2000' from the list of available devices on your receiving device.
5. Once paired, the Bluetooth indicator on the EPCD-2000 will stop flashing and remain solid. Audio will now stream wirelessly.



Image: A user wirelessly streaming audio from the Emerson EPCD-2000 to Bluetooth headphones.

6.3 FM Radio Operation

1. Turn on the EPCD-2000.
2. Press the **MODE** button repeatedly until 'FM' appears on the display.
3. Press and hold the **TUNE+** or **TUNE-** buttons to automatically scan for the next available station.
4. Press the **TUNE+** or **TUNE-** buttons briefly to fine-tune the frequency manually.



Image: The Emerson EPCD-2000 being used to listen to FM radio in an outdoor setting.

6.4 Programmable Tracks (CD Mode)

You can program up to 20 tracks to play in a specific order.

1. In CD mode, with the CD stopped, press the **PROG** button. The display will show 'P01'.
2. Use the **SKIP FORWARD** or **SKIP BACKWARD** buttons to select the desired track for the first program slot.
3. Press **PROG** again to confirm the selection and move to the next program slot ('P02').
4. Repeat steps 2 and 3 until all desired tracks are programmed (up to 20).
5. Press the **PLAY/PAUSE** button to start playback of the programmed sequence.

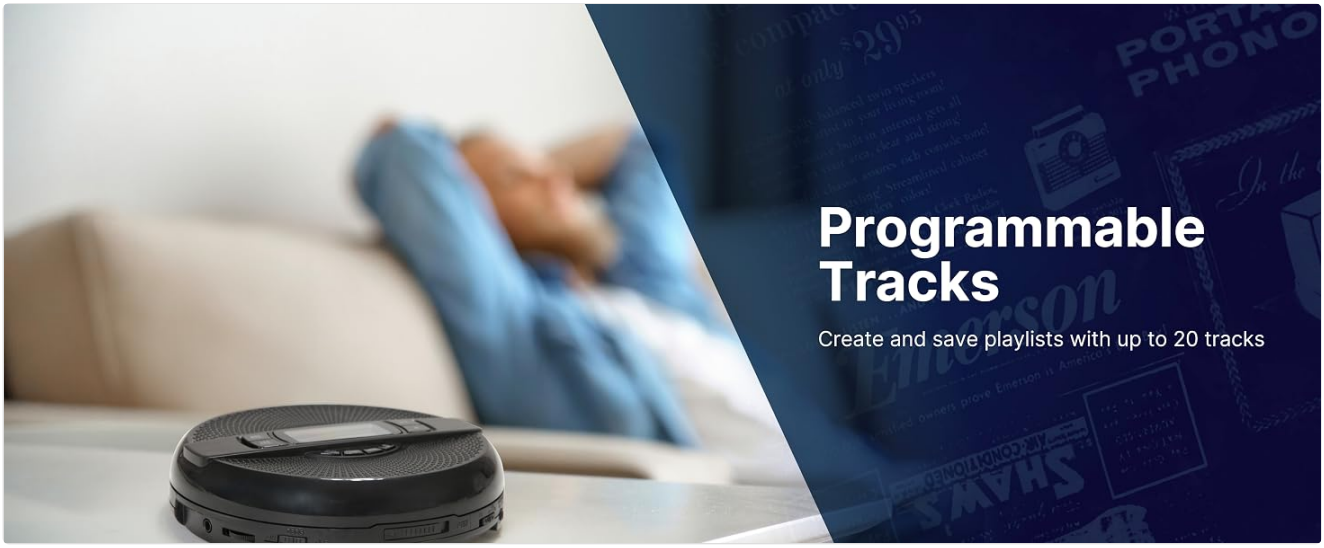


Image: The Emerson EPCD-2000 being used indoors, highlighting its programmable track feature for customized listening.

6.5 Bass Boost Function

To activate or deactivate the Bass Boost feature, press the **BASS BOOST** button. This will enhance the low-frequency output for a more pronounced bass sound.



Image: A visual representation of the Bass Boost feature on the Emerson EPCD-2000, showing enhanced sound output.

7. Maintenance and Care

- Keep the unit clean by wiping it with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the unit to direct sunlight, dust, or excessive humidity.
- When not in use for extended periods, store the unit in a cool, dry place.
- Handle CDs by their edges to prevent scratches. Clean CDs with a soft, lint-free cloth, wiping from the center outwards.

8. Troubleshooting

Problem	Possible Cause	Solution
Unit does not power on.	Battery is depleted.	Charge the unit using the USB cable.
CD does not play.	CD is dirty or scratched.	Clean the CD or try another CD.
No sound from speaker/headphones.	Volume is too low.	Increase the volume.
Bluetooth pairing fails.	Receiving device not in pairing mode or too far.	Ensure receiving device is in pairing mode and within range (approx. 30 ft).
Poor FM radio reception.	Weak signal.	Adjust the unit's position or location for better reception.

9. Specifications

Feature	Detail
Model Number	EPCD-2000
Product Dimensions	5.5 x 5.5 x 1.5 inches
Item Weight	7.7 ounces

Feature	Detail
Connectivity Technology	Bluetooth
Special Feature	Programmable Memory
Power Source	Rechargeable Battery / USB (5V/1A)
CD Compatibility	CD, CD-R, CD-RW, CD-MP3
FM Radio Frequency	Standard FM band



Image: A visual representation of the Emerson EPCD-2000's physical dimensions and weight.

10. Warranty and Support

For warranty information or technical support, please refer to the warranty card included in your package or visit the official Emerson website. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question