Everycom LittleBoy

Everycom LittleBoy Portable Bluetooth Speaker User Manual

Model: LittleBoy | Brand: Everycom

1. INTRODUCTION

Thank you for choosing the Everycom LittleBoy Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of the device.

Safety Information

- Do not expose the speaker to extreme temperatures or direct sunlight.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble or attempt to repair the speaker yourself. This will void the warranty.
- Keep the speaker away from water and liquids, despite its waterproof rating, to prevent damage to ports when open.
- Use only the provided Type-C charging cable for charging.

2. PACKAGE CONTENTS

Please check the box for the following items:

- Everycom LittleBoy Bluetooth Speaker
- Type-C Charging Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

Figure 3.1: Everycom LittleBoy Portable Bluetooth Speaker (Black)

This image displays the Everycom LittleBoy speaker in black, featuring its compact design and the distinctive orange carrying strap. The speaker grille is visible on the front.

Controls and Ports

Figure 3.2: Top Panel Controls

This image shows the top panel of the speaker with its easy-to-use button controls. From left to right, these typically include Mode, Previous Track, Play/Pause, Next Track, Volume Down, and Volume Up buttons.

Figure 3.3: Connectivity Options

This image highlights the various connectivity ports located on the rear of the speaker: AUX input, Micro SD card slot, Type-C charging port, and USB slot for pen drives. The model number LBHBC50006 is also visible.

The Everycom LittleBoy speaker features intuitive button controls on its top surface and multiple connectivity ports on its rear. These include:

- **Mode Button (M):** Switches between Bluetooth, FM Radio, AUX, USB, and Micro SD modes.
- **Previous Track / Volume Down (-):** Short press for previous track, long press to decrease volume.
- **Play/Pause Button (►❚❚):** Plays or pauses audio. Also used for answering/ending calls.
- **Next Track / Volume Up (+):** Short press for next track, long press to increase volume.
- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable.
- **Micro SD Card Slot:** For playing audio files directly from a Micro SD card.
- **Type-C Charging Port:** For charging the speaker's internal battery.
- **USB Slot:** For playing audio files directly from a USB pen drive.
- **Inbuilt Microphone:** For hands-free calling.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C charging cable to the speaker's Type-C port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes approximately 1.5 hours.
The speaker offers up to 20 hours of playtime on a single charge, depending on volume level and usage.

4.2 Powering On/Off

To power on the speaker, press and hold the Power button (usually integrated with the Play/Pause button or a dedicated button, refer to Figure 3.2 for exact location) for a few seconds until you hear an audible prompt. To power off, press and hold the same button again.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the Mode button (M) until you hear the Bluetooth pairing prompt.
2. Enable Bluetooth on your smartphone, tablet, or other device.
3. Search for "Everycom LittleBoy" in the list of available Bluetooth devices.
4. Select "Everycom LittleBoy" to connect. Once connected, you will hear a confirmation sound.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.

5.2 True Wireless Stereo (TWS) Pairing

Figure 5.1: True Wireless Stereo Connectivity

This image illustrates two Everycom LittleBoy speakers wirelessly connected to each other, demonstrating the True Wireless Stereo (TWS) functionality for enhanced stereo sound.

The TWS feature allows you to connect two Everycom LittleBoy speakers together for a true stereo sound experience.

1. Ensure both Everycom LittleBoy speakers are powered on and in Bluetooth mode, but not connected to any other device.

2. On one of the speakers (this will be the primary speaker), long press the Play/Pause button until you hear a pairing tone.

3. The two speakers will automatically search and pair with each other. Once paired, you will hear a confirmation sound.

4. Now, connect your device (smartphone, tablet) to the primary speaker via Bluetooth as described in Section 5.1. Audio will play through both speakers in stereo.

5.3 FM Radio Mode

To enter FM Radio mode, press the Mode button (M) until you hear the FM radio prompt. For best reception, ensure you

are in an outdoor area. To auto-scan and save available stations, long press the Play/Pause button. Use the Previous/Next track buttons to switch between saved stations.

5.4 USB / Micro SD Card Playback

Insert a USB pen drive or a Micro SD card (with audio files) into the respective slot. The speaker will automatically switch to USB or Micro SD mode and begin playing audio files. Use the Previous/Next track and Play/Pause buttons to control playback.

5.5 AUX Input Mode

Connect an external audio device (e.g., MP3 player, computer) to the speaker's AUX input port using a 3.5mm audio cable. Press the Mode button (M) until you enter AUX mode. Audio will now play from your connected device through the speaker.

5.6 Hands-Free Calling

When connected to your smartphone via Bluetooth, the speaker's inbuilt microphone allows for hands-free calling.

- **Answer Call:** Short press the Play/Pause button.
- **End Call:** Short press the Play/Pause button during a call.
- **Reject Call:** Long press the Play/Pause button when a call comes in.

6. MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the ports free of dust and debris.
- Store the speaker in a cool, dry place when not in use for extended periods.
- Charge the speaker at least once every three months to maintain battery health if not used regularly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from device.	Ensure speaker is in Bluetooth pairing mode. Turn on device Bluetooth. Move speaker closer to device (within 10 meters).
No sound.	Volume too low; incorrect mode; audio source issue.	Increase speaker and device volume. Press Mode button to select correct input. Check audio source.
FM radio reception is poor.	Weak signal; indoor interference.	Move to an outdoor location or an area with better signal.
TWS pairing fails.	Speakers already connected to other devices; too far apart.	Ensure both speakers are disconnected from other devices. Place speakers close to each other during TWS pairing.

8. SPECIFICATIONS

Feature	Detail
Model Name	LittleBoy
Brand	Everycom
Speaker Type	Portable Speaker
RMS Power Output	8 Watts
Connectivity Technology	Bluetooth, AUX, USB, Micro SD
Bluetooth Version	(Not specified in input, assuming standard)
Battery Capacity	1200 Milliamp Hours
Playtime	Up to 20 hours
Product Dimensions (D x W x H)	6.8D x 13.3W x 7.8H Centimeters
Item Weight	424 Grams
Waterproof	Yes (True)
Special Features	Aux Connectivity, Bass Boost, Built-In Microphone, FM (Radio), USB Port, TWS Feature
Manufacturer	SherForge Bharat Pvt Ltd

9. WARRANTY AND SUPPORT

The Everycom LittleBoy Portable Bluetooth Speaker comes with a **1 Year Manufacturer Warranty** from the date of purchase.

This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims or technical support, please contact Everycom customer service through their official channels.

Please retain your purchase receipt as proof of purchase for warranty validation.

For more information, you may visit the Everycom Store on Amazon.in.

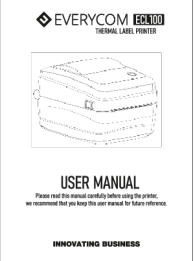**Related Documents - LittleBoy**

[Mirascreen Wireless Display Adapter User Manual - Setup and Guide](#)
Comprehensive user manual for the Mirascreen Wireless Display Adapter. Learn how to set up, connect, and use Mirascreen with iOS, Android, Windows, and Mac devices. Includes troubleshooting and firmware upgrade information.

	[AnyCast Wireless Display Adapter User Manual](#) Comprehensive user manual for the AnyCast Wireless Display Adapter, covering setup, hardware installation, companion app usage, and mirroring instructions for iOS, Android, Windows, and Mac devices.
	[Everycom EC801B Thermal Receipt Printer User Manual](#) User manual for the Everycom EC801B Thermal Receipt Printer, covering setup, features, technical specifications, and troubleshooting.
	[EVERYCOM ECL100 Thermal Label Printer User Manual](#) Comprehensive user manual for the EVERYCOM ECL100 Thermal Label Printer, covering installation, operation, safety, maintenance, specifications, and troubleshooting. Learn how to set up and use your printer efficiently.
	[Everycom HQ10W Projector User Guide: Setup, Features, and Operation](#) Comprehensive user guide for the Everycom HQ10W projector. Learn about remote control functions, interface connections, settings, app management, Miracast, focusing, maintenance, and technical specifications.
	[Technotech Solutions: Projectors and Home Cinema Equipment](#) Technotech Solutions offers a wide range of projectors, including 3D Active Shutter Glasses, DLP 3D Android WiFi HD LED Projectors, and portable projectors. They are manufacturers, suppliers, and traders known for quality-assured products and competitive pricing.