LUXOAK CNS004

LUXOAK CNS004 Nightstand with Charging Station User Manual

Model: CNS004 | Brand: LUXOAK

1. Introduction

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your LUXOAK CNS004 Nightstand with Charging Station. Please read this manual thoroughly before assembly and use to ensure safe and efficient operation.

The LUXOAK CNS004 is a farmhouse-style nightstand designed with two drawers for storage and an integrated charging station featuring AC outlets and USB ports. It is constructed from durable MDF and engineered wood with metal handles.

2. Safety Information

WARNING: Do not overload the nightstand. The maximum weight recommendation for the top surface is 100 lbs. Always follow assembly instructions carefully to ensure stability and prevent tipping. Ensure all electrical connections are secure and comply with local electrical codes. Do not expose the charging station to liquids.

For indoor use only. Keep away from direct heat sources and excessive moisture.

3. Package Contents

Before beginning assembly, verify that all parts are present and undamaged. Refer to the included assembly guide for a detailed list of components.

- Nightstand components (engineered wood panels, drawers, hardware)
- Integrated Charging Station (2 AC outlets, 2 USB ports)
- Assembly Guide
- Required assembly tools (not included, typically screwdriver, hammer)



Image 3.1: Overview of the LUXOAK CNS004 Nightstand set, highlighting the integrated charging cables.

4. Specifications

Feature	Detail
Brand	LUXOAK
Model Name	Nightstand with Charging Station
Model Number	CNS004
Color	Grey (Rustic Wood Finish)
Product Dimensions (D x W x H)	15.7"D x 17.7"W x 24"H
Item Weight	62 Pounds (per unit, for a set of 2, total 124 lbs)
Maximum Weight Recommendation	100 Pounds (top surface)
Frame Material Type	Engineered Wood
Handle Material	Metal

Number of Drawers	2 per nightstand (Total 4 for a set of 2)
Charging Station	2 Standard AC Outlets (125V/12A), 2 USB Ports (5V/2.1A)
Assembly Required	Yes (Multi-step self-assembly, 2 people recommended)
Care Instructions	Wipe with Damp Cloth

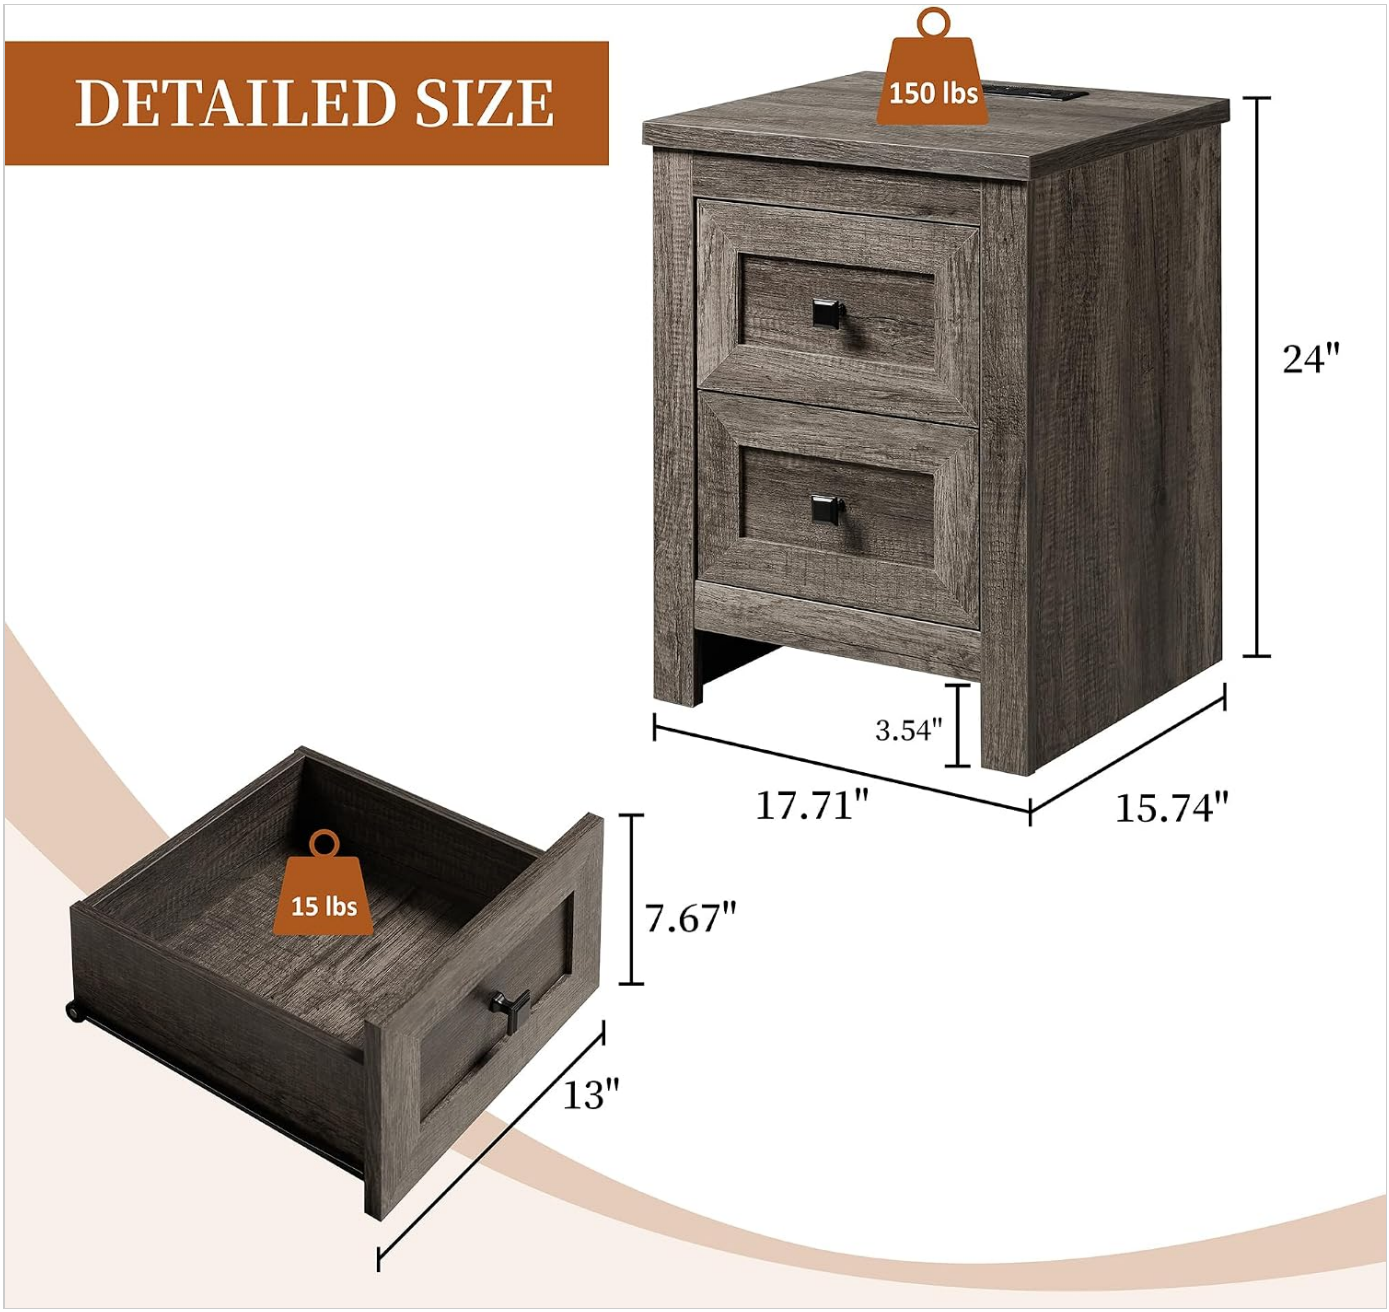


Image 4.1: Detailed dimensions and weight capacities of the LUXOAK CNS004 Nightstand.

5. Setup and Assembly

Assembly is required for this product. It is recommended that two people assemble the nightstand to ensure stability and ease of construction. Please follow the step-by-step instructions provided in the included Assembly Guide.

5.1 Before You Begin

- Clear a spacious area for assembly.
- Unpack all components and lay them out on a soft, clean surface to prevent scratches.

- Identify all parts and hardware using the provided list in the Assembly Guide.
- Gather necessary tools (e.g., Phillips head screwdriver, hammer).

5.2 Assembly Steps (General Overview)

1. Attach the side panels to the base and top panels.
2. Install drawer slides onto the side panels.
3. Assemble the drawers and attach handles.
4. Insert the assembled drawers into the nightstand frame.
5. Install the integrated charging station into the designated slot on the top panel.
6. Connect the power cord from the charging station.



Image 5.1: Visual representation of the assembly process, indicating multi-step self-assembly and the recommendation for two people.



Image 5.2: Details of the nightstand's features, including cable management and drawer mechanisms.

6. Operating the Charging Station

The integrated charging station provides convenient power access for your electronic devices.

6.1 Power Connection

- After assembly, plug the nightstand's power cord into a standard wall outlet.
- Ensure the cable is routed through the designated cable holes at the back of the nightstand to maintain a tidy appearance and prevent damage.

6.2 Using AC Outlets

- The charging station includes two 125V/12A AC outlets.
- Plug in devices such as lamps, laptops, or other small appliances.
- Do not exceed the maximum current rating of 12A.

6.3 Using USB Ports

- The charging station includes two 5V/2.1A USB ports.
- Connect your smartphones, tablets, or other USB-powered devices using appropriate USB cables.



Image 6.1: Illustration of the charging station's connectivity and how it powers devices.



Image 6.2: Detailed view of the charging station's ports and their capacity.

7. Maintenance

7.1 Cleaning

- Wipe the surface of the nightstand with a damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Ensure the charging station is unplugged before cleaning around electrical components.

7.2 General Care

- Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- Avoid placing hot items directly on the surface without protection.
- Keep the nightstand away from direct sunlight and extreme temperature changes to prevent warping or fading.

8. Troubleshooting

Problem	Possible Cause	Solution
Charging station not working.	Power cord not plugged in securely.	Ensure the power cord is fully inserted into a functional wall outlet.
Charging station not working.	Wall outlet is not active.	Test the wall outlet with another device or try a different outlet.
Charging station not working.	Device cable is faulty or device is not compatible.	Try a different charging cable or device to confirm the issue is with the nightstand.
Drawers are stiff or do not slide smoothly.	Drawer slides are not properly aligned or lubricated.	Check the alignment of the drawer slides. Apply a small amount of silicone lubricant if necessary. Ensure no obstructions are present.
Nightstand feels wobbly.	Loose fasteners or uneven floor.	Tighten all assembly screws. If the floor is uneven, use furniture pads or shims to stabilize.

9. Warranty and Support

9.1 Manufacturer's Warranty

LUXOAK provides a warranty for this product. The manufacturer warranty description states: "Provide damaged accessories for free within 24 months from the date of purchase." The general warranty type is 1 year.
For warranty claims or to request damaged accessories, please retain your proof of purchase and contact LUXOAK customer support.

9.2 Customer Support

For assistance with assembly, missing parts, or any other product-related inquiries, please refer to the contact information provided in your original purchase documentation or visit the LUXOAK store on Amazon: LUXOAK Store.
The product includes clear and detailed assembly instructions, and 24-hour after-sale service is available for support.

© 2025 LUXOAK. All rights reserved.