Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Luqeeg Luqeegyt3eudbc92

Luqeeg 3D Hologram Fan User Manual

Model: Luqeegyt3eudbc92

INTRODUCTION

The Luqeeg 3D Hologram Fan is an innovative holographic advertising display designed for projecting 3D visuals. It features 48 LEDs, a built-in speaker, and a transparent protective cover, making it suitable for various indoor and outdoor applications. This manual provides essential information for the safe and effective use of your device.



Image: The Luqeeg 3D Hologram Fan, showcasing its compact design with a transparent protective cover and a connected USB power cable.

Safety Information

- Ensure the device is placed on a stable, flat surface to prevent tipping.
- Keep the device away from water and excessive moisture.
- Do not attempt to open or repair the device yourself. Refer to qualified personnel for service.
- Keep out of reach of children due to rotating parts, even with the protective cover.
- Use only the provided power adapter and accessories.
- Avoid blocking the ventilation openings to prevent overheating.

Package Contents

Please verify that all items listed below are included in your package:

- 1 x Luqeeg 3D Hologram Fan
- 2 x Base Brackets

- 1 x Memory Card (Supports up to 16GB)
- 1 x Remote Control (Built-in 160mAh CR2025 Battery)
- 1 x Card Reader



Image: A complete view of the Luqeeg 3D Hologram Fan package contents, including the main unit, two base brackets, a memory card, a remote control, and a card reader.

Setup

1. Unpacking and Placement

Carefully remove all components from the packaging. Place the 3D Hologram Fan on a stable, flat surface. The transparent protective cover is pre-installed for safety and noise reduction.

2. Attaching Base Brackets (Optional)

If desired, attach the two provided base brackets to the bottom of the fan unit for enhanced stability or specific display angles. Ensure they are securely fastened.

3. Power Connection

Connect the USB power cable to the fan unit and then to a compatible USB power source (e.g., a USB wall adapter, computer USB port). The device will power on automatically.



Image: A top-down view of the 3D Hologram Fan, illustrating the internal LED blade and the USB power input connection.


Operating Instructions

1. Content Preparation

The 3D Hologram Fan supports various content formats including MP4, AVI, RMVB, MKV, GIF, JPG, and PNG. Prepare your desired 3D visuals or images in one of these formats.

2. Loading Content via Memory Card

1. Insert the included memory card into the card reader.
2. Connect the card reader to your computer.
3. Transfer your prepared content files to the memory card.
4. Safely eject the card reader from your computer.
5. Insert the memory card into the designated slot on the 3D Hologram Fan.
6. The device will automatically detect and begin playing the content.

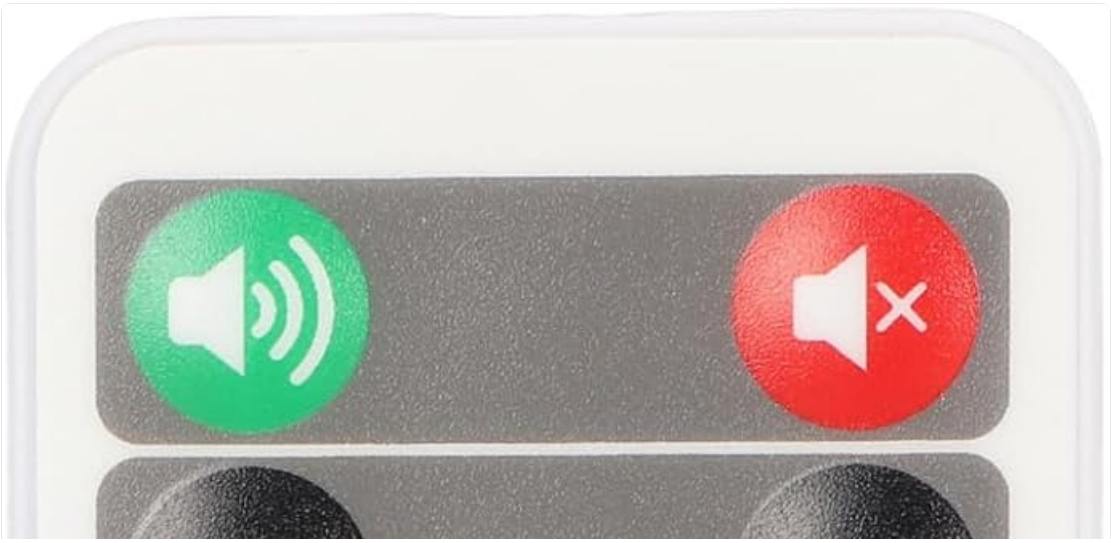

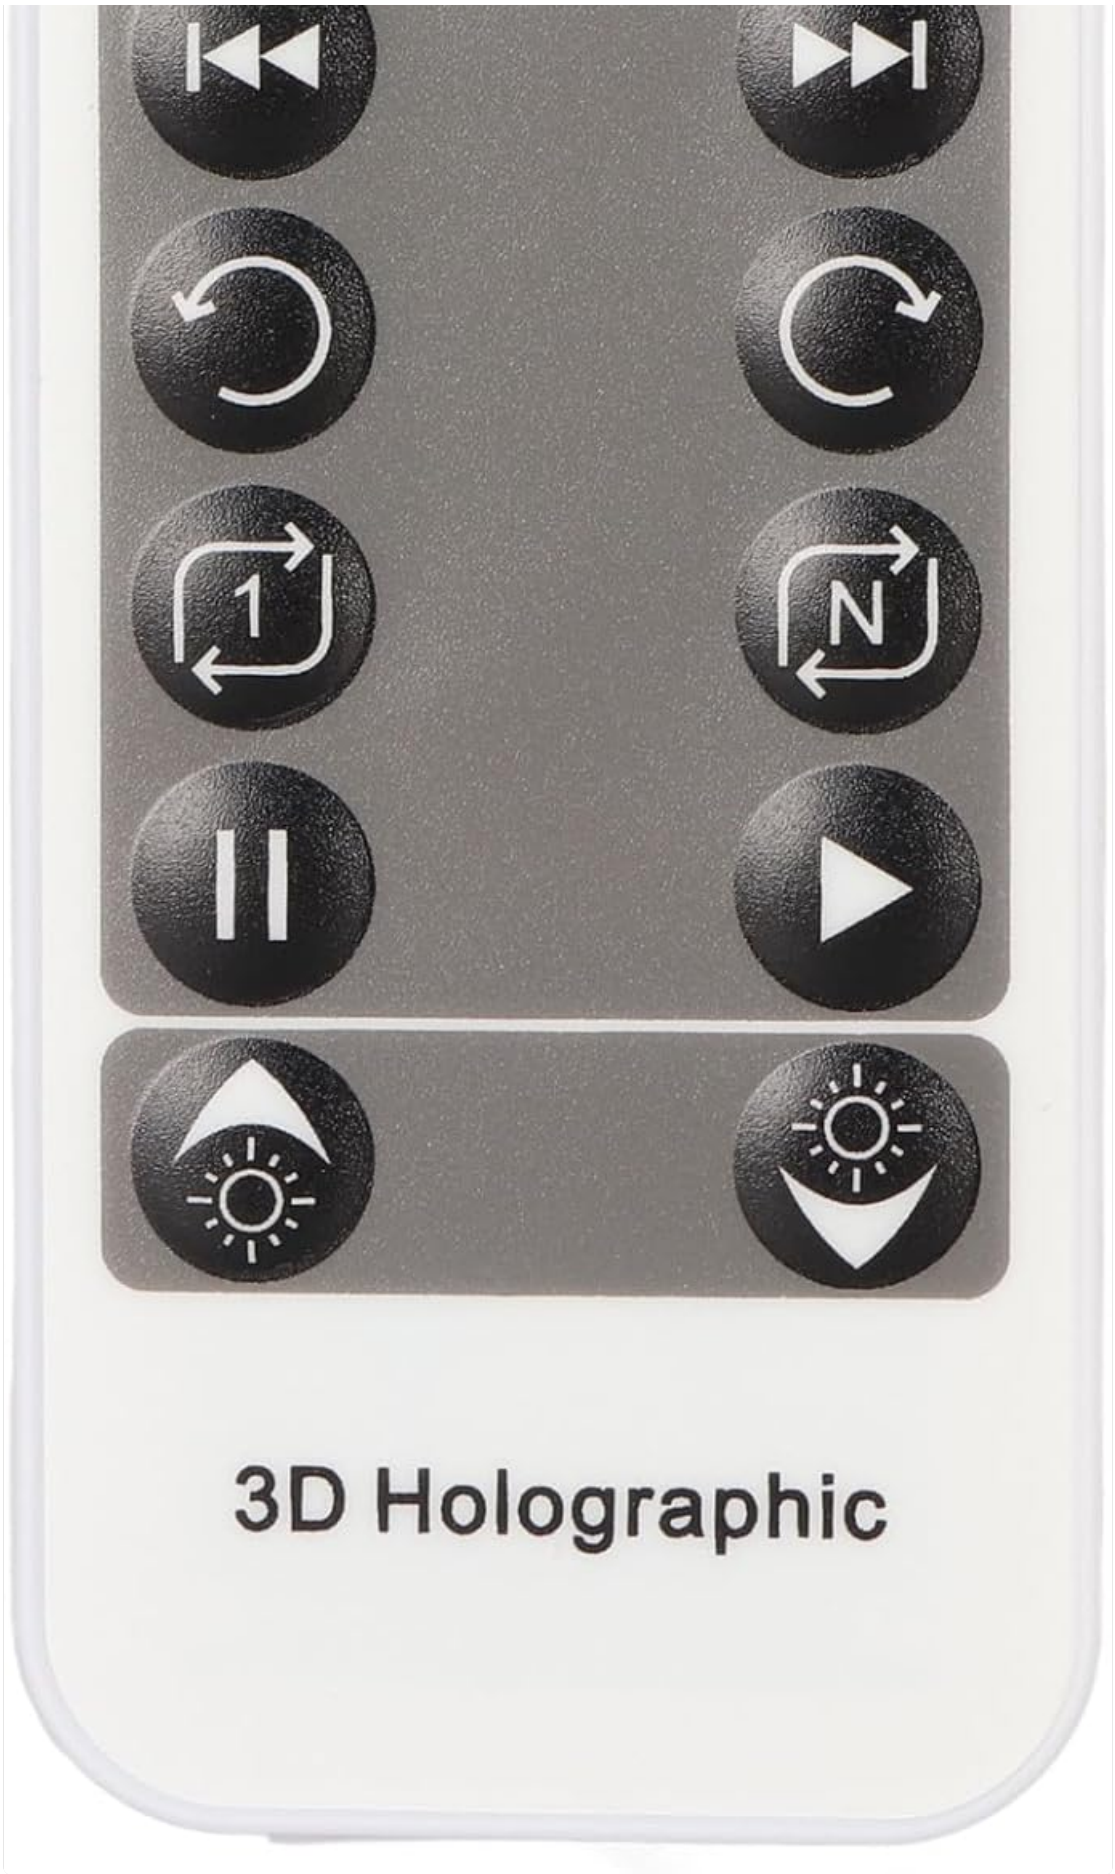


Image: The blue USB memory card reader, used for transferring content to the device's memory card.

3. Mobile App Control (5D Displayer)

For advanced control and content management, download the "5D Displayer" mobile application. Instructions for

downloading the app are available on the included memory card. The app allows for easy and fast data transfer, enabling you to access and play files from the 3D image database wirelessly.



Image: The 3D Hologram Fan with an overlay highlighting its WiFi compatibility for seamless content transfer and playback.

4. Remote Control Functions

Use the provided remote control to manage playback, adjust volume, and control other display settings. The remote control comes with a built-in CR2025 battery.

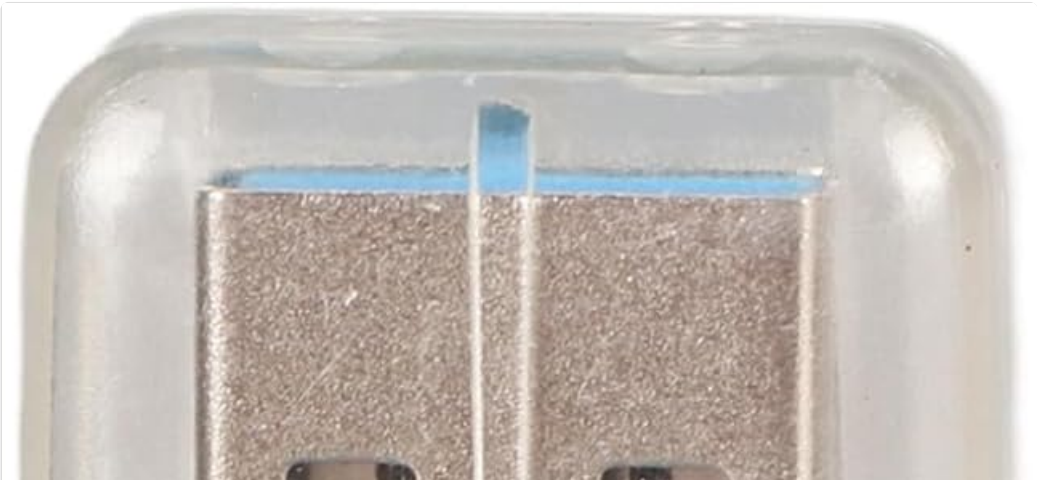




Image: The remote control for the 3D Hologram Fan, featuring buttons for volume, track navigation, loop modes, play/pause, and brightness adjustment.

Maintenance

- **Cleaning:** Gently wipe the transparent cover and the device's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Blade Care:** The LED blade is delicate. Avoid touching it directly. The transparent cover is designed to protect it during operation.

Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	No power supply or faulty connection.	Ensure the USB cable is securely connected to both the fan and a working power source. Try a different USB port or adapter.
No 3D image displayed.	Incorrect content format or memory card issue.	Verify content is in a supported format (MP4, AVI, RMVB, MKV, GIF, JPG, PNG). Ensure the memory card is properly inserted and contains valid files. Reformat the memory card if necessary (backup data first).
Remote control not working.	Battery drained or obstruction.	Ensure there is no obstruction between the remote and the fan. Replace the CR2025 battery in the remote control.
Image appears distorted or blurry.	Dust on cover or incorrect file resolution.	Clean the transparent cover with a soft cloth. Ensure your content files are of sufficient resolution for optimal display.

Specifications

Feature	Detail
Item Type	3D Hologram Fan
Material	PMMA, PC, Hardware
LEDs	48
Remote Control Battery	Built-in 160mAh CR2025 Battery
Memory Card Support	Up to 16GB (Included)
Mobile App Name	5D Displayer
Use Site	Indoor, Outdoor (Outdoor Needs Measures)
Useful Life	50,000 Hours
Package Dimensions	5.12 x 4.72 x 3.15 inches

Feature	Detail
Item Weight	3 pounds
Model Number	Luqeegyt3eudbc92

Warranty and Support

This product is typically covered by a return policy allowing for refunds or replacements within 30 days of purchase. For specific warranty details and technical support, please refer to the seller's information or contact Luqeeg customer service directly through their official channels or the platform where the product was purchased.
For further assistance, visit the Luqeeg Store on Amazon.

© 2024 Luqeeg. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CKXM319T

More documents and user manuals: **https://manuals.plus/**