ZdalaMit RC-978

User Manual for ZdalaMit RC-978 Replacement Remote Control

Applicable for Denon AV Receiver AVR-1905, AVR-1906, AVR-785, AVR-785S, AVR-19/78505

Product Overview

The ZdalaMit RC-978 is a direct replacement remote control designed for various Denon AV Receiver models. This remote offers immediate functionality without the need for complex programming or setup, providing a convenient solution for lost or damaged original remotes.

Key Features:

- No programming required; ready for use upon battery installation.
- Compatible with Denon AV Receiver models: AVR-1905, AVR-1906, AVR-785, AVR-785S, AVR-19/78505.
- Operates using 2X 1.5V AAA Alkaline Batteries (not included).





Figure 1: Front view of the RC-978 Replacement Remote Control.

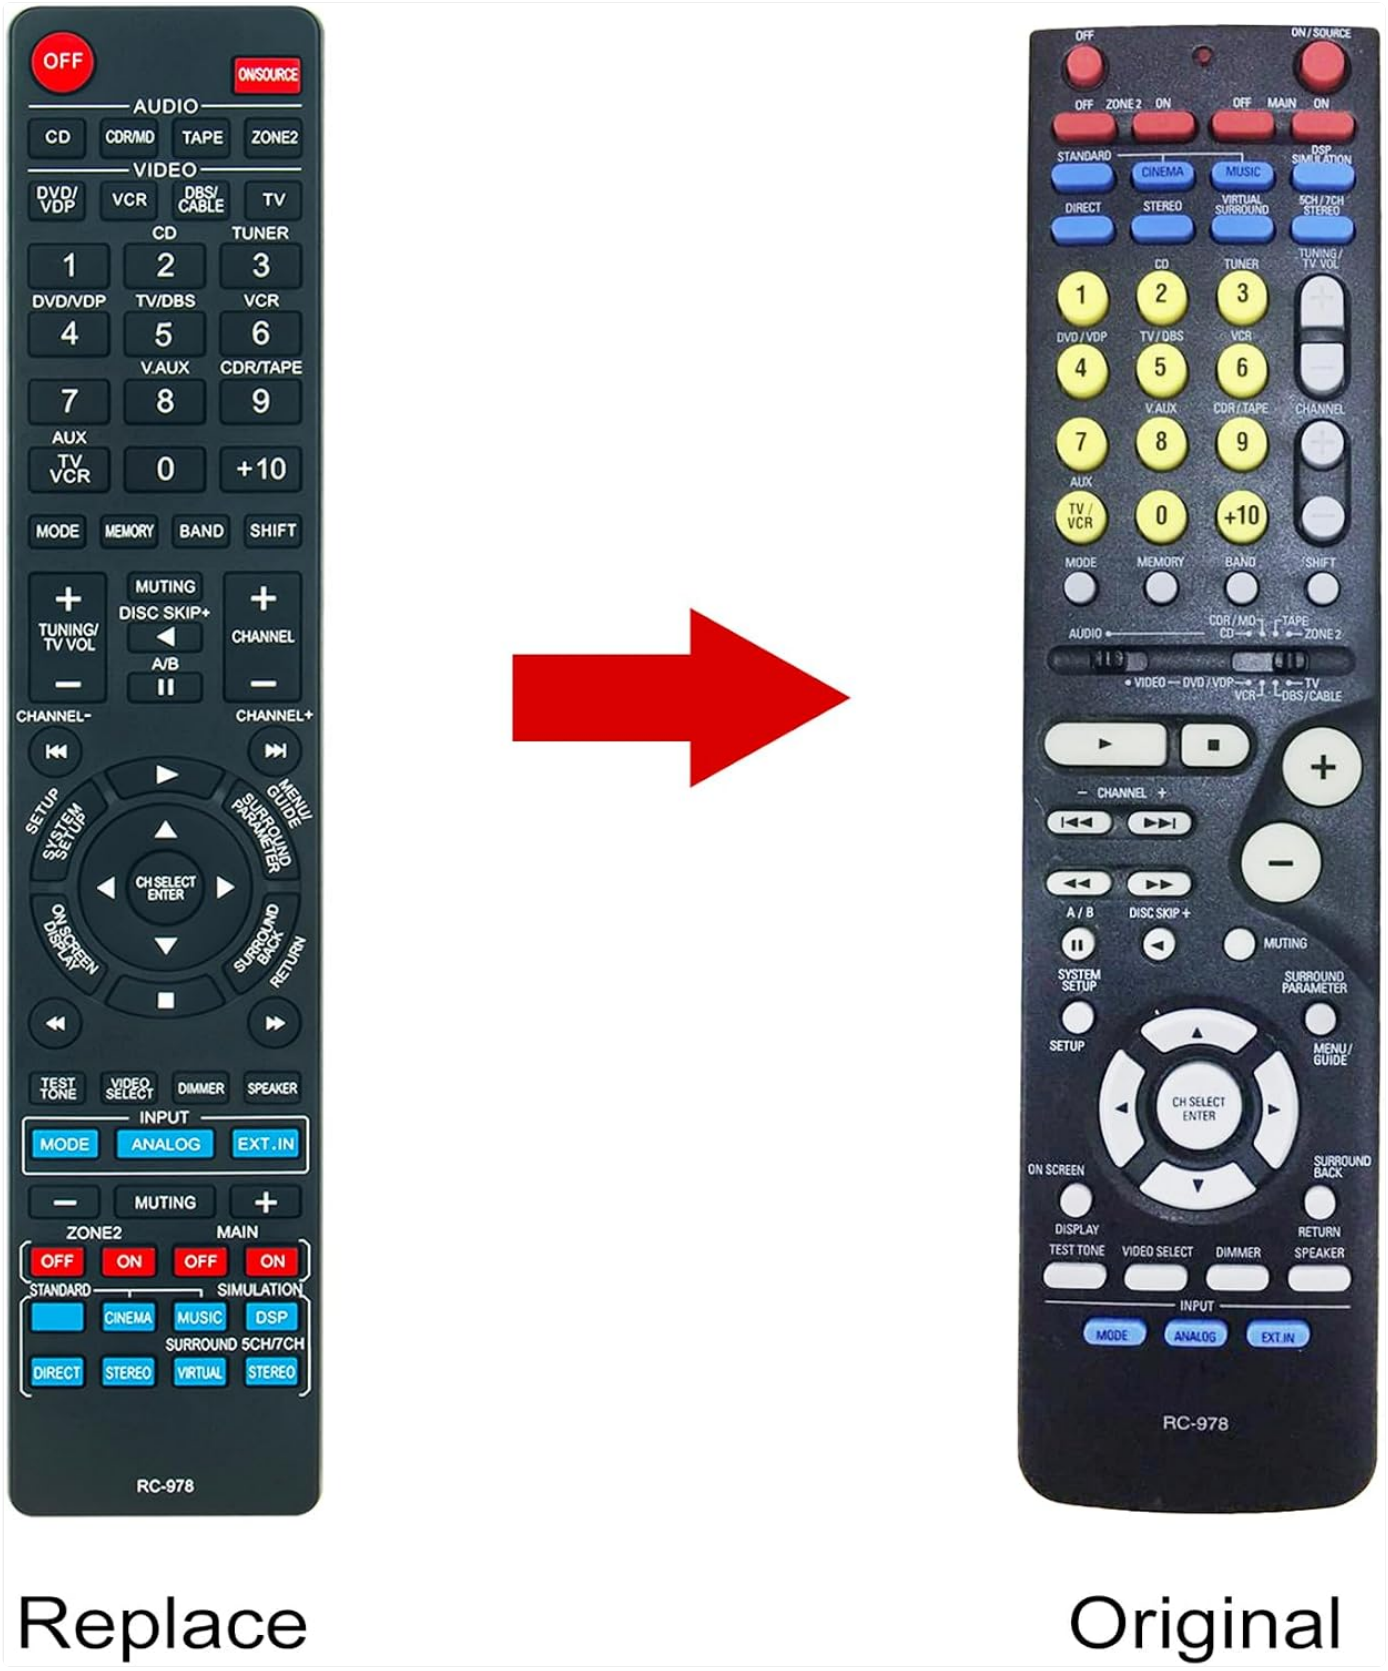


Figure 2: Comparison of the RC-978 Replacement Remote (left) and an Original Denon Remote (right).

Setup

Battery Installation

To begin using your RC-978 remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.

3. Insert two (2) 1.5V AAA Alkaline batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for immediate use with compatible Denon AV Receivers.

Operating Instructions

The RC-978 remote control is designed to replicate the functions of your original Denon AV Receiver remote. Below are common operations:

- **Power On/Off:** Press the **OFF** button located at the top left to turn the receiver on or off.
- **Input Selection:** Use the dedicated input buttons (e.g., **CD**, **DVD/VDP**, **TUNER**, **V.AUX**) to switch between different audio/video sources connected to your receiver.
- **Volume Control:** Adjust the volume using the **TUNING/TV VOL +** and **-** buttons.
- **Channel Navigation:** For tuner functions, use the **CHANNEL +** and **-** buttons.
- **Muting:** Press the **MUTING** button to temporarily silence the audio output. Press again to unmute.
- **Navigation Pad:** Use the central directional buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) and **CH SELECT ENTER** button for menu navigation and selection on your receiver's display.
- **Menu Access:** Buttons like **SETUP SYSTEM SETUP**, **MENU/GUIDE PARAMETER**, **ON SCREEN DISPLAY**, and **SURROUND BACK RETURN** provide access to receiver settings and menus.

Refer to your Denon AV Receiver's original manual for detailed instructions on specific functions and advanced settings.

Maintenance

Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries simultaneously with new 1.5V AAA Alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries. Obstruction between remote and receiver. Remote out of range.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity. Remove any objects blocking the line of sight between the remote and the receiver's IR sensor. Move closer to the receiver.
Certain buttons not working.	Dirty contacts under the button. Button malfunction.	Try cleaning the remote as per the Maintenance section. If cleaning does not resolve the issue, the button may be faulty.
Remote works intermittently.	Low battery power. Interference from other electronic devices.	Replace batteries. Ensure no strong light sources or other IR devices are interfering.

Specifications

Model Number	RC-978
Compatible Devices	Denon AV Receiver models: AVR-1905, AVR-1906, AVR-785, AVR-785S, AVR-19/78505
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Product Dimensions	5.9 x 1.57 x 0.55 inches (15 x 4 x 1.4 cm)
Item Weight	1.41 ounces (40 grams)
Color	Black
Special Feature	Ergonomic design

Warranty and Support

This product is designed for reliable performance. For any queries or assistance regarding the RC-978 Replacement Remote Control, please contact the seller or manufacturer directly. Your satisfaction is important, and support is available to address any concerns you may have.
Please refer to your purchase documentation for specific warranty terms and contact information.

© 2025 ZdalaMit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question