YITAHOME AEYIHIXPOj

YITAHOME Instant Pop-Up Gazebo User Manual

Model: AEYIHIXPOj

1. Important Safety Information

Please read and follow all assembly and usage instructions carefully for safe installation and operation. Failure to do so may result in injury or damage to the product.

- Ensure the gazebo is properly anchored on a stable surface, whether hard or soft ground.
- Be aware of sharp objects during assembly and disassembly.
- Keep children and pets away from the assembly area.
- Do not use the gazebo in extreme weather conditions such as heavy winds, storms, or heavy snowfall.
- Always secure the gazebo with the provided ropes and stakes, and use leg weight bags for added stability, especially in windy conditions.
- Store the gazebo in a dry, cool place between uses to prolong its lifespan.

2. Product Overview

The YITAHOME Instant Pop-Up Gazebo is designed for outdoor events, providing shelter and shade. It features a robust frame and a durable canopy.



Figure 2.1: The YITAHOME Instant Pop-Up Gazebo providing shade for an outdoor gathering. It is set up on grass with people seated around a table, demonstrating its spacious design.

Key Features:

- **All-Season Waterproof and Anti-UV Canopy:** Made from 420D Oxford fabric with PVC coating and a thick silver coating for UV blocking. Features heat-sealed seam technology for water protection and an arrow-shaped canopy to prevent rainwater accumulation.
- **Robust Steel Frame:** Powder-coated steel frame for rust resistance, with additional metal supports and fixed feet for stability against strong winds.
- **Adjustable Height:** Allows for free height adjustment to suit various needs.
- **Spacious Design:** 3 x 3 meter (approx. 10 x 10 ft) area accommodates multiple people.
- **Portable:** Folded size fits most car trunks. Designed with upgraded rocker feet for easier unlocking.
- **Multifunctional Use:** Suitable for sports events, outdoor vendors, campaigns, weddings, parties, craft fairs, beaches, barbecues, garden shade, or temporary storage.

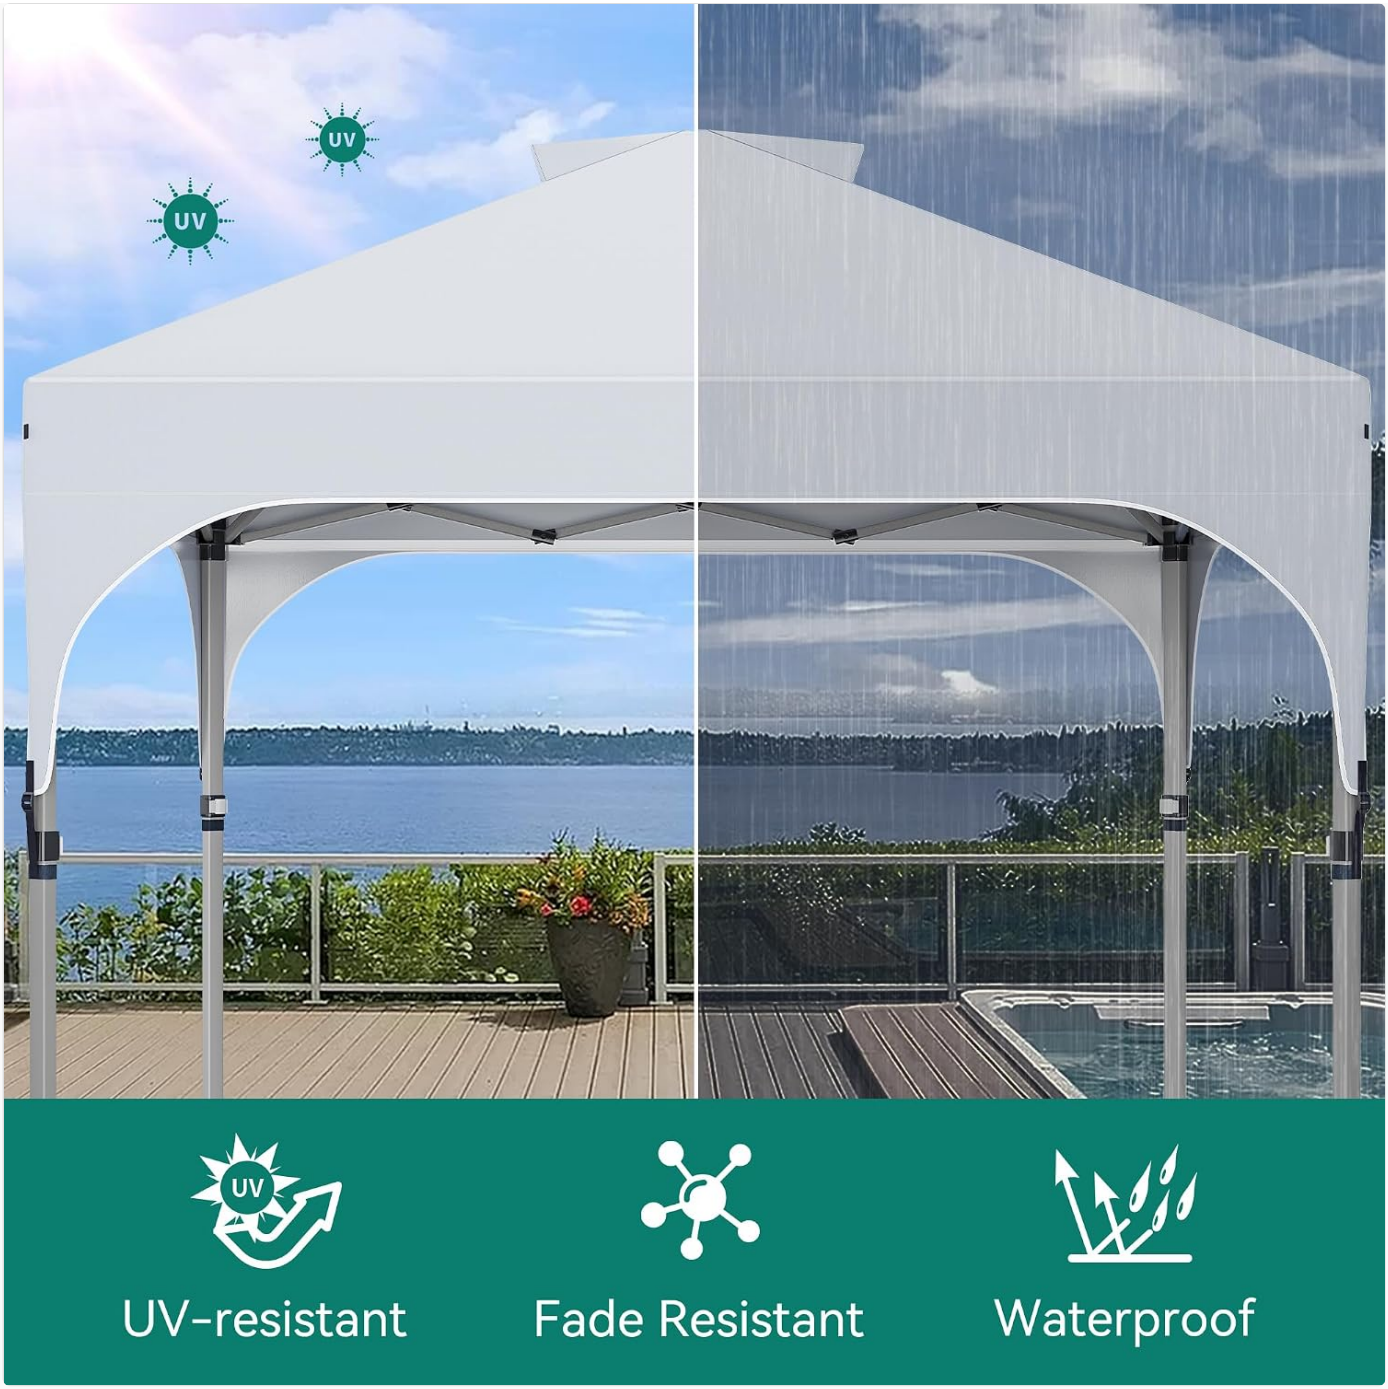


Figure 2.2: Illustration highlighting the canopy's UV-resistant, fade-resistant, and waterproof properties, with a split image showing sunny and rainy conditions.



Figure 2.3: Close-up images showing key features: the mechanism for 3 adjustable heights, an air vent on the canopy, a pull rope (guy rope) for securing, and a sandbag for leg weighting.

3. Setup Instructions

No tools are required for assembly. We recommend two people for easier setup, though it can be done by one person with some effort.

1. **Step 1: Open the Canopy Frame.** With a person on each side, gently pull the frame outwards until it is partially open.
2. **Step 2: Place the Canopy Fabric.** Drape the canopy fabric over the partially opened frame, ensuring the corners align with the frame's corners.
3. **Step 3: Push Up and Lock the Frame.** From underneath the canopy, push upwards on the central locking mechanism until it clicks into place, fully extending the frame.
4. **Step 4: Adjust the Height.** Use the upgraded rocker feet mechanisms on each leg to freely adjust the height to your desired level. Ensure all legs are locked at the same height.

5. **Step 5: Secure the Gazebo.** Attach the provided ropes to the canopy corners and stake them into the ground. Fill the four leg weight bags with sand or other suitable material and attach them to the gazebo legs for additional stability.

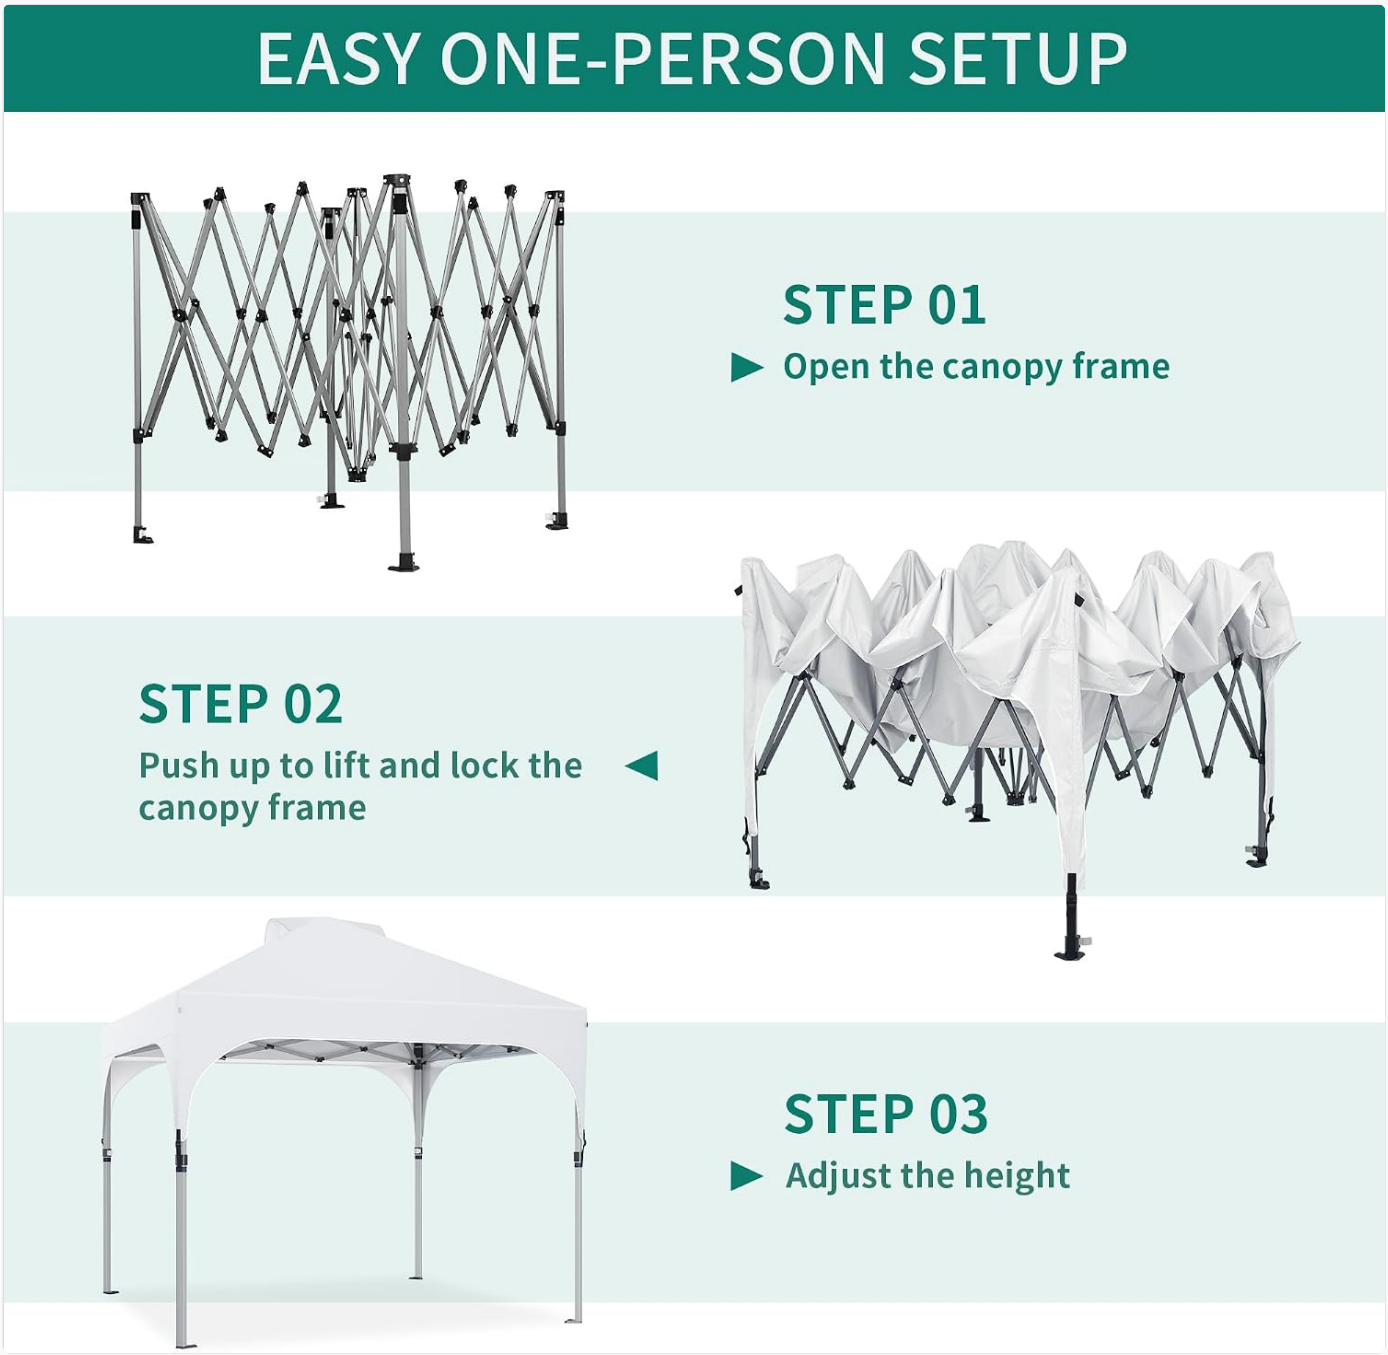


Figure 3.1: Visual guide for quick setup: 1) Open the canopy frame, 2) Push up to lift and lock the canopy frame, 3) Adjust the height.

4. Operating Instructions

Once assembled and secured, the YITAHOME Gazebo provides a versatile outdoor shelter.

- **Usage:** The gazebo is suitable for various outdoor activities such as picnics, market stalls, beach trips, garden parties, or as a temporary car shelter.
- **Height Adjustment:** The height can be adjusted as needed. Always ensure the gazebo is empty and stable before adjusting the height. Unlock the rocker feet mechanisms on each leg, adjust to the desired height, and re-lock securely.
- **Disassembly:** To disassemble, reverse the setup steps. Unlock the height adjustments, lower the legs, unlock the central frame mechanism, and gently fold the frame inwards. Remove the canopy fabric before folding the frame

completely.

- **Portability:** After disassembly, place the folded frame and canopy into the provided wheeled carry bag for easy transport and storage.

5. Maintenance

Proper maintenance will extend the life of your YITAHOME Gazebo.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow the fabric to air dry completely before folding and storing.
- **Frame Care:** Inspect the steel frame periodically for any signs of rust or damage. Clean any dirt or debris from the frame. If rust appears, clean it and apply a rust-inhibiting paint.
- **Storage:** Always store the gazebo in its carry bag in a dry, cool place when not in use. Ensure the canopy is completely dry to prevent mold and mildew.
- **Inspection:** Before each use, inspect all components (frame, canopy, ropes, stakes, weight bags) for wear, tear, or damage. Replace any damaged parts immediately.

6. Troubleshooting

Here are some common issues and their solutions:

- **Gazebo is unstable:**
  - Ensure all legs are fully extended and locked at the same height.
  - Verify that the central frame locking mechanism is engaged.
  - Use all provided ropes, stakes, and filled leg weight bags to secure the gazebo to the ground.
  - Do not use in high winds.
- **Water pooling on canopy:**
  - The canopy is designed with an arrow shape to minimize pooling. Ensure the canopy is taut and properly fitted to the frame.
  - Check if the gazebo is level. Uneven ground can cause water to collect.
- **Difficulty opening/closing the frame:**
  - Ensure no parts are bent or obstructed.
  - Apply gentle, even pressure. It may require two people.
  - Check if the rocker feet mechanisms are fully unlocked before attempting to fold.

7. Specifications



Figure 7.1: Diagram illustrating the assembled dimensions (300cm L x 300cm W x 280cm H) and the compact folded size for storage and transport.

Product Specifications

Feature	Detail
Brand	YITAHOME
Model Number	AEYIHIXPOj
Dimensions (L x W x H)	300 x 300 x 280 cm (approx. 10 x 10 x 9.2 ft)
Weight	15.9 Kilograms (approx. 35 lbs)
Material (Frame)	Powder-coated Metal (Steel)
Material (Canopy)	420D Oxford Fabric with PVC and Silver Coating

Feature	Detail
Water Resistance Level	Waterproof
UV Protection	Yes
Shape	Square
Occupancy	6-8 people
Assembly Required	Yes
UPC	197839384170

8. Warranty and Support

For warranty information, product support, or to inquire about replacement parts, please contact YITAHOME customer service directly. Refer to your purchase documentation for specific warranty terms and contact details.

You can typically find support information on the official YITAHOME website or through the retailer where you purchased the product.

© 2024 YITAHOME. All rights reserved.
This manual is for informational purposes only. YITAHOME reserves the right to make changes to products without prior notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question