Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TenCloud teccharger-1B

TenCloud USB Charging Dock for TecTecTec ULT-G Golf Watch

Model: teccharger-1B

1. Product Overview

This TenCloud USB Charging Dock is designed as a replacement or spare charging solution for your TecTecTec ULT-G Golf Watch. It provides a stable and efficient way to charge your device.



This image shows the TecTecTec ULT-G Golf Watch securely seated on the TenCloud USB charging dock, with the USB cable extending from the base, ready for connection to a power source.



A front view of the TenCloud USB charging dock, highlighting the contact pins where the golf watch connects for charging. The USB cable is visible extending from the back.

2. Package Contents

- 1 x TenCloud USB Charging Dock with integrated cable (for TecTecTec ULT-G Golf Watch)

Note: The TecTecTec ULT-G Golf Watch, arm band, or any other device is not included.

3. Setup and Charging Instructions

1. **Connect the Charger:** Plug the USB-A end of the charging cable into a compatible USB power source. This can be a USB port on a PC, laptop, notebook, or a wall charger. For optimal performance and safety, it is recommended to use a wall charger with an output current of less than 1A.
2. **Place the Watch:** Gently place your TecTecTec ULT-G Golf Watch onto the charging dock. Ensure the charging contacts on the watch align correctly with the pins on the dock. The dock is designed to hold your watch securely, preventing it from falling off during charging.
3. **Charging Confirmation:** Once properly seated, your watch should indicate that it is charging. You do not need to remove the armband from your watch before charging.

4. **After Charging:** After your watch is fully charged, unplug the charger from the power source to avoid potential overheating.



A side view of the TecTecTec ULT-G Golf Watch positioned on the TenCloud USB charging dock, illustrating how the watch sits within the cradle for charging.

4. Operating Guidelines

- The charger functions identically to the original charger supplied with your watch.
- A mild warming of the charger during use is considered normal.
- Always ensure the watch is correctly aligned on the dock for a stable connection.

5. Maintenance


- Keep the charging dock and its contacts clean and free from dust or debris. Use a soft, dry cloth for cleaning.
- Avoid exposing the charger to extreme temperatures or moisture.
- Do not attempt to disassemble or modify the charging dock.

6. Troubleshooting

- **Watch not charging:**
  - Ensure the USB cable is securely plugged into both the power source and the charging dock.
  - Verify that the watch is correctly seated on the dock and the charging contacts are aligned.
  - Try a different USB power source (e.g., another USB port or wall adapter).
- **Charger feels warm:** A mild warming during charging is normal. If it becomes excessively hot, unplug it immediately and contact support.

7. Specifications

Brand	TenCloud
Model Number	teccharger-1B
Compatible Devices	TecTecTec ULT-G Golf Watch
Connector Type	USB Type A
Input Voltage	5 Volts
Amperage	0.9 Amps
Total USB Ports	1
Color	Black
Item Weight	7 ounces
Package Dimensions	7.17 x 5.12 x 2.76 inches

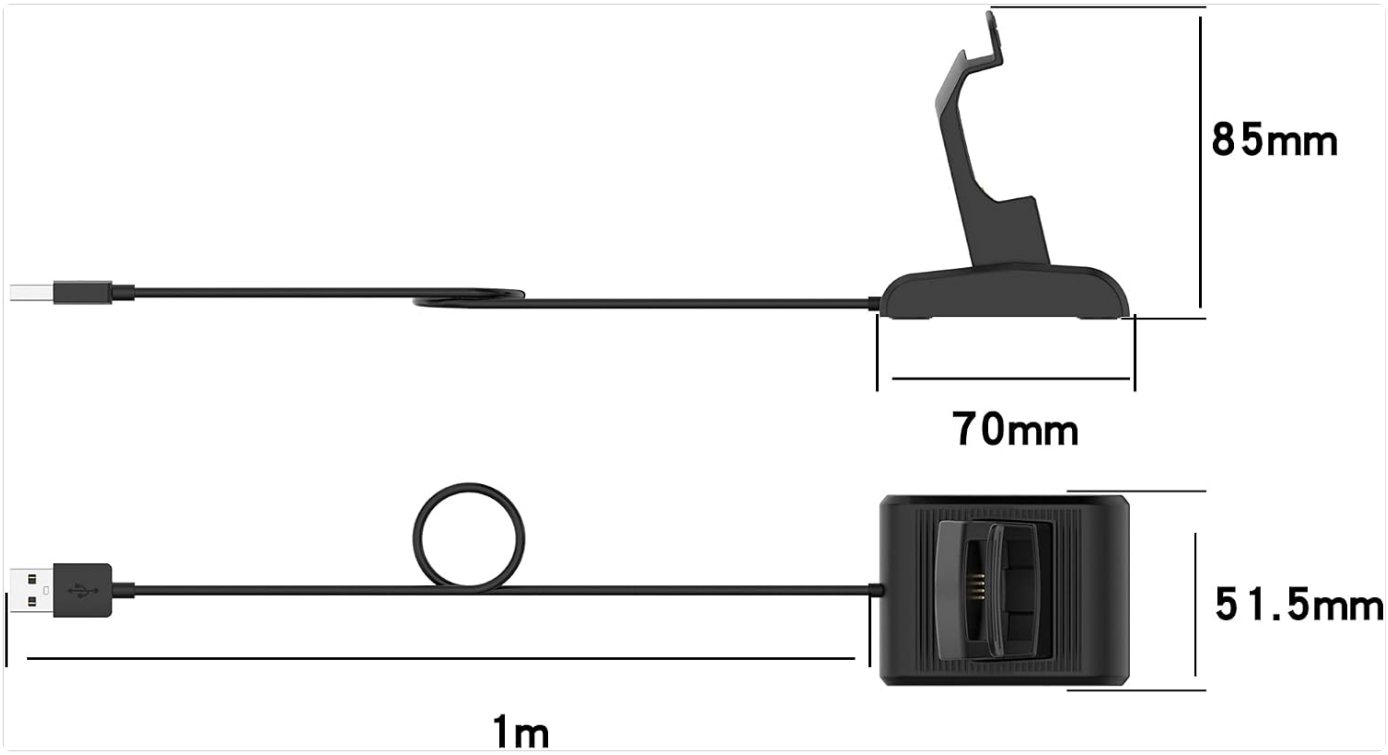

A technical diagram illustrating the physical dimensions of the TenCloud USB charging dock, including its height (85mm), width (70mm), and the 1-meter length of the integrated USB charging cable.

8. Warranty and Support

For warranty information or technical support, please contact the manufacturer, TenCloud, directly. You can often find contact details on their official website or through the retailer where the product was purchased.
Visit the TenCloud Store on Amazon for more information.

© 2023 TenCloud. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CLV9D381

More documents and user manuals: **https://manuals.plus/**