Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

tectake 404959

tectake Clamp Awning 200x180 cm User Manual

Model: 404959

1. Safety Information

Please read the assembly and disassembly instructions carefully before operating this product. Failure to follow these instructions may result in injury or product damage.

- Ensure the awning is correctly anchored and securely clamped between the floor and ceiling/balcony overhang before use.
- Do not leave the awning extended during bad weather conditions, such as strong winds, heavy rain, or snow, to prevent damage or accidents.
- Regularly inspect all components for wear, damage, or loose connections. Replace damaged parts immediately.
- Keep children and pets away from the awning during assembly and operation.

2. Product Overview

The tectake Clamp Awning is a versatile sun protection solution designed for balconies and terraces. It features a no-drilling clamp installation system, an ergonomic crank for easy operation, and a robust structure made from epoxy-coated steel and lightweight aluminum. The awning's height is adjustable via telescopic poles, and its 100% polyester fabric is UV 50+ resistant and water-repellent. Non-slip end caps protect surfaces from damage.

Key Features:

- **No-Drilling Installation:** Quick and easy setup on balconies or terraces without damaging facades.
- **Robust Construction:** Epoxy-coated steel frame and lightweight aluminum arms ensure stability and durability.
- **Adjustable Height:** Telescopic poles allow flexible height adjustment from 211 cm to 304 cm.
- **UV 50+ & Water-Repellent Fabric:** 100% polyester fabric provides excellent sun protection and is resistant to light rain.
- **Ergonomic Crank Handle:** Smooth manual operation for extending and retracting the awning.
- **Non-Slip End Caps:** Plastic caps protect ceilings and floors from scratches and damage.

3. Components List

Before assembly, ensure all parts are present and undamaged. Refer to the detailed assembly instructions included in your package for a complete list and visual identification of components.

- Awning Fabric (100% Polyester)
- Telescopic Support Poles (Alloy Steel)
- Projection Arms (Aluminum)
- Crank Handle
- Non-Slip End Caps
- Roller Tube
- Front Bar
- Mounting Hardware (screws, bolts, etc.)

4. Setup Instructions

Follow these steps for a secure and proper installation of your tectake Clamp Awning. It is recommended to have two people for assembly.

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out. Compare them with the parts list in your included manual to ensure everything is present.
2. **Assemble the Main Frame:** Connect the telescopic support poles and projection arms according to the detailed diagrams in your manual. Ensure all connections are firm.
3. **Attach Awning Fabric:** Slide the awning fabric onto the roller tube and the front bar. Ensure it is correctly aligned and secured.
4. **Position the Awning:** Place the assembled awning frame between the desired floor and ceiling/balcony overhang. Ensure the non-slip end caps are attached to the top and bottom of the telescopic poles.
5. **Secure the Awning:** Extend the telescopic poles by turning the screw feet at the bottom until they are firmly clamped between the surfaces. Apply even pressure to ensure stability.
6. **Adjust Height and Angle:** Fine-tune the height using the telescopic pole adjustments. Adjust the inclination of the awning by manipulating the projection arms to achieve the desired shade angle.
7. **Insert Crank Handle:** Insert the ergonomic crank handle into the designated opening on the side of the awning mechanism.

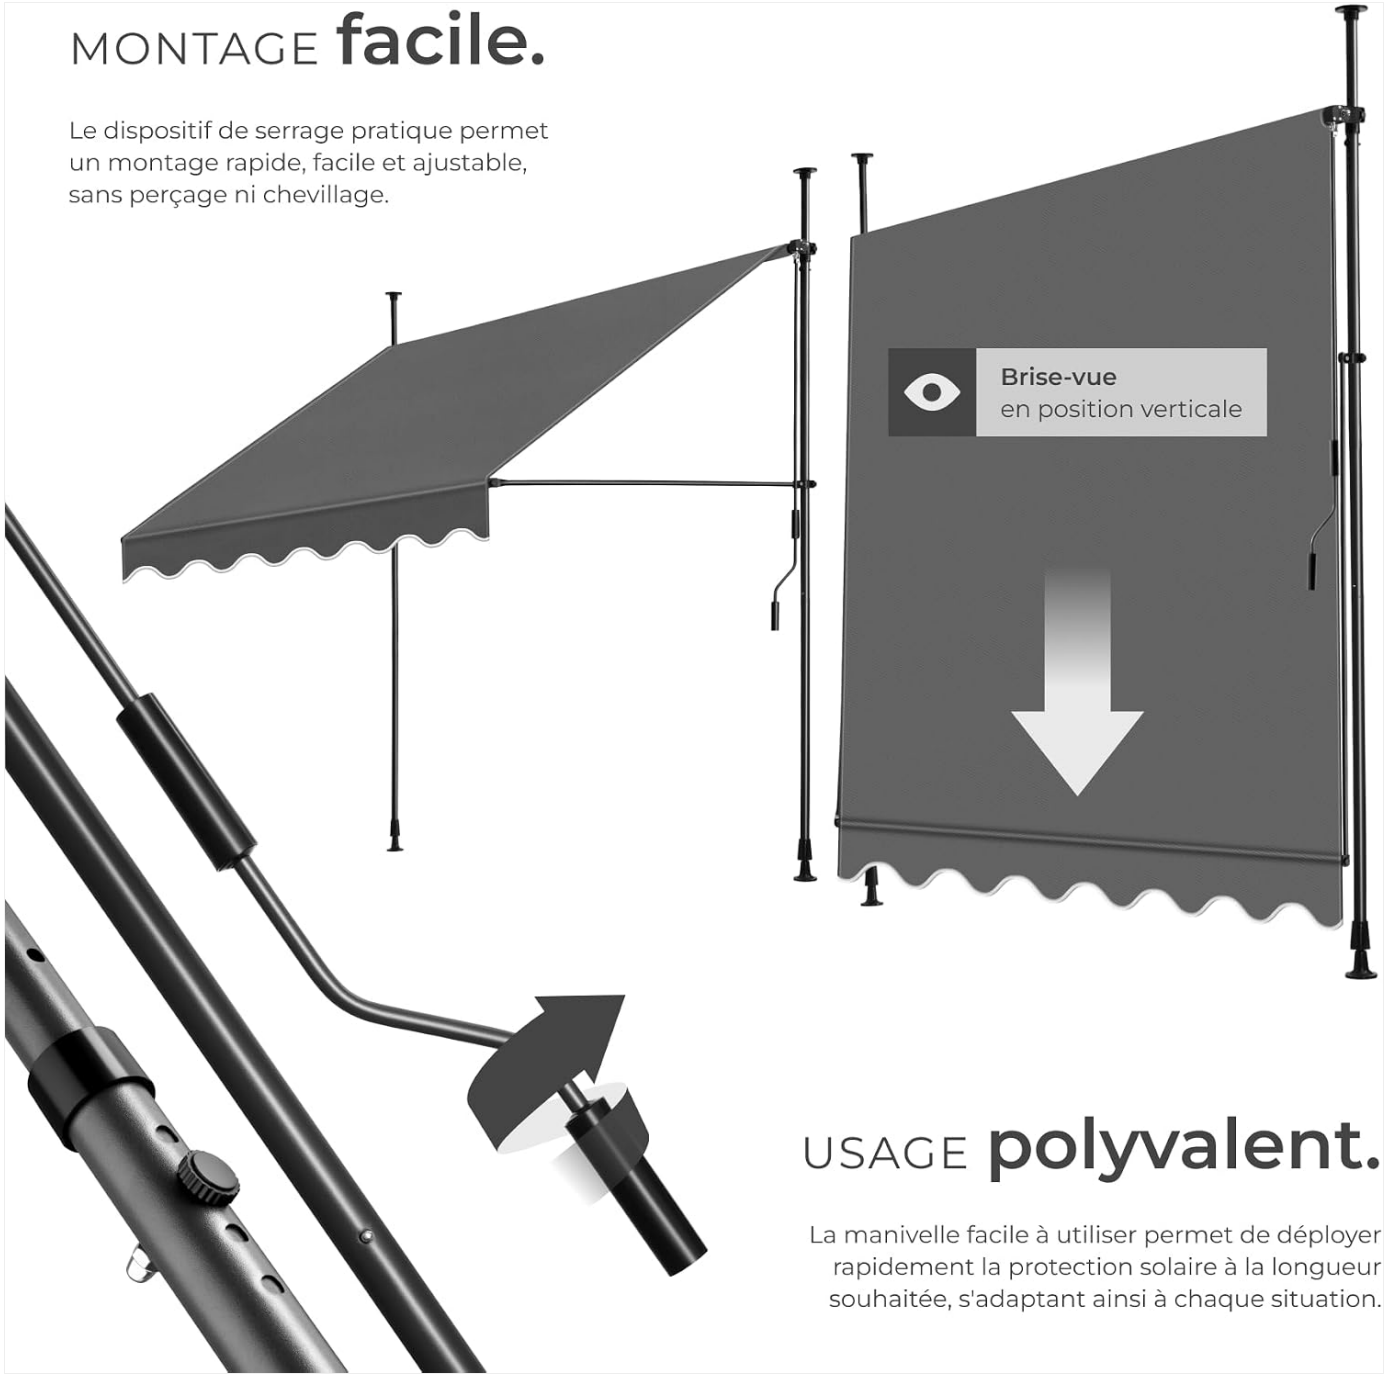


Image: Visual guide for easy mounting and versatile usage, including vertical screen option.

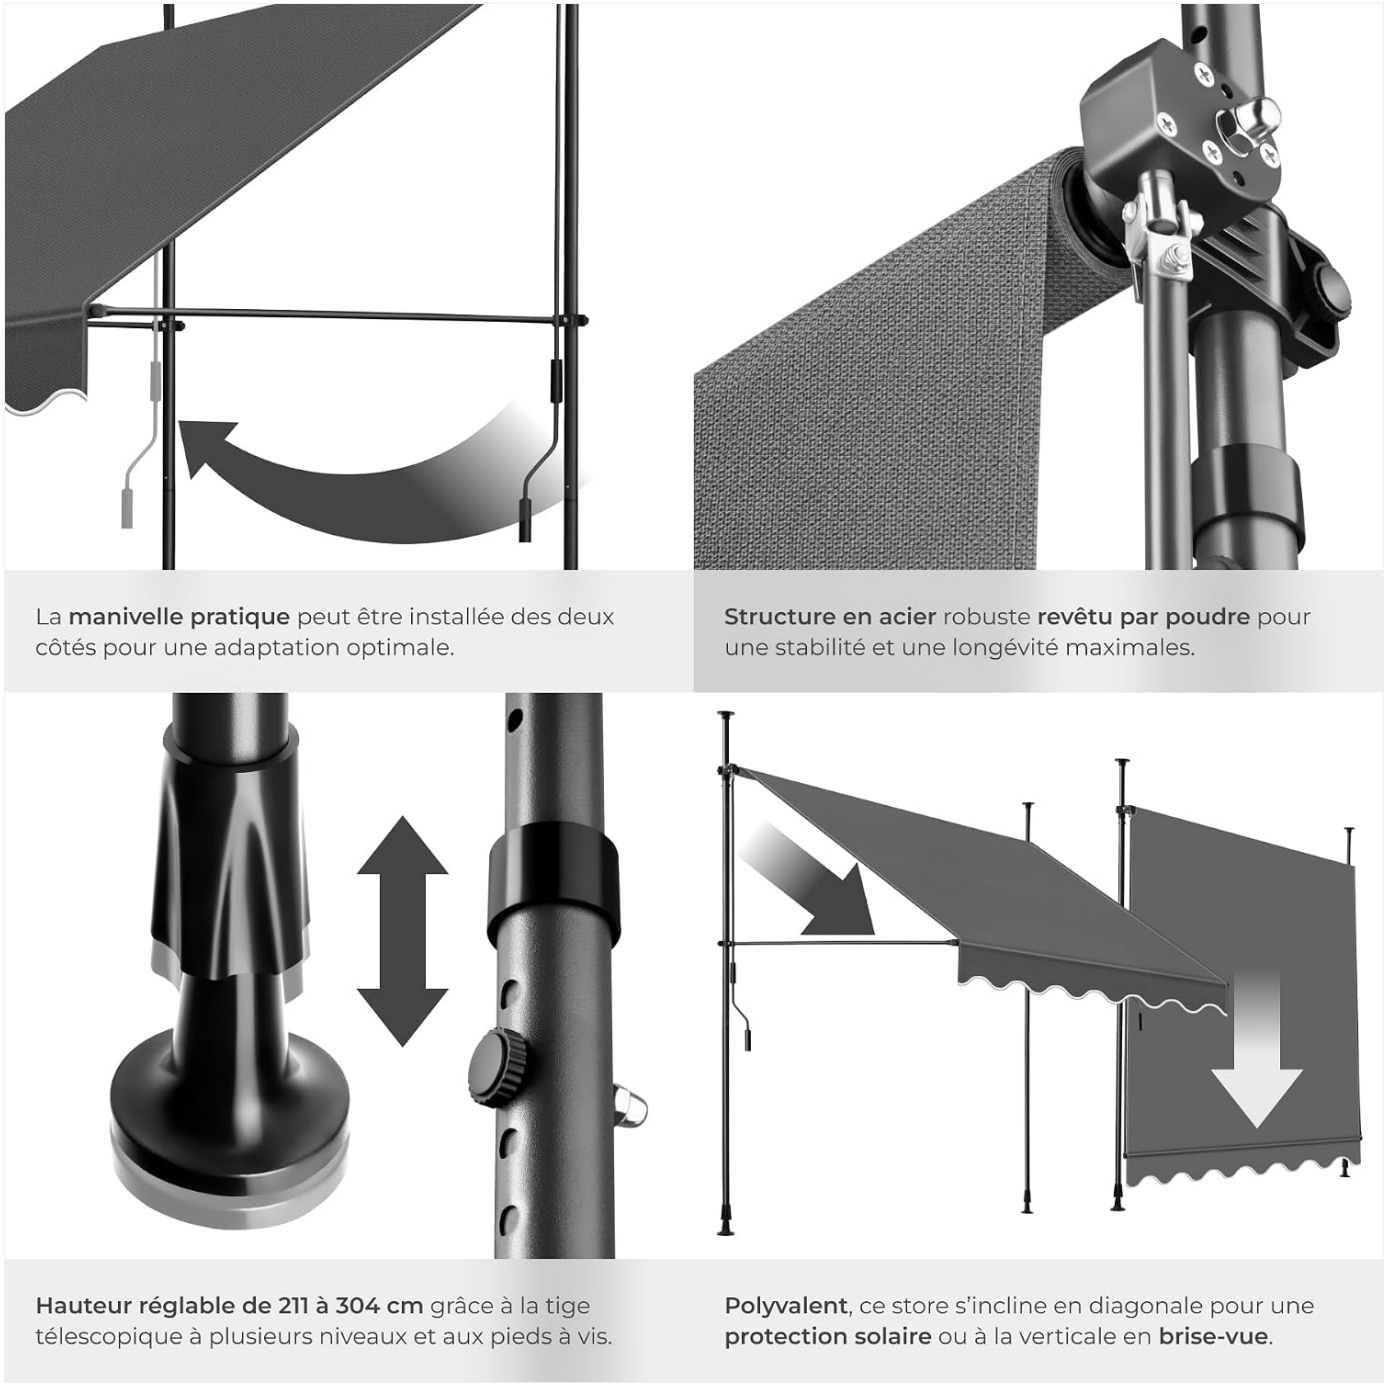


Image: Close-up of the practical crank, robust powder-coated steel structure, and height adjustment.

5. Operating Instructions

The tectake Clamp Awning is operated manually using the provided crank handle.

- **To Extend the Awning:** Insert the crank handle into the eyelet on the side of the awning. Turn the handle clockwise until the awning reaches your desired extension.
- **To Retract the Awning:** Insert the crank handle into the eyelet. Turn the handle counter-clockwise until the awning is fully retracted.
- **Adjusting Inclination:** The angle of the awning can be adjusted by loosening the locking mechanisms on the projection arms, setting the desired angle, and then re-tightening the locks.

6. Maintenance

Proper maintenance will extend the lifespan of your tectake Clamp Awning.

- **Cleaning the Fabric:** Clean the awning fabric with a soft brush or cloth and mild soapy water. Do not use harsh chemicals, abrasive cleaners, or high-pressure washers, as these can damage the UV protection and water-repellent coating. Rinse thoroughly with clean water and allow the fabric to air dry completely before retracting.
- **Frame Cleaning:** Wipe the metal frame with a damp cloth to remove dirt and dust.
- **Seasonal Storage:** During prolonged periods of non-use, especially in winter or during severe weather forecasts, it is recommended to fully retract the awning. For off-season storage, disassemble the awning and store all components in a dry, protected area to prevent corrosion and fabric degradation.
- **Regular Inspection:** Periodically check all screws, bolts, and clamping mechanisms for tightness. Ensure the fabric is free from tears or excessive wear.



Image: Awning fabric is resistant to sun and water, highlighting its durability.

7. Troubleshooting

If you encounter issues with your awning, refer to the following common problems and solutions.

- **Awning is unstable or sways:**
  - Ensure the telescopic poles are fully extended and securely clamped.
  - Verify that the non-slip end caps are correctly positioned and providing adequate grip.
  - Check that all frame connections are tightened.
  - **Important:** Retract the awning immediately in strong winds to prevent damage.
- **Difficulty in assembly:**
  - Carefully review the detailed assembly instructions provided in your package.
  - Ensure all parts are correctly identified before attempting to assemble.
  - Consider seeking assistance from another person, especially for initial positioning and clamping.
- **Awning does not extend or retract smoothly:**
  - Check for any obstructions (e.g., debris, tangled fabric) in the mechanism or along the fabric path.
  - Ensure the crank handle is properly inserted and fully engaged with the winding mechanism.
  - Inspect the roller tube and projection arms for any signs of damage or misalignment.

8. Specifications

Brand	tectake
Model Number	404959
Material	Alloy Steel (Frame), 100% Polyester (Fabric)
Color	Black/Grey
Size (Width x Projection)	200 x 180 cm
Adjustable Height	211 - 304 cm
Item Weight	8.2 Kilograms
UV Protection	UV 50+
Fabric Thickness	180 g/m²
Operation Mode	Manual

tectake jardin

Détails du produit

DIMENSIONS

Dimensions totales
200 x 120 x 211 - 304 cm

Dimensions pliées
200 x 12 x 211 - 304 cm

Tissu
183 x 180 cm

Longueur des bras de projection
120 cm

Diamètre des embouts
7 cm

Les mesures sont approximatives

TECHNICITÉS

Protection UV 50
Épaisseur du tissu 180 g/m²
Poids env. 8 kg
Matériaux acier revêtu par poudre, aluminium, 100 % polyester, polyéthylène, polyuréthane

CONTENU

Store à pince
Matériel de montage
Instructions de montage

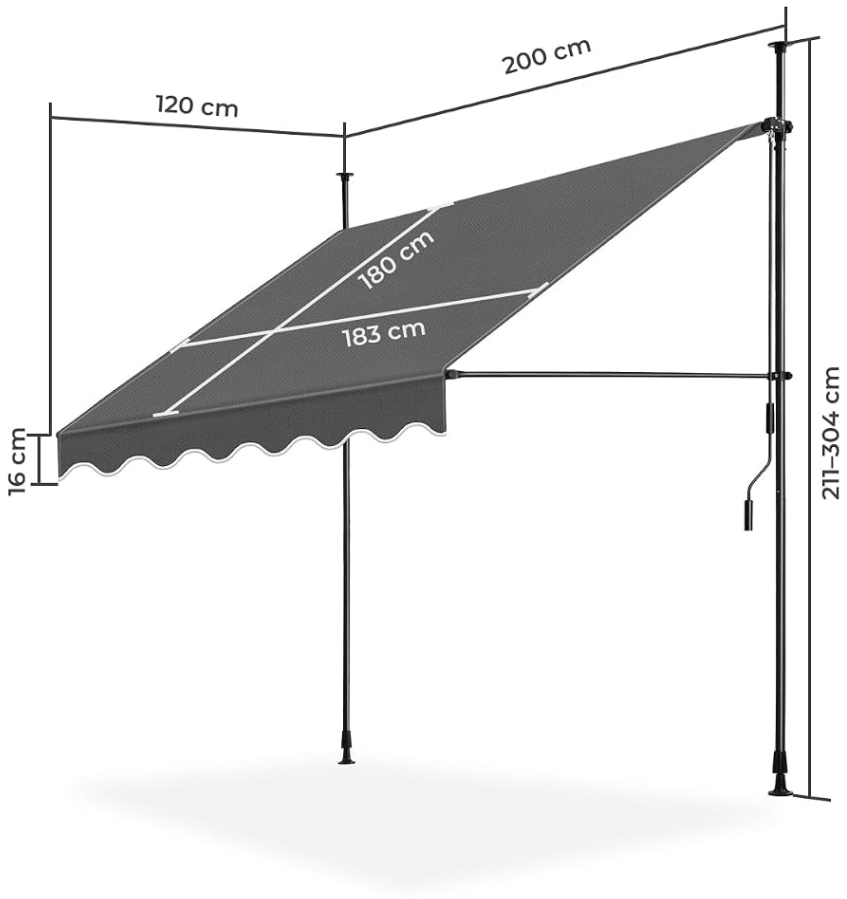


Image: Detailed product dimensions and technical data.

9. Warranty and Support

For warranty information and customer support, please refer to your purchase documentation or contact tectake customer service directly. Keep your proof of purchase for any warranty claims.
You can find contact information for tectake customer service on their official website or through the retailer where you purchased the product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CLVMQGTP

More documents and user manuals: **https://manuals.plus/**