Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tieasy USGD3375BCK

Tieasy 30-Inch Wall Mount Range Hood Instruction Manual

Model: USGD3375BCK

Brand: Tieasy

1. Introduction

Thank you for purchasing the Tieasy 30-Inch Wall Mount Range Hood. This manual provides essential information for the safe installation, operation, and maintenance of your new appliance. Please read this manual thoroughly before installation and use, and keep it for future reference.



Image 1: Front view of the Tieasy 30-Inch Wall Mount Range Hood.

2. Important Safety Information

To reduce the risk of fire, electric shock, or injury, observe the following:

- Install this range hood in accordance with all specified instructions.
- Ensure proper ventilation is provided to prevent back-drafting of gases from other fuel-burning appliances.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not use this unit with any solid-state speed control device.
- Always disconnect power to the unit before servicing or cleaning.
- Clean grease filters frequently. Grease should not be allowed to accumulate on fan or filter.
- Never leave surface units unattended at high settings. Boil-over causes smoking and greasy spill-overs that may ignite.
- Use appropriate pan size. Always use cookware appropriate for the size of the surface element.

3. Product Features

- **Powerful Airflow:** Equipped with a motor capable of 450 CFM for efficient air extraction.
- **Quiet Operation:** Designed to operate at a low noise level, down to 40dB.
- **Durable Construction:** Features 6mm curved glass and 430-grade stainless steel with a brushed finish, resistant to rust.
- **Easy Controls:** 3-speed touch controls for fan speed adjustment and LED light operation.
- **Dishwasher-Safe Filters:** Baffle filters effectively trap grease and are easily removable for cleaning in a dishwasher.
- **Convertible Ventilation:** Supports both ducted (exhausts air outside) and ductless (recirculates filtered air) configurations. A carbon filter kit (Part # USGDCF-Y) is required for ductless use and sold separately.
- **Adjustable Chimney:** Comes with an adjustable chimney cover, suitable for 7.5-ft to 8.5-ft ceilings.
- **Bright LED Lighting:** Two 1.5W LED lamps provide illumination for the cooking area.



Image 2: Key components and materials of the range hood.

4. Specifications

Specification	Value
Model Info	USGD3375BCK
Air Flow Capacity	450 Cubic Feet Per Minute (CFM)
Material	Stainless Steel
Noise Level	55 Decibels (dB)
Mounting Type	Wall Mount
Included Components	Aluminum Flex Duct
Controls Type	Touch Control
Voltage	120 Volts
Number of Speeds	3
Item Weight	30 Pounds
Light Source Type	LED
Filter Type	Baffle
Item Form	Curved Glass
Specification Met	ETL
Ventilation Type	Convertible (Ducted/Ductless)
Product Dimensions	18.5"D x 30"W x Adjustable 21.5"-31.5"H

5. Package Contents

The following items are included in your package:

- Range Hood Unit
- Instruction Manual
- Air Backdraft Damper
- Chimney Flue Duct Covers (Adjustable)
- 6.5-foot Expandable Aluminum Flex Duct
- Mounting Hardware (screws, range hood hook, chimney mounting bracket)



Image 3: Contents included in the package.

6. Setup and Installation

This range hood is designed for wall-mount installation and can be configured for either ducted or ductless operation. Refer to the included instruction manual for detailed, step-by-step installation procedures.

6.1 Ducted vs. Ductless Installation

The range hood can exhaust air to the outside (ducted mode) or recirculate filtered air back into the kitchen (ductless mode). For ductless operation, a carbon filter kit (Part # USGDCF-Y) must be purchased separately and installed.



Image 4: Ducted and Ductless installation options.

6.2 Dimensions

Ensure adequate space for installation. The hood dimensions are 30 inches (W) x 18.5 inches (D) x Adjustable 21.5 inches - 31.5 inches (H). The adjustable chimney cover is suitable for ceilings between 7.5 ft and 8.5 ft.



Image 5: Product dimensions and adjustable chimney range.

7. Operating Instructions

The range hood features a 3-speed touch control panel for easy operation.

7.1 Control Panel

The touch control panel allows you to power the unit on/off, adjust fan speed, and control the LED lights.

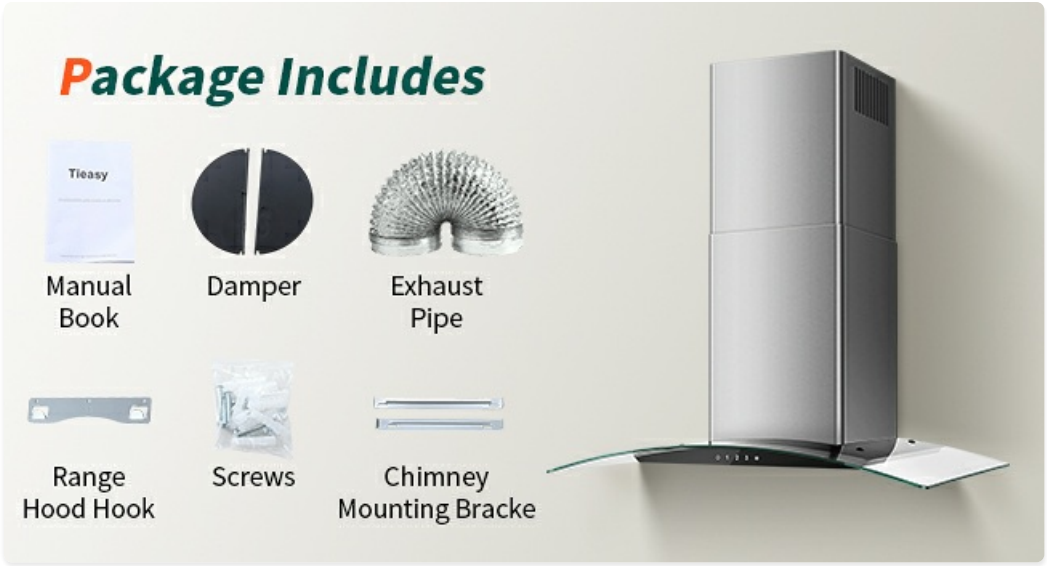


Image 6: Intuitive Touch Control panel.

7.2 Fan Speed Selection

Select from three fan speeds to match your cooking needs:

- **Speed 1 (Low):** Ideal for simmering or light cooking.
- **Speed 2 (Medium):** Suitable for roasting or frying.
- **Speed 3 (High):** Recommended for stir-frying or when significant smoke/odor is present.



Image 7: Fan speed recommendations for various cooking activities.

7.3 LED Lighting

Activate the LED lights via the touch control panel to illuminate your cooking surface. The lights are energy-saving and provide clear visibility.



Image 8: Bright LED lights illuminating the cooking space.

8. Maintenance

8.1 Cleaning the Filters

The baffle filters are designed to trap grease and can be easily removed for cleaning. For best performance, clean filters regularly. They are dishwasher safe for convenient maintenance.

8.2 Cleaning the Exterior

Wipe the stainless steel and glass surfaces with a soft cloth and a non-abrasive cleaner. Avoid harsh chemicals or abrasive materials that could scratch the finish.



Image 9: Cleaning the range hood exterior.

9. Troubleshooting

If you encounter issues with your range hood, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on	No power, loose connection, motor issue	Check power supply, ensure plug is secure, contact support if motor is faulty.
Poor suction	Clogged filters, improper ducting, fan motor issue	Clean or replace filters, check ductwork for obstructions, ensure proper installation.
Excessive noise	Loose parts, fan obstruction, motor imbalance	Check for loose components, remove any obstructions, contact support for motor issues.
Lights not working	Bulb failure, wiring issue	Replace LED lamps if faulty, check wiring connections, contact support if issue persists.

10. Warranty and Support

The Tieasy 30-Inch Wall Mount Range Hood comes with a**2-Year Limited Warranty**. This warranty covers defects in materials and workmanship under normal use.

For assistance, technical support, or warranty claims, please contact our customer service team. Refer to the contact information provided in your purchase documentation or on the official Tieasy website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CM6BLK8M

More documents and user manuals: **https://manuals.plus/**