FREDEES BL-84011

FREDEES Entryway Table Instruction Manual

Model: BL-84011

INTRODUCTION

Thank you for choosing the FREDEES Entryway Table. This manual provides essential information for the safe assembly, operation, and maintenance of your new console table. Please read these instructions thoroughly before use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always follow the assembly instructions carefully.
- Do not exceed the maximum weight recommendation of 22.68 kg (50 lbs) for the tabletop and shelves.
- Ensure all connections for the power outlets and USB ports are secure before use.
- Keep liquids away from the power outlets and USB ports to prevent electrical hazards.
- Place the table on a flat, stable surface. Use the adjustable footpads to ensure stability and prevent tilting.
- Do not allow children to climb on or play with the table.
- Unplug the power cord from the wall outlet when not in use or during cleaning.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Console Table *1
- Assembly Guide *1
- Installation Tool *1
- Hardware Package (screws, bolts, etc.)
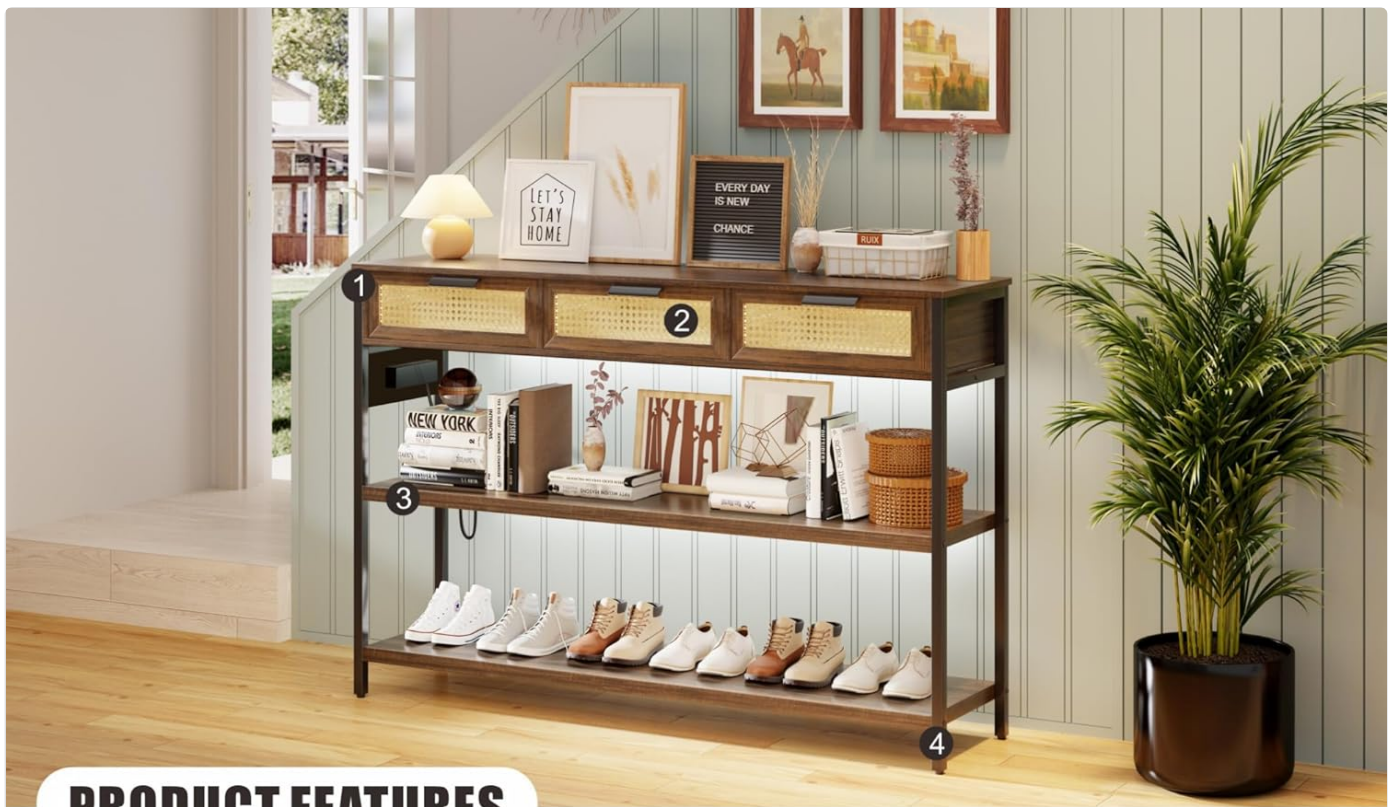
SETUP AND ASSEMBLY

Assembly of the FREDEES Entryway Table is designed to be straightforward. Please follow the included Assembly Guide for detailed, step-by-step instructions. Ensure you have adequate space and the necessary tools (provided) before starting.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.

2. **Assemble Frame:** Attach the metal frame components according to the diagrams in the Assembly Guide. Ensure all screws are tightened securely.

3. **Install Shelves:** Secure the wooden shelves to the frame.

4. **Insert Drawers:** Slide the rattan drawers into their designated slots.

5. **Connect Power Unit:** Secure the power outlet and USB port unit to the side of the table as indicated in the guide.

6. **Adjust Footpads:** Once assembled, place the table in its desired location. Adjust the footpads at the bottom of the legs to ensure the table is level and stable on uneven floors.

PRODUCT INFORMATION

METAL FRAME | 50LBS | High quality material | Smart power sensor

6.70"

10.82"

10.82"

3.15"

31.49"

11.81"

45.67"

This image illustrates the overall dimensions of the entryway table, including height, width, and depth, along with shelf spacing. It also highlights key features such as the metal frame construction, 50 lbs weight capacity, high-quality material, and integrated smart power sensor.

PRODUCT FEATURES

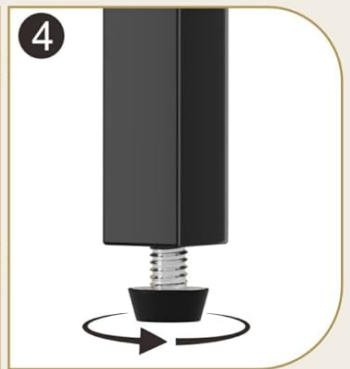
Three drawers
- Remains neat and orderly

Unique rattan design
- Adds natural beauty

Two open storage shelves
- Display and Store more items

Adjustable footpads
- Keep stable on the uneven floor

This image highlights four main features of the entryway table: the three rattan-front drawers for storage, the unique rattan design detail, the two open storage shelves, and the adjustable footpads designed to ensure stability on uneven floors.

OPERATING INSTRUCTIONS

1. Integrated Charging Station

The entryway table features a built-in charging station for your convenience. It includes:

- 2 AC Power Outlets (120V/12A)
- 1 USB Port (5V/2A)
- 1 Type-C Port (5V/2A)

To use, simply plug the table's main power cord into a wall outlet. You can then connect your electronic devices directly to the available ports.

EQUIPPED WITH CHARGING STATION

USB **Type-C**	☼	●	🔲 🔲
5V/2A [USB Ports& Type-C Ports]	**LIGHT CONTROL**	**HUMAN SENSOR**	**120V/12A** [2 AC Outlets]

This image provides a detailed view of the integrated charging station located on the side of the entryway table. It shows the two AC power outlets, one USB port, and one Type-C port, demonstrating how devices can be connected for charging.

2. Three-Color Ambient LED Lighting

The table is equipped with LED lights offering three color options and adjustable brightness.

- **Color Selection:** The lights can display Cold light, White light, or Warm light. Refer to the Assembly Guide for the specific control button location.
- **Brightness Adjustment:** To adjust brightness (0-100%), press and hold the light control button. Release when the desired brightness is achieved.

This image showcases the entryway table's LED lighting system, illustrating the three available light colors: cold light, white light, and warm light. It also indicates the 0-100% brightness adjustment feature, controlled by a long-press function.

3. Smart Motion Sensing Design

The table features a human motion sensor that automatically activates the LED lights when movement is detected within its range (approximately 2-3 meters) and dims them when no presence is detected, conserving energy.

- **Activation:** The lights will automatically brighten when a person approaches the table.
- **Deactivation:** The lights will dim or turn off after a period of inactivity.

This image depicts a person approaching the entryway table, triggering the smart human sensor. The LED lights beneath the shelves illuminate, demonstrating the automatic lighting feature for convenience in dim environments.

MAINTENANCE

- **Cleaning:** Wipe the wooden surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish. For rattan drawers, use a soft brush or cloth to remove dust.

- **Dusting:** Regularly dust all surfaces to prevent buildup.

- **Spills:** Clean spills immediately to prevent staining, especially on the wooden surfaces.

- **Power Unit:** Ensure the power unit and cables are free from dust and debris. Do not attempt to disassemble the power unit.

- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights not turning on	1. Table not plugged in. 2. Power outlet not working. 3. Light control button not pressed.	1. Ensure the table's power cord is securely plugged into a functional wall outlet. 2. Test the wall outlet with another device. 3. Press the light control button to activate.
Charging ports not working	1. Table not plugged in. 2. Device cable faulty. 3. Power unit connection loose.	1. Verify the table is plugged into a live outlet. 2. Try a different charging cable or device. 3. Check the connection of the power unit to the table frame.
Motion sensor not responding	1. Obstruction blocking sensor. 2. Insufficient movement. 3. Sensor malfunction.	1. Ensure the sensor area is clear of obstructions. 2. Ensure movement is within the sensor's range (2-3 meters). 3. Contact customer support if the issue persists.
Table is wobbly/unstable	1. Uneven floor. 2. Loose assembly screws. 3. Footpads not adjusted.	1. Move the table to a level surface. 2. Check and tighten all assembly screws. 3. Adjust the adjustable footpads at the bottom of the legs until stable.

SPECIFICATIONS

Feature	Detail
Brand	FREDEES
Model Name	BL-84011
Dimensions (LxWxH)	116 x 30 x 80 Centimeters (45.67"D x 11.81"W x 31.5"H)
Item Weight	21 kg
Maximum Weight Recommendation	22.68 kg (50 lbs)
Material	Wood (MDF), Metal frame, Rattan drawers
Color	Rustic Brown
Number of Drawers	3
Charging Station	2 AC Outlets (120V/12A), 1 USB Port (5V/2A), 1 Type-C Port (5V/2A)
Lighting	3 LED Light Colors (Warm/White/Blue), 0-100% Brightness Adjustable
Sensor	Smart Human Motion Sensor
Included Components	Console Table, Assembly Guide, Installation Tool

Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact FREDEES customer service directly. Keep your purchase receipt for warranty claims.