SENSEA 3276007457452

SENSEA Easy Shower System User Manual

Model: 3276007457452

Introduction

This manual provides essential information for the installation, operation, and maintenance of your SENSEA Easy Shower System. Please read these instructions carefully before installation and use to ensure proper function and longevity of the product.





Figure 1: SENSEA Easy Shower System, a complete shower set with thermostatic mixer, hand shower, and overhead shower.

Package Contents

Before beginning installation, verify that all components are present and undamaged. The package should contain the following items:

- Thermostatic mixer unit
- Adjustable shower bar
- Overhead shower head (Ø25 cm)
- Hand shower with 3 spray modes
- Shower hose (150 cm)
- Mounting hardware and seals



Figure 2: All components included in the SENSEA Easy Shower System package, laid out for inspection.

Setup and Installation

The SENSEA Easy Shower System is designed for straightforward installation and can adapt to existing drill holes. It is compatible with all water heaters and connects to standard 22 mm outlets.

1. **Preparation:** Ensure the water supply is turned off before starting installation. Clear the installation area.
2. **Mounting the Shower Bar:** Position the shower bar and mark the drilling points. The system is height-adjustable post-installation, ranging from 78 cm to 115 cm to suit user height.
3. **Connecting the Mixer:** Connect the thermostatic mixer to the water outlets. Ensure all connections are secure and watertight. The system operates with a maximum pressure of 5 bar and a flow rate of 9-12 l/min.
4. **Attaching Shower Heads:** Securely attach the overhead shower head and the hand shower to their respective connections on the bar and hose.
5. **Testing:** Once installed, slowly turn on the water supply and check for any leaks.

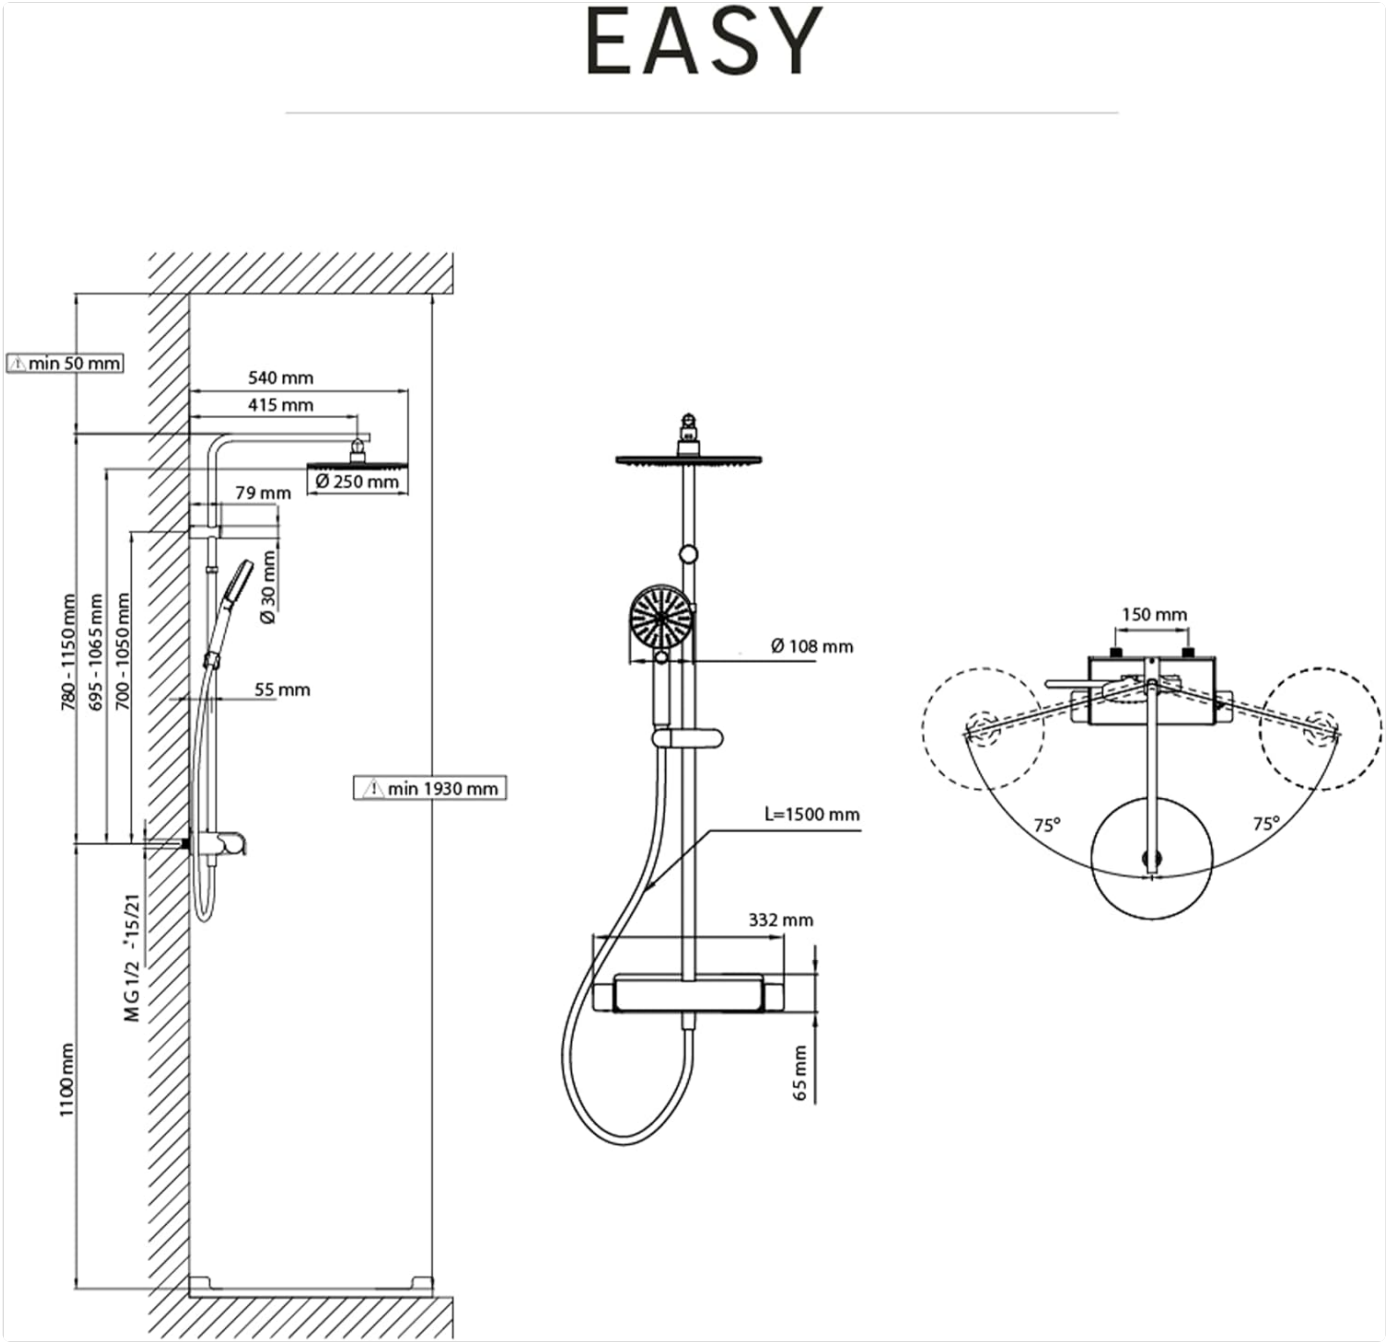


Figure 3: Detailed installation diagram showing product dimensions and recommended mounting heights.

Operating Instructions

Your SENSEA Easy Shower System offers a comfortable and customizable showering experience.

Thermostatic Mixer

The thermostatic mixer ensures a stable and precise water temperature throughout your shower. The default temperature is limited to 38°C for safety. To exceed 38°C, simply press the safety button on the handle and rotate to the desired higher temperature.



Figure 4: The thermostatic mixer with its 38°C safety stop feature, preventing accidental scalding.

Overhead Shower

The large 25 cm diameter overhead shower provides a uniform rain shower experience over a wide area. Use the diverter knob to switch water flow between the overhead shower and the hand shower.

Hand Shower

The hand shower features three distinct spray modes: Rain, Massage, or a combination of both. Easily switch between these modes by pressing the button located on the side of the hand shower head.



Figure 5: Visual representation of the hand shower's three spray modes (Rain, Massage, Combination) and the overhead shower's wide coverage.

Maintenance

Regular cleaning will ensure the longevity and optimal performance of your shower system.

Cleaning the Shower Heads

Both the overhead shower and the hand shower are equipped with anti-limescale nozzles. To remove limescale residues, simply wipe your finger over the nozzles. This "Easy Clean" feature helps maintain consistent water flow.

General Cleaning

Clean the chrome surfaces with a soft cloth and a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials that could damage the finish.



Figure 6: Detail of the shower head illustrating the "Easy Clean" anti-limescale nozzles.

Troubleshooting

This section addresses common issues you might encounter with your SENSEA Easy Shower System. If you experience problems not listed here, please contact customer support.

Problem	Possible Cause	Solution
Reduced water flow	Limescale buildup in nozzles; clogged filter in mixer.	Clean nozzles by wiping them. Check and clean the filter in the thermostatic mixer.
Inconsistent water temperature	Thermostatic mixer calibration issue; insufficient hot/cold water pressure.	Ensure stable water pressure. If problem persists, consult a qualified plumber for mixer calibration.
Leaks at connections	Loose connections; damaged seals.	Tighten connections. Replace any worn or damaged seals.

Specifications

Brand: SENSEA

Model Number: 3276007457452

Product Dimensions: 54 x 33 x 115 cm (adjustable height)

Item Weight: 3.26 Kilograms

Material: Stainless Steel (main components), ABS, PVC hose

Overhead Shower Diameter: Ø25 cm

Hand Shower Spray Modes: 3 (Rain, Massage, Combination)

Shower Hose Length: 150 cm

Operating Pressure: Max 5 bar

Flow Rate: 9-12 l/min

Thermostat Safety Stop: 38°C

Warranty and Support

Specific warranty details for the SENSEA Easy Shower System are typically provided at the point of purchase or within separate warranty documentation. Please refer to your purchase receipt or contact the retailer for warranty information. For technical support, spare parts, or further assistance, please contact SENSEA customer service or the authorized dealer from whom you purchased the product. Keep your model number (3276007457452) and purchase details ready when contacting support.

© 2024 SENSEA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question