Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FD IK6632

FD Wireless Keyboard and Mouse Combo User Manual

Model: IK6632 | Brand: FD

Introduction

This user manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your FD Wireless Keyboard and Mouse Combo. This sleek and quiet set features full-sized 96 round keycaps and a reliable 2.4GHz wireless connection, designed for comfortable and efficient use across various devices.

Package Contents

- 1 x FD Wireless Keyboard
- 1 x FD Wireless Mouse
- 1 x USB Nano Receiver (stored inside the mouse battery compartment)
- 2 x AAA Batteries (for keyboard)
- 1 x AA Battery (for mouse)

Setup Guide

1. Battery Installation

The keyboard requires two AAA batteries, and the mouse requires one AA battery. Batteries are included in the package.

1. Locate the battery compartment on the underside of the keyboard and mouse.
2. Open the battery covers.
3. Insert the batteries, ensuring correct polarity (+/-).
4. Close the battery covers securely.



Image: The FD Wireless Keyboard and Mouse Combo, showcasing its design and components.

Image: Underside view of the keyboard and mouse, indicating the battery compartments and the storage slot for the USB receiver within the mouse.

2. Connecting the USB Nano Receiver

The USB Nano receiver is stored inside the mouse's battery compartment. This single receiver connects both the keyboard and the mouse.

1. Open the mouse battery compartment and carefully remove the USB Nano receiver.
2. Plug the USB Nano receiver into an available USB-A port on your computer, laptop, or compatible device.
3. Your operating system should automatically detect and install the necessary drivers.



Image: A close-up showing the USB Nano receiver being inserted into a USB port, highlighting the single receiver for both devices.

Image: Illustration demonstrating the 2.4GHz wireless connection between the keyboard/mouse and a laptop via the USB receiver, emphasizing stable transmission within 10 meters.

3. Power On

Once the batteries are installed and the USB receiver is connected, turn on the keyboard and mouse using their respective power switches. The devices are ready for use.

Operation

Keyboard Functions

The keyboard features a full-sized layout with 96 round keycaps and 12 easy-to-reach multimedia function keys (F1-F12). These hotkeys allow quick access to various functions:

- **F1-F12:** Multimedia controls (e.g., play/pause, volume up/down, mute, previous/next track, web browser, email, search).
- **Numeric Keypad:** Full numeric keypad for data entry.
- **Round Keycaps:** Designed for comfortable and quiet typing.



Image: Diagram illustrating the keyboard layout, highlighting the 12 multimedia function keys and the numeric keypad for improved efficiency.

Mouse Functions

The wireless mouse provides precise tracking and silent clicks for a quiet working environment.

- **Left/Right Click:** Standard mouse buttons.
- **Scroll Wheel:** For vertical scrolling.
- **Silent Clicks:** Designed to minimize noise during use.

Power Saving Mode

To conserve battery life, both the keyboard and mouse automatically enter sleep mode after a period of inactivity:

- The keyboard enters auto-sleep after 5 minutes of inactivity.
- The mouse enters auto-sleep after 3 seconds of inactivity.
- To wake the devices, simply click any button on the mouse or press any key on the keyboard.

Image: Visual representation of the auto-sleep and energy-saving feature for both the keyboard and mouse, showing how they enter sleep mode after inactivity.

Image: A sequence illustrating the automatic power-saving states of the mouse: Working, Stand-by, Auto-sleep, and Press to Activate.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your keyboard and mouse combo.

Cleaning

The keyboard features removable keycaps for easy cleaning. To clean your devices:

- Turn off both the keyboard and mouse.
- Gently pull up the keycaps to remove them.
- Use a soft, dry cloth or a small brush to remove dust and debris from under the keycaps and on the device surfaces.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution (avoid harsh chemicals).
- Ensure all parts are completely dry before reattaching keycaps and turning on the devices.



Image: A close-up view of the keyboard demonstrating the ease of removing keycaps for cleaning and maintenance.

Battery Replacement

Replace batteries when performance degrades or devices stop responding. Refer to the "Battery Installation" section for instructions.

Troubleshooting

Problem	Possible Cause	Solution
Keyboard/Mouse not responding	Low or dead batteries; USB receiver not properly connected; devices are off.	Replace batteries. Ensure USB receiver is firmly plugged into a working USB port. Turn on the keyboard and mouse.

Problem	Possible Cause	Solution
Intermittent connection or lag	Interference from other wireless devices; distance from receiver too great.	Move devices closer to the USB receiver (within 10 meters). Avoid placing receiver near large metal objects or other wireless transmitters.
Mouse cursor erratic or not moving	Dirty optical sensor; unsuitable surface.	Clean the optical sensor on the underside of the mouse. Use the mouse on a clean, non-reflective surface or a mouse pad.
Keyboard/Mouse not compatible with device	Device only has Type C ports.	An adapter (USB-A to USB-C) is required for devices with only Type C ports (e.g., some Macbook Pro models).

Your browser does not support the video tag.

Video: An official product video demonstrating the setup and usage of the FD Wireless Keyboard and Mouse Combo, including battery installation and receiver connection.

SPECIFICATIONS

Brand	FD
Model Number	IK6632
Connectivity Technology	2.4GHz Wireless (USB Nano Receiver)
Keyboard Dimensions	14.9 x 4.9 x 1.1 inches (37.8 x 12.4 x 2.8 cm)
Mouse Dimensions	4.1 x 2.4 x 1.4 inches (10.4 x 6.1 x 3.6 cm)
Item Weight	1.46 pounds (0.66 kg)
Keyboard Battery	2 x AAA batteries (included)
Mouse Battery	1 x AA battery (included)
Wireless Range	Up to 10 meters (33 feet)
Compatibility	Windows 2000/ME/XP (*64)/Vista/7/8/10, Mac OS X (V10.4 above), Android. Works with Macbooks, desktops, Chromebooks, PCs, laptops, computers, smart TVs. (Note: Requires USB-A port or adapter for Type C only devices).
Special Features	Portable, Round Keycaps, Quiet Operation, 12 Multimedia Hot Keys, Auto-Sleep Function, Removable Keycaps.



Image: An illustration showcasing the wide compatibility of the keyboard and mouse combo with various operating systems and devices, including Mac OS, Windows, Chrome OS, and Linux.

Warranty and Support

FD offers a **36-MONTH AFTER-SALE SERVICE** for your peace of mind. If you encounter any issues with your keyboard and mouse combo, please do not hesitate to reach out to us.
To contact FD support:

1. Click on the store name, "FD Tech."
2. Select "Ask a question" to get in touch.

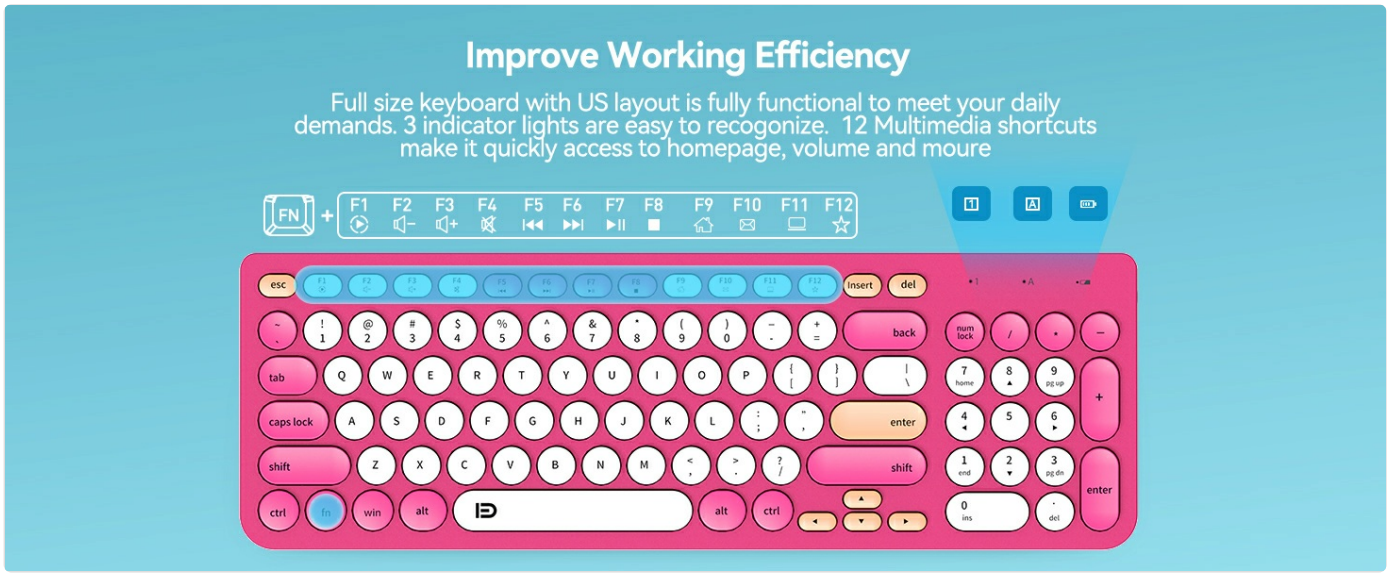


Image: Information regarding FD's customer support, including 7*24H professional support and hassle-free replacement/return policy.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CMQZY2DV

More documents and user manuals: **https://manuals.plus/**