AirMyFun XC-83048

AirMyFun Water Slide Bounce House

Model: XC-83048


Introduction

Thank you for choosing the AirMyFun Water Slide Bounce House. This inflatable bouncy castle is designed to provide a fun and engaging outdoor play experience for children. It features a large splash pool, dual slides, a basketball hoop, and a climbing wall, suitable for both wet and dry use. Please read this manual thoroughly before setup and operation to ensure safe and correct usage.

Package Contents

Upon unpacking, please verify that all the following components are included:

- 1 x AirMyFun Water Slide Bounce House
- 1 x Air Blower
- 1 x Storage Bag
- 1 x Repair Kit
- 8 x Stakes
- 1 x Basketball & Pump
- 1 x Water Pipe

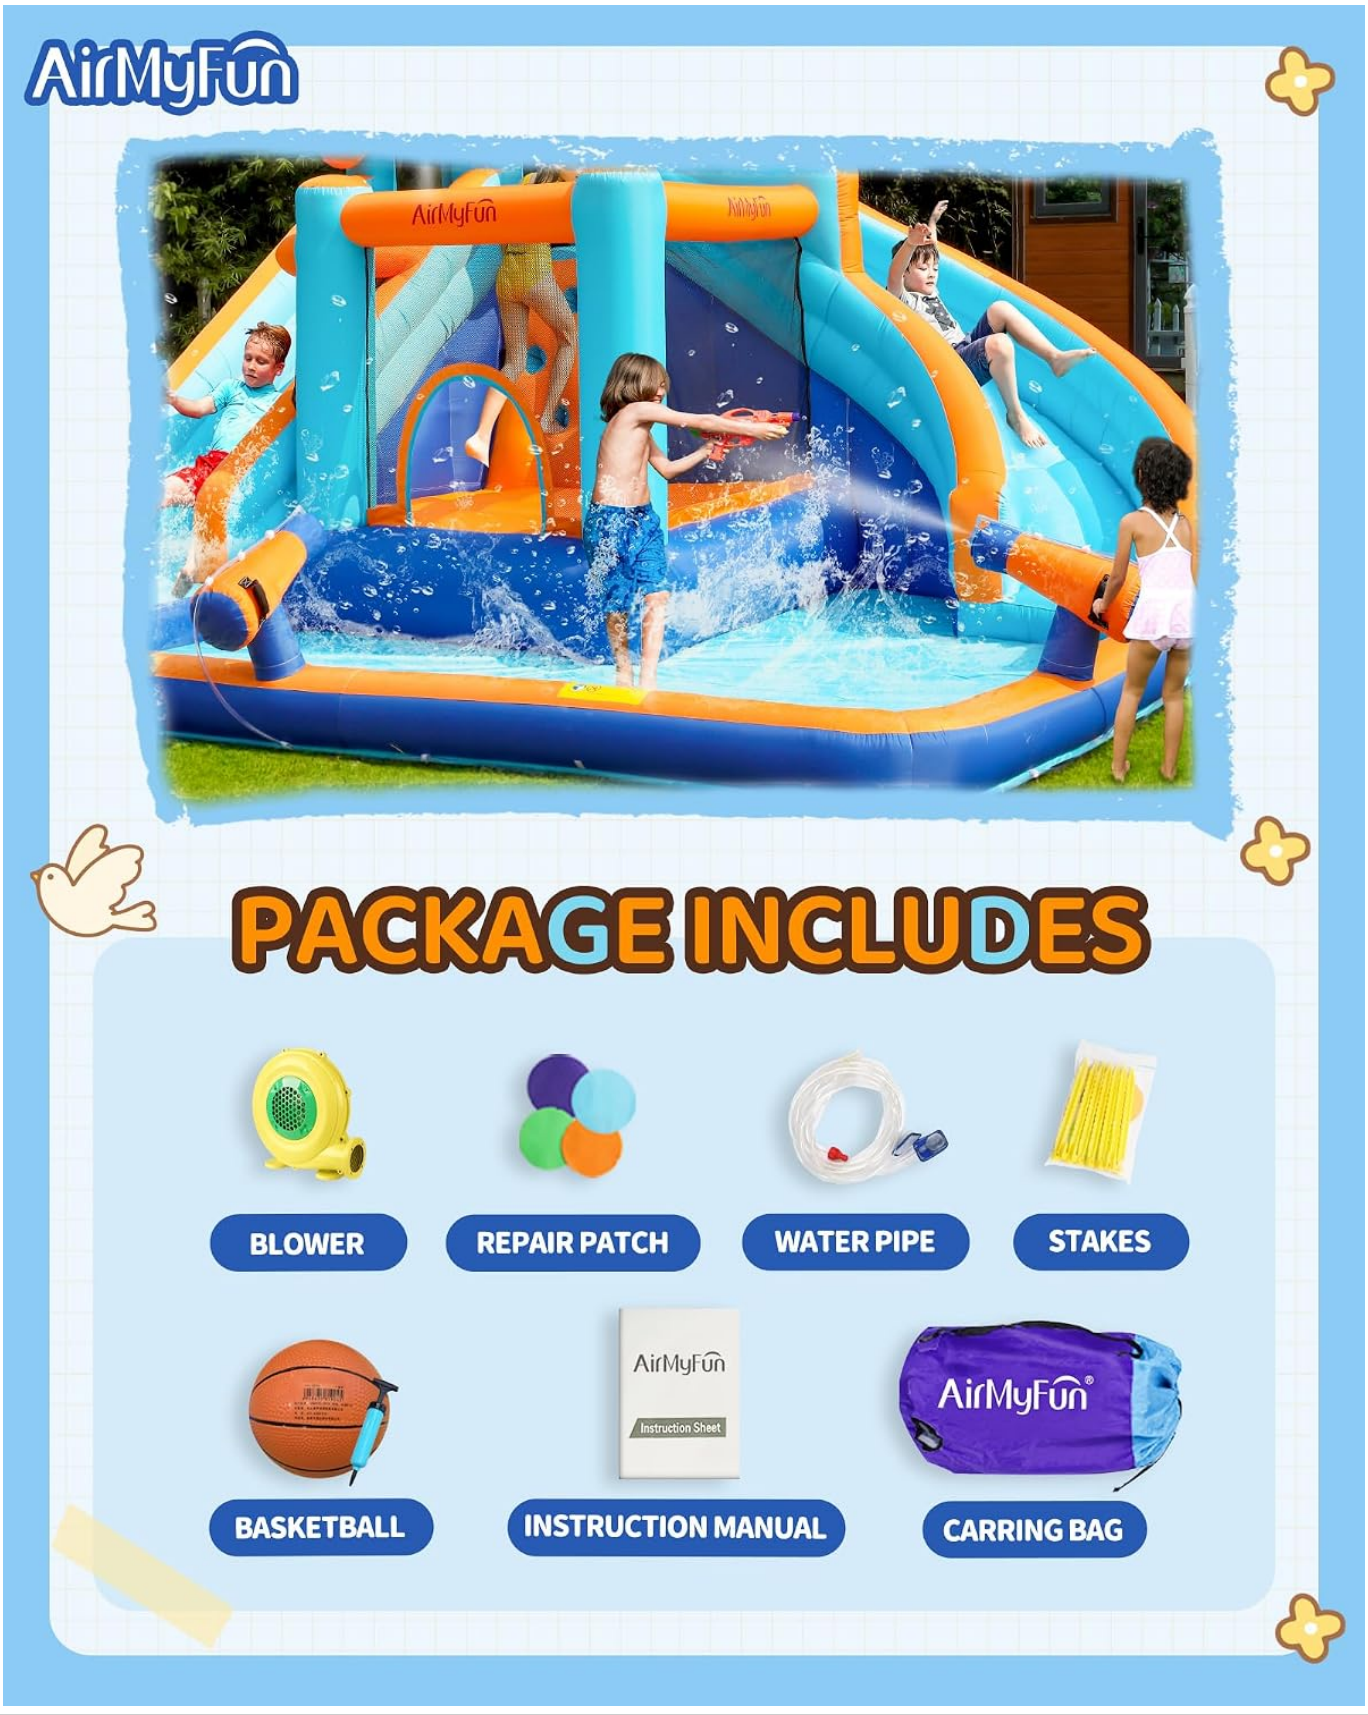

All components included in the AirMyFun Water Slide Bounce House package.

Setup Instructions

Follow these steps for quick and easy inflation of your bounce house:

1. **Unfold the Bounce House:** Lay the bounce house flat on a clean, level, and tender ground surface, ensuring there are no sharp objects underneath.

2. **Connect the Blower:** Attach the inflation pipe of the bounce house securely to the air blower. Ensure the connection is tight to prevent air leakage.
3. **Secure with Stakes:** Use the provided stakes to firmly anchor the bounce house to the ground. This prevents movement during play.
4. **Turn on the Blower:** Plug in the air blower and turn it on. The bounce house will inflate within 2-3 minutes.



Visual guide for setting up the bounce house.

Setup Demonstration Video

This video demonstrates the simple setup process for the AirMyFun Water Slide Bounce House, showing how to unroll, connect the blower, and inflate the unit.

Operating Instructions

The AirMyFun Water Slide Bounce House offers versatile play options for both wet and dry conditions.

Features Overview

- **Dual Slides:** Two long slides allow multiple children to slide simultaneously.
- **Large Splash Pool:** A spacious pool area for water play and landing from the slides.
- **Basketball Hoop:** An integrated mini basketball hoop for added fun and skill development.
- **Climbing Wall:** A challenging climbing wall to access the slides and bounce area.
- **Water Gun:** A water gun feature for interactive water play.



Key features of the bounce house for endless fun.

Wet vs. Dry Use

The bounce house can be used with or without water. For wet use, connect the provided water pipe to a garden hose and attach it to the designated water sprayers on the bounce house. Ensure the splash pool is adequately filled for safe sliding.



The bounce house can be used wet or dry.

Product in Action Video

This video showcases the AirMyFun Double Slide Water Slide in use, highlighting its various play areas and the enjoyment it provides.

Safety Guidelines

WARNING: Failure to follow these instructions may result in serious injury.

- Adult supervision is required at all times.
- Ensure the bounce house is securely anchored before use.
- Do not exceed the maximum weight recommendation of 200 pounds or the recommended number of users (2-5 children).
- Keep sharp objects, jewelry, and shoes away from the bounce house.
- Do not allow children to play near the blower.
- Only use on soft ground, such as grass. Do not set up on concrete or asphalt without adequate padding.
- In case of strong winds or heavy rain, deflate and store the bounce house immediately.
- Ensure the water level in the splash pool is appropriate for safe play.

Maintenance and Storage

Cleaning

To clean the bounce house, wipe surfaces with a damp cloth and mild soap. Rinse thoroughly and ensure it is completely dry before storage to prevent mold and mildew.

Drying

After wet use, allow the bounce house to air dry completely. You can leave the blower running for a while to help dry the interior. Ensure all water is drained from the splash pool.

Storage

Once clean and dry, deflate the bounce house. Fold it neatly and place it in the provided storage bag. Store in a cool, dry place away from direct sunlight and pests.

Repair Kit

The included repair kit can be used for minor punctures. Follow the instructions on the repair patch for proper application.

Troubleshooting

Problem	Possible Cause	Solution
Bounce house not inflating fully	Blower not connected properly, air leak, blower not powerful enough, or zipper/velcro opening.	Check blower connection, inspect for punctures (use repair kit), ensure blower is rated for the unit, and close all zippers/velcro openings.
Bounce house unstable during use	Not properly staked, uneven ground, or too many users.	Ensure all stakes are firmly in the ground, move to a level surface, and reduce the number of users.
Water not spraying from features	Water pipe kinked, hose not connected, or water pressure too low.	Check water pipe for kinks, ensure garden hose is connected and water supply is on, and verify water pressure.

Specifications

- **Model:** XC-83048
- **Brand:** AirMyFun
- **Inflated Dimensions (L x W x H):** 171" x 163" x 94" (approximately 14'2" x 13'3" x 7'8")
- **Material:** Oxford Cloth + PVC-coated Polyester
- **Recommended Age Range:** 3-12 years old
- **Maximum Weight Recommendation:** 200 Pounds
- **Recommended Number of Users:** 2-5 children
- **Blower Wattage:** 750 W



Detailed dimensions of the bounce house.

Warranty and Support

For any questions, concerns, or warranty claims regarding your AirMyFun Water Slide Bounce House, please contact AirMyFun customer support. Refer to your purchase documentation for specific warranty details and contact information. We hope you and your family enjoy countless hours of fun with your new bounce house!

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question