Noma 2 x CTI1513696

Noma Quick Clip 100 LED C9 Light Set Instruction Manual

Brand: Noma | Model: 2 x CTI1513696

1. Product Overview

The Noma Quick Clip 100 LED C9 Light Set offers a convenient and brilliant solution for your lighting needs. This 2-pack set features integrated spring-loaded clips for effortless attachment to various surfaces, including eaves, shingles, trees, bushes, and railings. Each light can be adjusted to your preferred angle, ensuring optimal display. Utilizing energy-efficient LED technology, these lights remain cool to the touch, enhancing safety for both indoor and outdoor applications. With a combined strand length of 66.8 feet (20.3 meters) and 100 C9 LED bulbs spaced 8 inches apart, this set provides extensive coverage. Multiple strands can be connected end-to-end for larger installations.



Image: Noma Quick Clip 100 LED C9 Light Set (2-Pack) packaging.

2. Safety Information

- Always inspect the light set for any damage before use. Do not use if wires are frayed or bulbs are broken.
- Ensure all connections are secure and protected from moisture, especially for outdoor use.
- Do not overload electrical outlets. Connect only the specified maximum number of strands (up to 45 strands) end-to-end.
- LED bulbs remain cool to the touch, reducing fire hazards, but always exercise caution when handling electrical products.
- Keep children and pets away from electrical cords and connections.
- Unplug the light set from the power source when not in use or before performing any maintenance.

3. Package Contents

Each Noma Quick Clip 100 LED C9 Light Set package contains:

- 1 x 66.8 ft (20.3 m) strand of 100 C9 LED lights with integrated Quick Clips.

This product is sold as a 2-pack, so you will receive two such strands.

4. Setup and Installation

The Noma Quick Clip lights are designed for easy and secure installation. Follow these steps for optimal setup:

1. **Unpack and Inspect:** Carefully remove the light strands from the packaging. Uncoil them gently to avoid tangling. Check for any visible damage to the bulbs, clips, or wiring.
2. **Plan Your Display:** Determine where you want to install the lights. Consider the total length needed and the number of strands you will connect.
3. **Utilize Quick Clips:** The integrated spring-loaded clips allow for quick attachment. Simply open the clip and secure it to the desired surface. These clips are designed to attach to various surfaces such as eaves, shingles, tree branches, bushes, or railings.

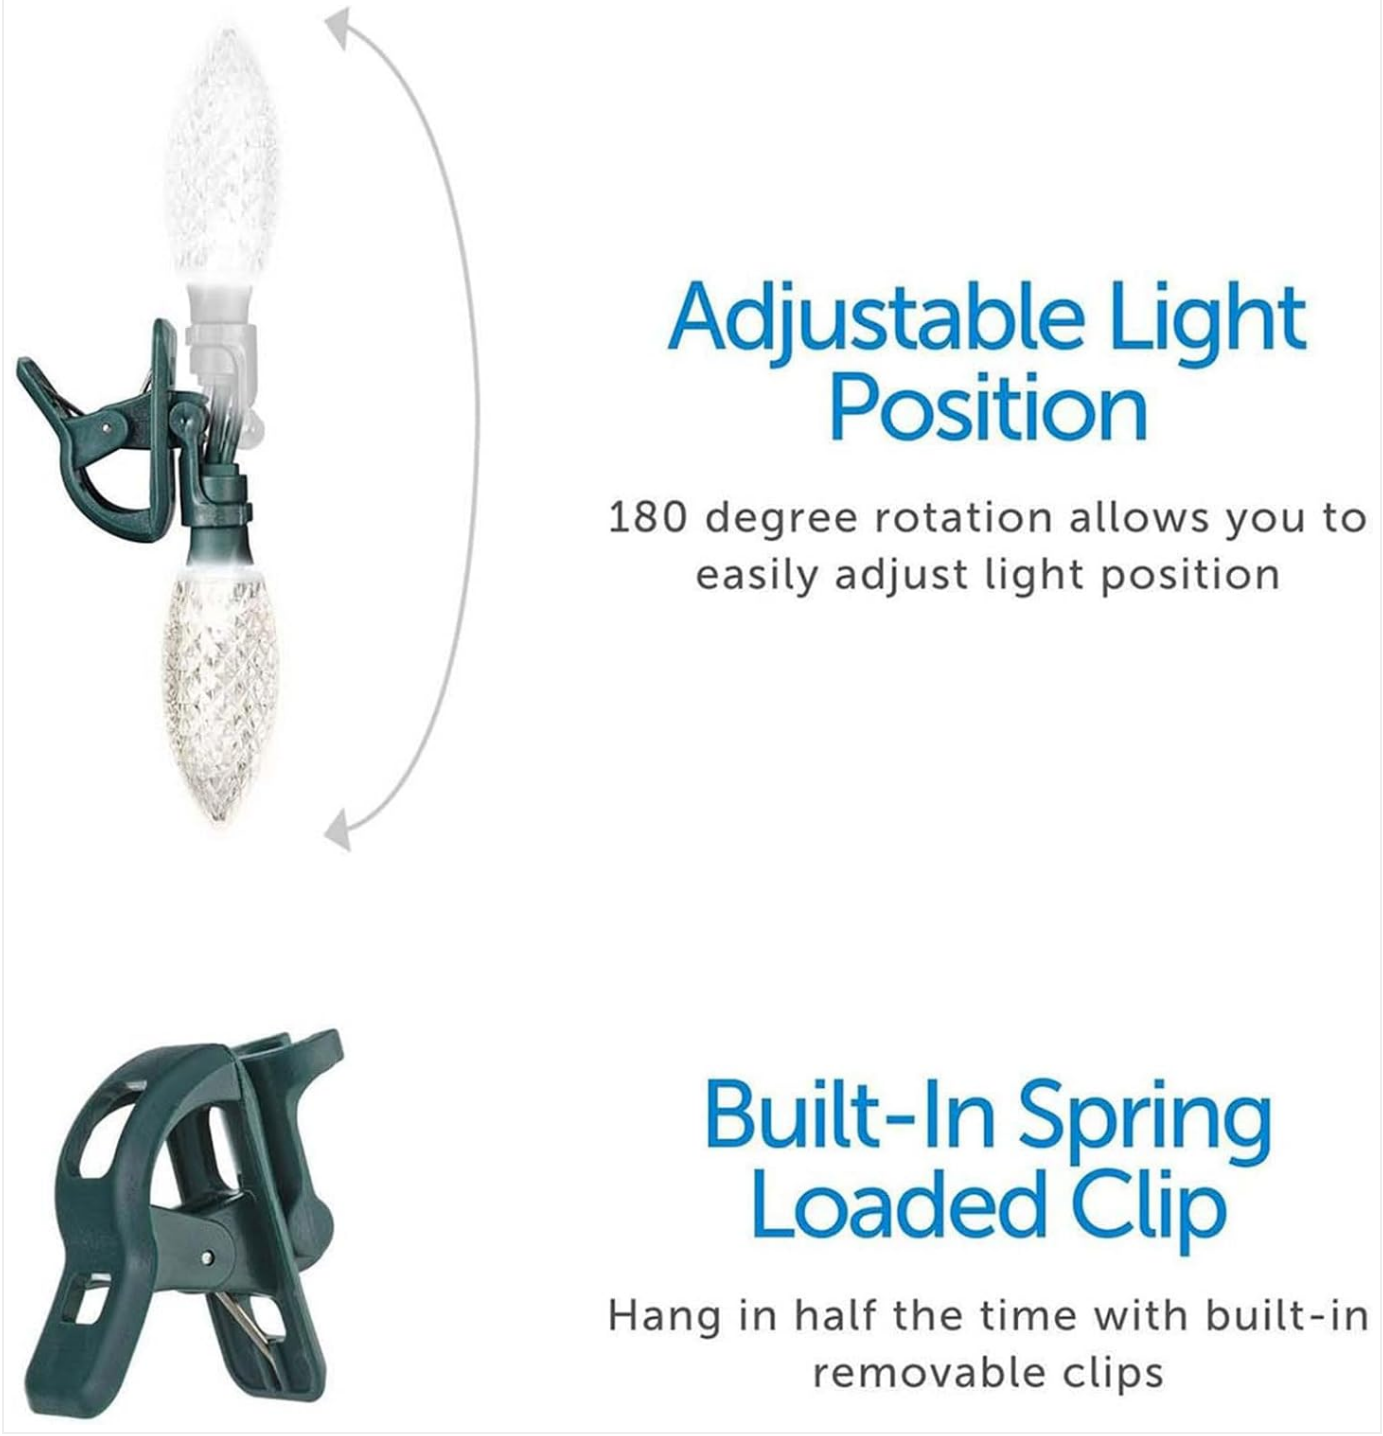


Image: Illustration of adjustable light position and the built-in quick clip mechanism.

4. **Adjust Light Position:** Each light bulb can be rotated 180 degrees, allowing you to easily adjust the light position to direct illumination precisely where desired.



Image: Close-up of a hand securing a light string using the quick clip.



Image: Noma Quick Clip lights installed on a tree branch.



Image: Noma Quick Clip lights installed along a roofline.

5. **Connect Multiple Strands:** Each strand is designed with plugs at both ends, allowing for seamless end-to-end connection. You can connect up to 45 strands to cover extensive areas. Ensure all connections are tight and secure.
6. **Power On:** Once installed, plug the light set into a suitable electrical outlet.

Video: This video demonstrates the ease of installation of Noma Quick Clip Christmas String Lights, showing how they attach to various surfaces and illuminate a home.

5. Operation

Operating your Noma Quick Clip Light Set is straightforward:

- Simply plug the light set into a standard 120-volt electrical outlet.

- The lights are designed for continuous illumination when powered.
- These lights are suitable for both indoor and outdoor use, providing versatile decoration options.

6. Maintenance

To ensure the longevity and optimal performance of your Noma Quick Clip Light Set, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the bulbs and wires with a soft, dry cloth if they become dirty. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, unplug the lights and carefully coil the strands. Store them in a cool, dry place, preferably in their original packaging or a protective container, to prevent tangling and damage.
- **Inspection:** Before each use, especially after storage, inspect the entire light set for any signs of wear, damage, or loose connections.
- **LED Durability:** The LED bulbs are designed for long-lasting performance and are not user-replaceable. If a bulb fails, the rest of the strand should remain lit.

7. Troubleshooting

If you encounter issues with your Noma Quick Clip Light Set, consider the following common troubleshooting steps:

- **Lights Not Turning On:**
  - Ensure the light set is securely plugged into a working electrical outlet.
  - Check the circuit breaker to ensure the outlet has power.
  - If connecting multiple strands, ensure all end-to-end connections are firm.
- **Partial Section Not Lighting:**
  - While LED strands are generally robust, check for any visibly damaged or loose bulbs.
  - Inspect the wiring for any cuts or breaks, especially at connection points between strands.
- **Flickering Lights:**
  - This could indicate a loose connection. Re-check all plugs and end-to-end connections.
  - Ensure the power source is stable.

If these steps do not resolve the issue, please contact Noma customer support for further assistance.

8. Specifications

Feature	Detail
Brand	Noma
Model Number	2 x CTI1513696
Light Source Type	LED
Number of Lights	100 per strand
Bulb Type	C9 Diamond Cut
Color	Multicolor

Feature	Detail
Total Length	66.8 feet (20.3 meters) per strand
Bulb Spacing	8 inches
Power Source	Corded Electric
Voltage	120 Volts
Wattage	2.4 Watts
Material	Plastic
Mounting Type	Quick Clip
Indoor/Outdoor Use	Yes
Max Connectable Strands	Up to 45
Product Dimensions	801.6"L x 1.25"W x 1.25"H
UPC	193802348279

9. Warranty and Support

The Noma Quick Clip 100 LED C9 Light Set comes with a 3-Year Limited Warranty. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or replacement parts, please contact Noma customer service. Refer to the product packaging or the official Noma website for the most current contact information.

For additional information and product registration, visit the official Noma website:Noma Brand Store

© 2024 Noma. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question