Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nespresso EN80.B

Nespresso Inissia EN80.B Coffee Machine User Manual

Model: EN80.B | Brand: Nespresso

1. Introduction

Welcome to the Nespresso Inissia EN80.B Coffee Machine user manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new Nespresso machine. The Inissia EN80.B is designed for convenience, offering a high-pressure pump system (19 bar) for perfect espresso and lungo coffees using Nespresso Original Line capsules.



Figure 1.1: Front view of the Nespresso Inissia EN80.B coffee machine with a cup of coffee.

2. Important Safety Instructions

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in injury or damage to the machine.

- Always connect the machine to a grounded power outlet.
- Do not immerse the machine, cord, or plug in water or other liquids.
- Keep children away from the machine during operation.
- Unplug the machine when not in use and before cleaning.
- Do not operate the machine with a damaged cord or plug.
- Use only Nespresso Original Line capsules with this machine.
- Avoid contact with hot surfaces and hot liquids.
- Do not open the capsule lever during brewing.
- Ensure the water tank is filled before operating.

3. Package Contents

Verify that all components are present in the packaging:

- Nespresso Inissia EN80.B Coffee Machine
- Removable Water Tank (0.7 L capacity)
- Drip Tray and Cup Support
- Nespresso Descaling Kit (2 x 100 ml)
- User Manual (this document)



Figure 3.1: Nespresso Inissia EN80.B machine shown with the included descaling kit.

4. Setup and First Use

1. **Unpacking:** Carefully remove the machine from its packaging. Place it on a stable, flat, heat-resistant surface, away from water splashes and heat sources.
2. **Rinsing the Machine:**
    - Fill the water tank with fresh drinking water.

- Place a container (at least 0.5 L) under the coffee outlet.
- Press either the Espresso or Lungo button to start the rinsing cycle. Repeat this process 2-3 times.

3. **Filling the Water Tank:** Remove the water tank from the back of the machine. Fill it with fresh drinking water up to the MAX level. Replace the tank securely.



Figure 4.1: Side view illustrating the removable water tank.

4. **Powering On:** Plug the machine into a grounded power outlet. The two coffee buttons will blink, indicating the machine is heating up. They will glow steadily when ready (approximately 25 seconds).

5. Operating Instructions

5.1. Preparing Coffee

1. **Ensure Readiness:** Make sure the water tank is filled and the machine is heated (buttons are steady green).
2. **Insert Capsule:** Lift the lever completely. Insert a Nespresso Original Line capsule into the capsule slot. Close the lever firmly.



Figure 5.1: Top view indicating the capsule insertion area and coffee buttons.

3. **Place Cup:** Position a cup under the coffee outlet. Adjust the drip tray if using a larger mug.
4. **Select Coffee Size:**

   - Press the **Espresso button** (smaller cup icon) for a short coffee (approx. 40 ml).
   - Press the **Lungo button** (larger cup icon) for a long coffee (approx. 110 ml).

   The button will blink during brewing and glow steadily when finished.
5. **Eject Capsule:** After brewing, lift the lever to automatically eject the used capsule into the used capsule container.

Close the lever.

5.2. Programming Coffee Volume

You can customize the volume for both Espresso and Lungo buttons:

1. Ensure the machine is ready.
2. Insert a capsule.
3. Place a cup under the outlet.
4. Press and hold the desired coffee button (Espresso or Lungo).
5. Release the button when the desired volume of coffee has been dispensed. The machine will remember this volume for future brews.

6. Maintenance and Cleaning

6.1. Daily Cleaning

- **Drip Tray and Used Capsule Container:** Empty and rinse the drip tray and used capsule container daily. Wash them with warm water and a mild detergent.
- **Water Tank:** Rinse the water tank regularly with fresh water.
- **Machine Exterior:** Wipe the machine's exterior with a soft, damp cloth. Do not use abrasive cleaning agents or immerse the machine in water.

6.2. Descaling

Descaling is crucial for maintaining your machine's performance and coffee quality. The frequency depends on water hardness and usage. The machine will indicate when descaling is needed (buttons may blink in a specific pattern, refer to Nespresso support for exact pattern).
Procedure (using Nespresso Descaling Kit):

1. Empty the drip tray and used capsule container.
2. Fill the water tank with 500 ml of fresh water and add one sachet (100 ml) of Nespresso descaling solution.
3. Place a large container (at least 1 L) under the coffee outlet.
4. Enter descaling mode (refer to Nespresso's official guide or machine-specific instructions for button combination, typically holding both coffee buttons for a few seconds).
5. Press the Lungo button to start the descaling cycle. The machine will run the solution through.
6. Once the tank is empty, refill it with fresh water and press the Lungo button again to rinse the machine.
7. Exit descaling mode (usually by pressing both buttons again).
8. Clean the machine thoroughly after descaling.



Figure 6.1: The Nespresso Descaling Kit included with the machine.

6.3. Eco Mode

The Nespresso Inissia EN80.B features an Eco Mode, which automatically switches off the machine after 9 minutes of inactivity to save energy.

7. Troubleshooting

Problem	Possible Cause	Solution
No coffee flow, only water.	No capsule inserted or capsule incorrectly inserted.	Insert a new capsule correctly and close the lever firmly.
Coffee is cold.	Machine not preheated, or cups are cold.	Allow machine to preheat fully. Rinse cups with hot water before brewing. Descale if necessary.
Machine not turning on.	No power supply.	Check power cord connection and wall outlet.
Water leaking from machine.	Water tank not properly seated or damaged.	Ensure water tank is correctly positioned. Check for cracks in the tank.
Coffee flow is very slow or blocked.	Machine needs descaling.	Perform a descaling cycle as per Section 6.2.

8. Technical Specifications

Brand	Nespresso
Model Name	Nespresso Inissia EN80.B
Dimensions (L x W x H)	32 x 12 x 23 cm (12.6 x 4.7 x 9.1 inches)
Weight	2 kg (4.4 lbs)
Water Tank Capacity	0.7 Liters
Pressure Pump	19 Bar
Coffee Type Compatibility	Nespresso Original Line Capsules
Special Features	Automatic cleaning function, Eco Mode (auto-off after 9 minutes)
Included Components	Descaling Set (2 x 100 ml)

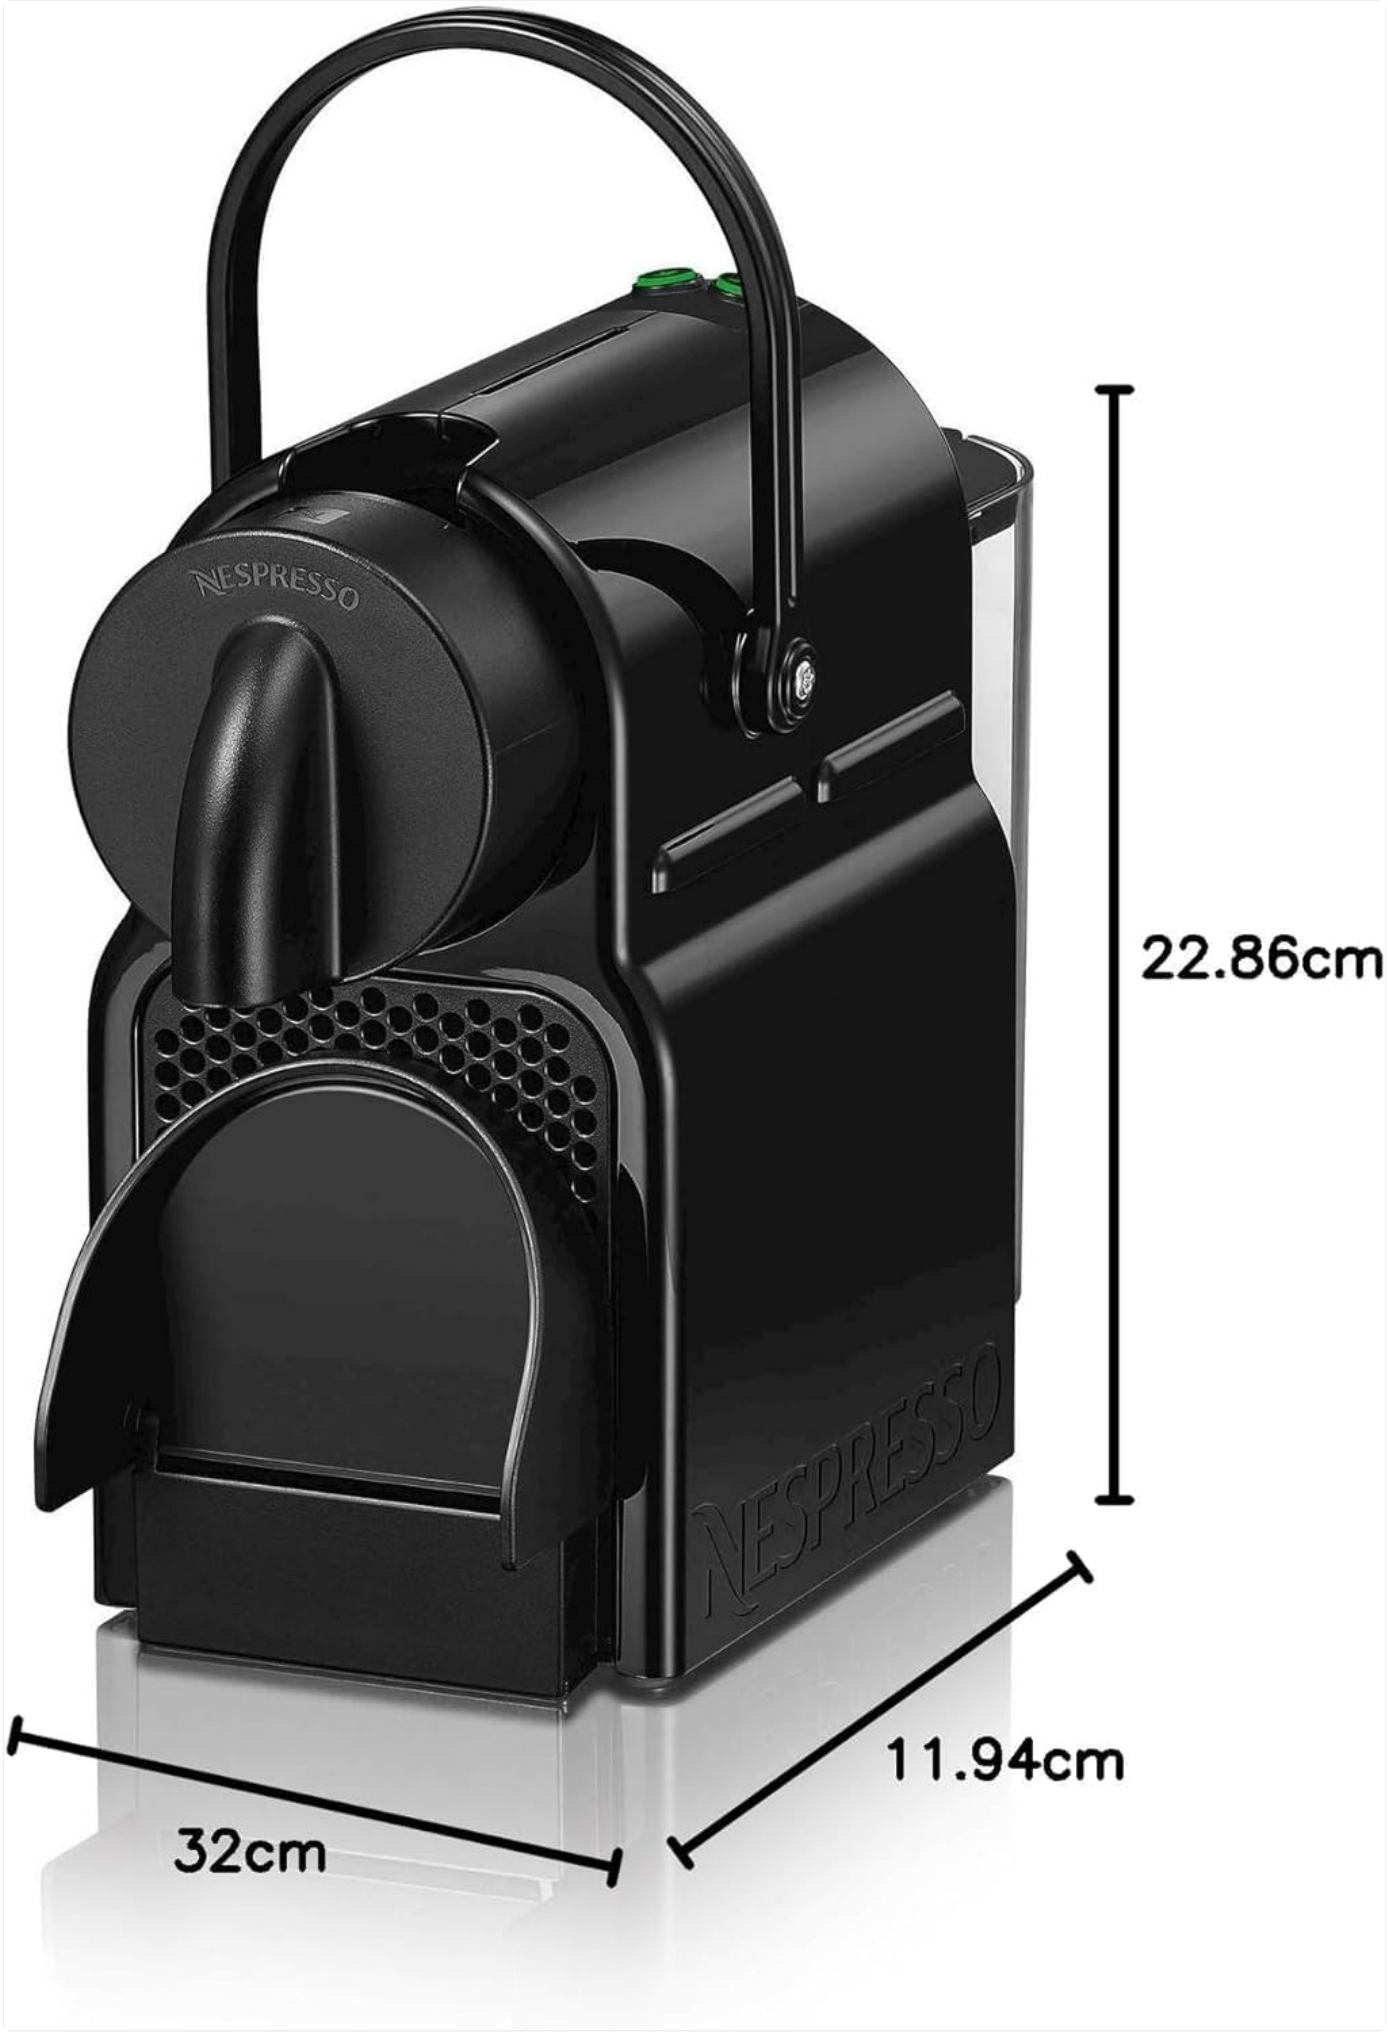


Figure 8.1: Dimensions of the Nespresso Inissia EN80.B coffee machine.

9. Warranty and Support

For warranty information, please refer to the warranty card included with your product or visit the official Nespresso website.
For further assistance, technical support, or to order Nespresso capsules and accessories, please contact Nespresso Customer Service or visit their official website:
www.nespresso.com

© 2024 Nespresso. All rights reserved. | Model: EN80.B

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CN93SHDQ

More documents and user manuals: **https://manuals.plus/**