Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TECURS KB096

TECURS Wireless Bluetooth Keyboard User Manual

Model: KB096

1. Introduction

Thank you for choosing the TECURS Wireless Bluetooth Keyboard. This keyboard is designed for versatility and efficiency, offering seamless connectivity across multiple devices. With its dual-mode connectivity (Bluetooth and 2.4G USB), silent scissor-switch keys, and multimedia shortcuts, it provides a comfortable and productive typing experience for various operating systems including Windows, Mac, Android, and iOS.



Image: The TECURS Wireless Bluetooth Keyboard, showcasing its sleek design and the included 2.4G USB receiver.



Image: Overview of the keyboard's key features including Bluetooth/2.4G connectivity, full-size layout, responsive keys, 17 multimedia keys, power saving, and 5 million keystrokes durability.

2. Package Contents

Please check the package for the following items:

- 1 x TECURS Wireless Bluetooth Keyboard (Model KB096)
- 1 x USB 2.4G Receiver (typically stored in the battery compartment)
- 1 x User Manual

3. Setup

3.1. Installing Batteries

The keyboard requires **2 x AAA batteries** (not included). To install:

1. Locate the battery compartment on the underside of the keyboard.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: View of the keyboard's underside, showing the battery compartment where 2 AAA batteries are inserted. The 2.4G USB receiver is also stored here.

3.2. Powering On/Off

Locate the power switch on the underside of the keyboard. Slide it to the 'ON' position to power on the keyboard, and 'OFF' to power off.

3.3. Connecting to Devices

The TECURS keyboard supports both 2.4G USB wireless and Bluetooth connectivity, allowing connection to up to four devices simultaneously (one via 2.4G USB and three via Bluetooth).



Image: Diagram illustrating the keyboard's multi-device connectivity, showing connections to a tablet (BT1), laptop (BT2), smartphone (BT3), and a desktop PC (2.4G USB).

3.3.1. 2.4G USB Wireless Connection

1. Take out the 2.4G USB receiver from the keyboard's battery compartment.
2. Plug the USB receiver into an available USB port on your computer or device.
3. Turn on the keyboard. It should automatically connect to the device via the 2.4G receiver.

3.3.2. Bluetooth Connection (BT1, BT2, BT3)

The keyboard can pair with up to three Bluetooth devices. Follow these steps for each device:

1. Turn on the keyboard.
2. Press and hold the **Fn + BT1** (or **Fn + BT2**, **Fn + BT3**) key combination for 3-5 seconds until the corresponding Bluetooth indicator light (located above the numeric keypad) starts flashing rapidly. This indicates the keyboard is in pairing mode.
3. On your device (computer, tablet, smartphone), go to Bluetooth settings.

4. Search for new devices. You should see "TECURS Keyboard" or a similar name appear in the list.
5. Select the keyboard to pair. Your device may prompt you to enter a code displayed on the screen using the keyboard, then press Enter.
6. Once paired, the indicator light will stop flashing and remain solid for a few seconds before turning off, indicating a successful connection.



Image: Close-up of the keyboard's top right, showing the BT1/2/3 device pairing indicators, USB receiver slot, and the Bluetooth ON/OFF switch on the underside.

3.4. Switching Between Connected Devices

To switch between connected devices:

- For 2.4G USB connected device: Press **Fn + 2.4G** (usually indicated by a specific key or the 2.4G icon).
- For Bluetooth devices: Press **Fn + BT1**, **Fn + BT2**, or **Fn + BT3** to switch to the corresponding paired device. The switch is quick and seamless.

4. Operating Instructions

4.1. Basic Typing

The keyboard features a standard UK layout with 110 keys, including a full numeric keypad, providing a familiar and comfortable typing experience.

4.2. Multimedia and Function Keys

The top row of keys (F1-F12) and other dedicated keys serve as multimedia and function shortcuts. To activate these functions, press the **Fn** key simultaneously with the desired function key.

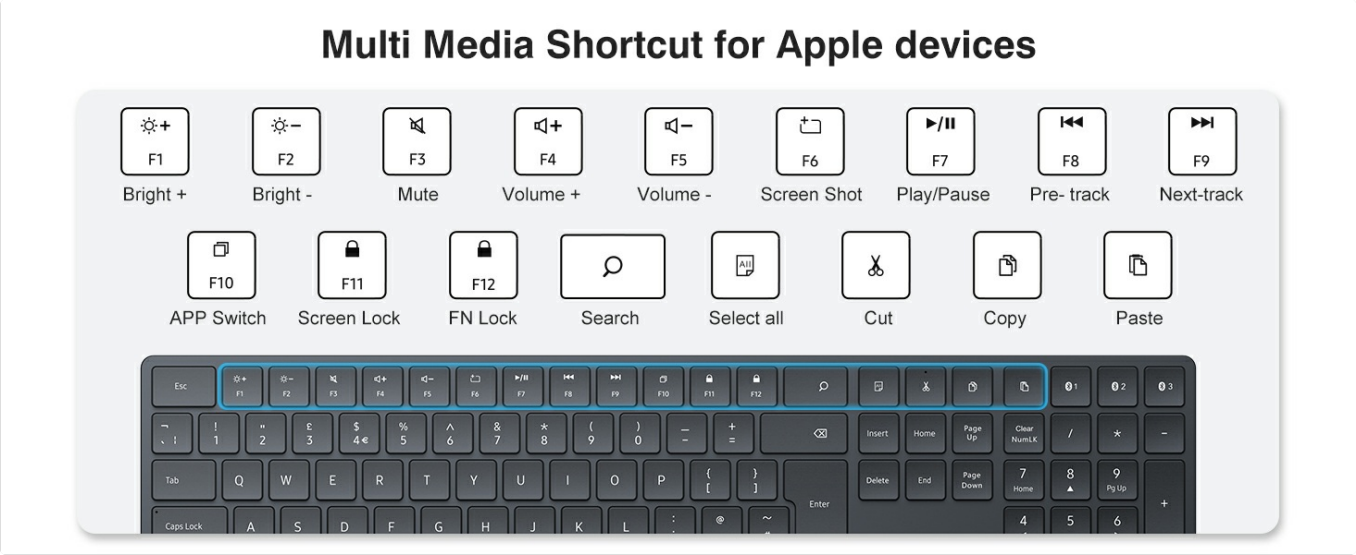


Image: A detailed layout of the keyboard highlighting the multimedia shortcut keys (F1-F12) and their functions, such as Brightness, Mute, Volume, Screen Shot, Play/Pause, Track navigation, App Switch, Screen Lock, FN Lock, Search, Select All, Cut, Copy, and Paste.

Common Fn Key Combinations

Key Combination	Function
Fn + F1	Brightness Down
Fn + F2	Brightness Up
Fn + F3	Mute
Fn + F4	Volume Down
Fn + F5	Volume Up
Fn + F6	Screenshot
Fn + F7	Play/Pause
Fn + F8	Previous Track
Fn + F9	Next Track
Fn + F10	App Switch
Fn + F11	Screen Lock
Fn + F12	FN Lock (locks F-keys to multimedia functions)
Fn + Search	Search

Key Combination	Function
Fn + Select All	Select All
Fn + Cut	Cut
Fn + Copy	Copy
Fn + Paste	Paste

Note: Some functions may vary depending on the operating system (Windows, Mac, Android, iOS).

5. Maintenance

5.1. Battery Life and Replacement

The keyboard is designed for extended battery life, up to 24 months with typical usage. When the battery is low, the Bluetooth indicator light (or a dedicated low battery indicator) may flash red. Replace the 2 x AAA batteries as described in Section 3.1.



Image: A visual representation of the keyboard's battery life, indicating its long-lasting power. Remember to use 2 AAA batteries (not included).

5.2. Cleaning

To clean your keyboard:

- Turn off the keyboard before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Avoid excessive moisture and do not spray cleaners directly onto the keyboard.
- For dust and debris between keys, use compressed air.

5.3. Storage

When not in use for extended periods, turn off the keyboard to conserve battery life. Store it in a cool, dry place away from direct sunlight and extreme temperatures.

6. Troubleshooting

If you encounter issues with your TECURS keyboard, please refer to the following common solutions:

6.1. Keyboard Not Connecting/Responding

- **Check Power:** Ensure the keyboard is turned on and has sufficient battery power. Replace batteries if necessary.
- **2.4G USB Connection:**
  - Ensure the USB receiver is securely plugged into a working USB port.
  - Try plugging the receiver into a different USB port.
  - Ensure you have switched the keyboard to 2.4G mode (if applicable, check manual for specific key combination).
- **Bluetooth Connection:**
  - Ensure Bluetooth is enabled on your device.
  - Ensure the keyboard is in the correct Bluetooth channel (BT1/BT2/BT3) for the device you are trying to connect to.
  - If the keyboard was previously paired, try unpairing it from your device's Bluetooth settings and then re-pairing it.
  - Ensure the keyboard is in pairing mode (indicator light flashing).
- **Distance:** Ensure the keyboard is within the effective operating range (up to 10 meters) of your device.

6.2. Lag or Missed Keystrokes

- **Interference:** Wireless interference from other devices (Wi-Fi routers, cordless phones, other wireless peripherals) can affect performance. Try moving the keyboard closer to your device or away from potential sources of interference.
- **Battery Level:** Low battery can cause inconsistent performance. Replace batteries.
- **Surface:** Ensure the keyboard is on a stable, flat surface.

6.3. Multimedia Keys Not Working

- Ensure you are pressing the **Fn** key simultaneously with the desired function key.
- Check if the Fn Lock is enabled (if applicable). Press **Fn + F12** to toggle Fn Lock.
- Some multimedia functions may require specific drivers or software on your operating system. Ensure your system is up to date.

7. Specifications

Feature	Description
Model	KB096
Connectivity	Bluetooth (3 channels), 2.4G USB Wireless
Layout	UK Layout, Full-size with Numeric Keypad
Number of Keys	110
Key Type	Scissor-Switch Keys
Material	Stainless Steel, ABS Plastic

Feature	Description
Dimensions (L x W x H)	429.9mm x 121.2mm x 22.3mm (16.9in x 4.7in x 0.8in)
Weight	740 g
Power Source	2 x AAA Batteries (not included)
Battery Life	Up to 24 months (typical usage)
Operating System Compatibility	Windows, Mac, Android, iOS
Special Features	Ultra-thin design, Silent keys, Multimedia hotkeys, 10-degree ergonomic tilt, Anti-slip pads, Automatic sleep mode



Image: The keyboard shown with its dimensions: 16.9 inches (429.9mm) length, 4.7 inches (121.2mm) width, and 0.8 inches (22.3mm) thickness.



Image: A close-up view of the keyboard's scissor-switch key mechanism, illustrating its design for quiet and precise typing.



Image: Depiction of the keyboard's underside showing anti-slip rubber pads and its ergonomic 8-degree typing angle for comfortable use.

8. Warranty and Support

TECURS products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. For detailed warranty information, please refer to the warranty card included in your package or contact TECURS customer support.

Customer Support

If you have any questions, require technical assistance, or need to claim warranty service, please contact TECURS customer support through the following channels:

- **Email:** Refer to your product packaging or the official TECURS website for the most current support email address.
- **Website:** Visit the official TECURS website for FAQs, troubleshooting guides, and contact forms.

Please have your product model (KB096) and purchase information ready when contacting support.

© 2025 TECURS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CNPDLTRR

More documents and user manuals: **https://manuals.plus/**