## ECONTROLLY POLAROI-13

# Replacement Remote Control User Manual

Model: POLAROI-13 | Brand: ECONTROLLY

## Introduction

This manual provides instructions for the ECONTROLLY Replacement Remote Control, designed to operate Polaroid SoundBar Speakers (models PLA20SB003A, TB285) and Kruger&Matz Speaker System Ghost (models 2.1 SE KM0544.1, GHOST KM0543). This remote control is a direct replacement and does not require programming. Simply insert batteries to begin operation.

## Setup

### Battery Installation

The remote control requires two (2) AA batteries (not included). For optimal performance, use new alkaline batteries. Rechargeable batteries are not recommended as they may not provide sufficient power for proper operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the release tab (if present) to open.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.



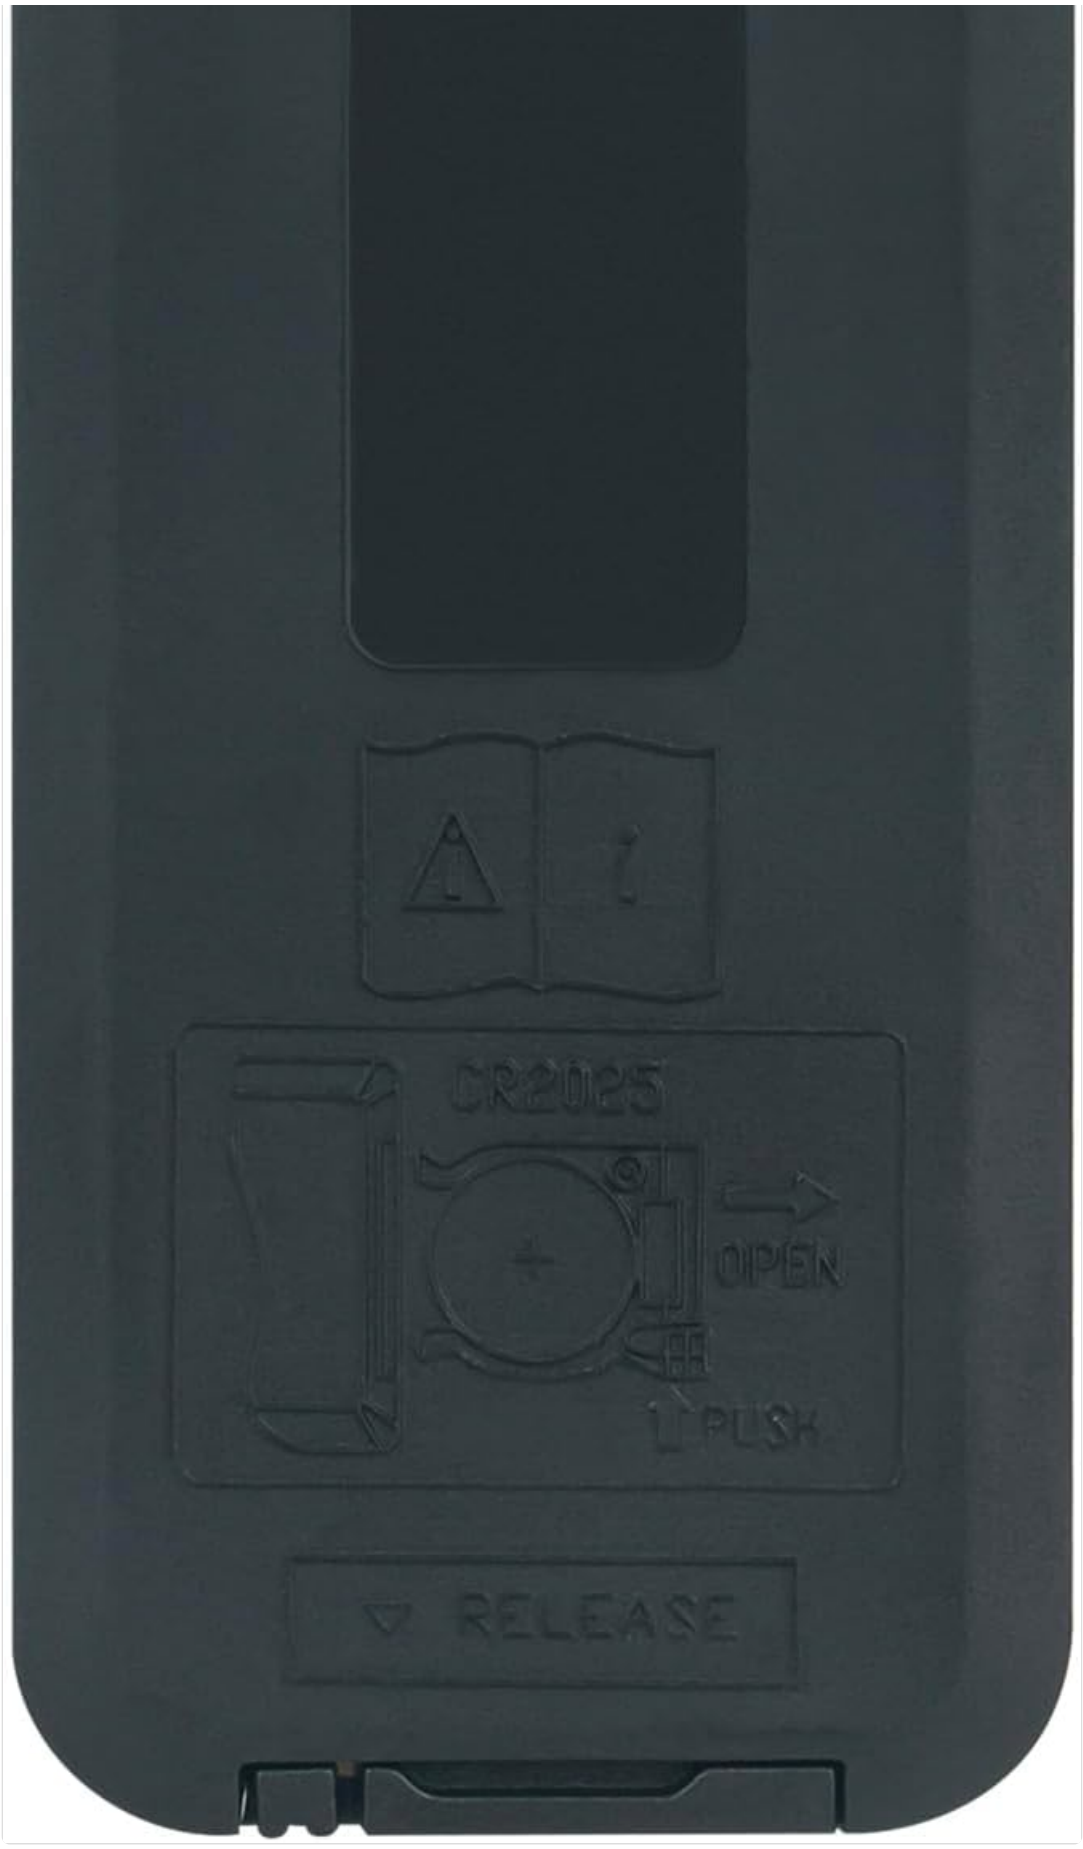



Figure 1: Back of the remote control with battery compartment details. The image shows the rear of the remote, highlighting the area where batteries are inserted, typically with a sliding cover or release mechanism.

## Operating Instructions

Once batteries are installed, the remote control is ready for use. Point the remote directly at your soundbar or speaker system. Ensure there are no obstructions between the remote and the device.

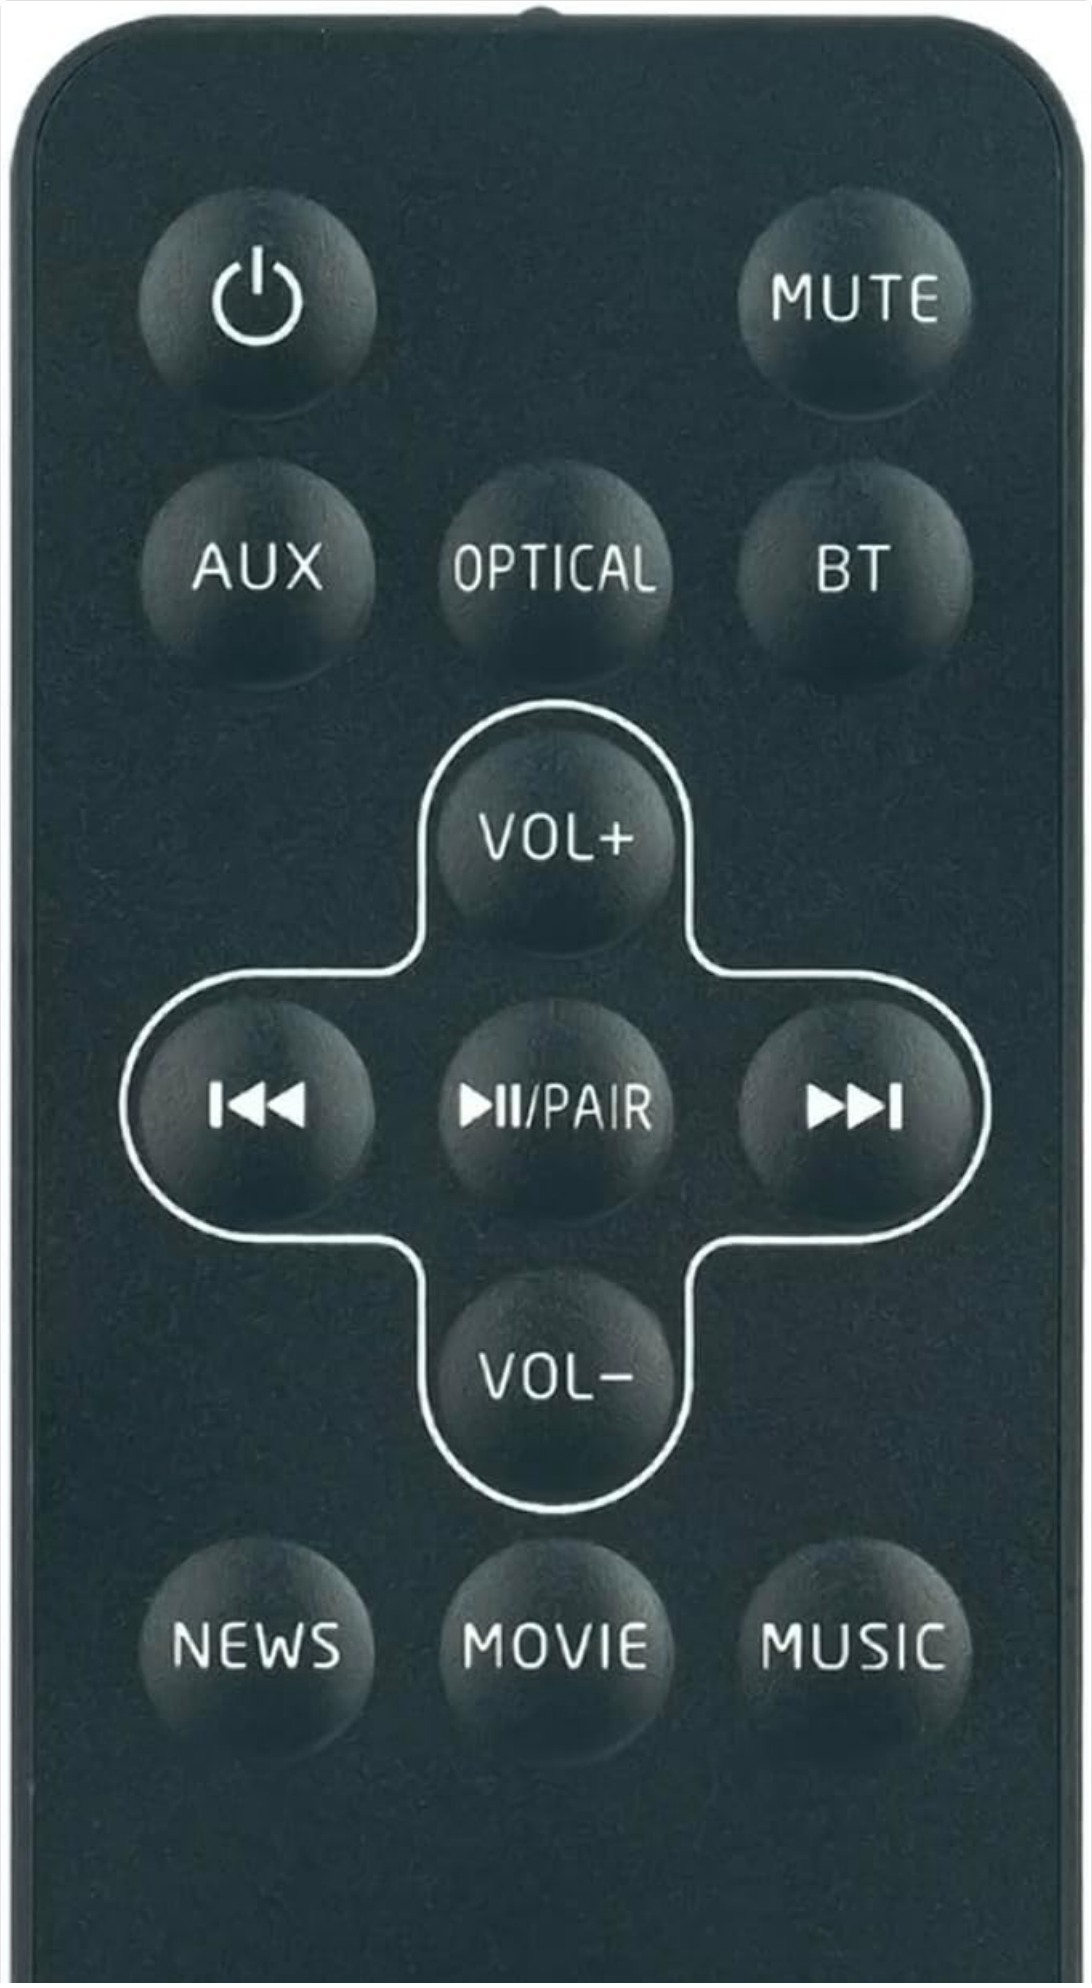




Figure 2: Front view of the remote control. This image displays the layout of all buttons, including power, volume, input selection, and sound modes.

### Button Functions

| Button | Function |
|---|---|
| **Power ( )** | Turns the soundbar/speaker system On or Off. |
| **MUTE** | Mutes or unmutes the audio output. |
| **AUX** | Selects the Auxiliary input source. |
| **OPTICAL** | Selects the Optical input source. |
| **BT** | Selects the Bluetooth input source. |
| **VOL+** | Increases the volume level. |
| **VOL-** | Decreases the volume level. |
| **(Previous Track)** | Skips to the previous track (in compatible modes like Bluetooth). |
| **/PAIR (Play/Pause/Pair)** | Plays or pauses audio. Long press to initiate Bluetooth pairing mode. |
| **(Next Track)** | Skips to the next track (in compatible modes like Bluetooth). |
| **NEWS** | Activates News sound mode (if supported by the soundbar). |
| **MOVIE** | Activates Movie sound mode (if supported by the soundbar). |
| **MUSIC** | Activates Music sound mode (if supported by the soundbar). |

## Maintenance

### Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's finish or internal components.

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new alkaline batteries. Do not mix old and new batteries or different types of batteries.

### Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

## Troubleshooting

- **Remote not responding:**
  - Ensure new alkaline batteries are correctly installed with proper polarity.
  - Check if the batteries are depleted and replace them.
  - Verify there are no obstructions between the remote control and the soundbar/speaker system.
  - Ensure you are within the effective operating range of the soundbar/speaker system.
- **Intermittent response:**
  - This may indicate low battery power. Replace batteries.
  - Ensure the remote's infrared emitter is clean and unobstructed.
- **Specific buttons not working:**
  - Confirm the button's function is supported by your specific soundbar/speaker model.
  - Try replacing batteries.

If troubleshooting steps do not resolve the issue, please refer to the Support section for further assistance.

## Specifications

| Feature | Detail |
|---|---|
| **Model Number** | POLAROI-13 |
| **Brand** | ECONTROLLY |
| **Compatible Models** | Polaroid SoundBar Speakers PLA20SB003A, TB285; Kruger&Matz Speaker System Ghost 2.1 SE KM0544.1, GHOST KM0543 |
| **Power Source** | 2 x AA Batteries (not included) |
| **Dimensions** | 6 x 3 x 0.5 inches (15.24 x 7.62 x 1.27 cm) |
| **Item Weight** | 2 ounces (56.7 grams) |
| **Material** | ABS |
| **Technology** | Infrared (IR) |

## Support

For any questions regarding the compatibility or operation of this replacement remote control, please contact ECONTROLLY customer support. We are committed to resolving any issues and providing the best service possible. While specific contact details are not provided in this manual, please refer to the seller's information on the product purchase page or the ECONTROLLY brand website for direct support channels.

© 2024 ECONTROLLY. All rights reserved.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**