Rii RKM709 US

Rii RKM709 2.4 Gigahertz Ultra-Slim Wireless Keyboard and Mouse Combo

User Manual

1. Introduction

Thank you for choosing the Rii RKM709 2.4 Gigahertz Ultra-Slim Wireless Keyboard and Mouse Combo. This product is designed to provide a comfortable and efficient input solution for various devices, including PCs, laptops, Android TV Boxes, PS3, PS4, and Raspberry Pi. Its ultra-slim design and plug-and-play functionality make it an ideal choice for both business and personal use.



Image: Rii RKM709 Wireless Keyboard and Mouse Combo

2. Package Contents

Please check the package for the following items:

- 1 x Rii RKM709 Wireless Keyboard
- 1 x Rii RKM709 Wireless Mouse
- 1 x USB Receiver (stored in the mouse battery compartment)
- 1 x User Manual (this document)



Image: The underside of the Rii RKM709 mouse, showing the USB receiver storage and battery compartments.

3. Setup Guide

3.1. Battery Installation

The keyboard and mouse require AAA batteries (not included). Please follow these steps:

1. Open the battery compartment cover on the back of the keyboard and mouse.
2. Insert 2 x AAA batteries into the keyboard, ensuring correct polarity (+/-).
3. Insert 2 x AAA batteries into the mouse, ensuring correct polarity (+/-).

4. Close the battery compartment covers securely.



Image: Close-up of the Rii RKM709 mouse battery compartment, showing where to insert AAA batteries.

3.2. Connecting the USB Receiver

The Rii RKM709 combo uses a single USB receiver for both the keyboard and mouse. It is plug-and-play, requiring no additional drivers.

1. Locate the USB receiver stored in the battery compartment of the wireless mouse. Gently pull it out.
2. Plug the USB receiver into an available USB port on your computer or compatible device.
3. Turn on the keyboard and mouse using their respective power switches.
4. Your device should automatically recognize the keyboard and mouse, and they will be ready for use.



Image: Close-up of the Rii RKM709 mouse, highlighting the storage slot for the USB receiver.



Image: The Rii RKM709 keyboard and mouse, illustrating the location of the USB receiver and battery requirements.

4. Operating Instructions

4.1. Keyboard Functions

The RKM709 keyboard features a compact layout with Scissor-Switch keys for a comfortable typing experience. It includes 12 easy-to-reach function keys for multimedia control and system shortcuts.

Key	Function
Fn + F1	Home
Fn + F2	Mail
Fn + F3	Search
Fn + F4	Browser
Fn + F5	Previous Track
Fn + F6	Next Track

Key	Function
Fn + F7	Play/Pause
Fn + F8	Stop
Vol+	Increase Volume
Vol-	Decrease Volume
Mute	Mute/Unmute Audio
Power Switch	Standard-by/Sleep Mode or Power Off

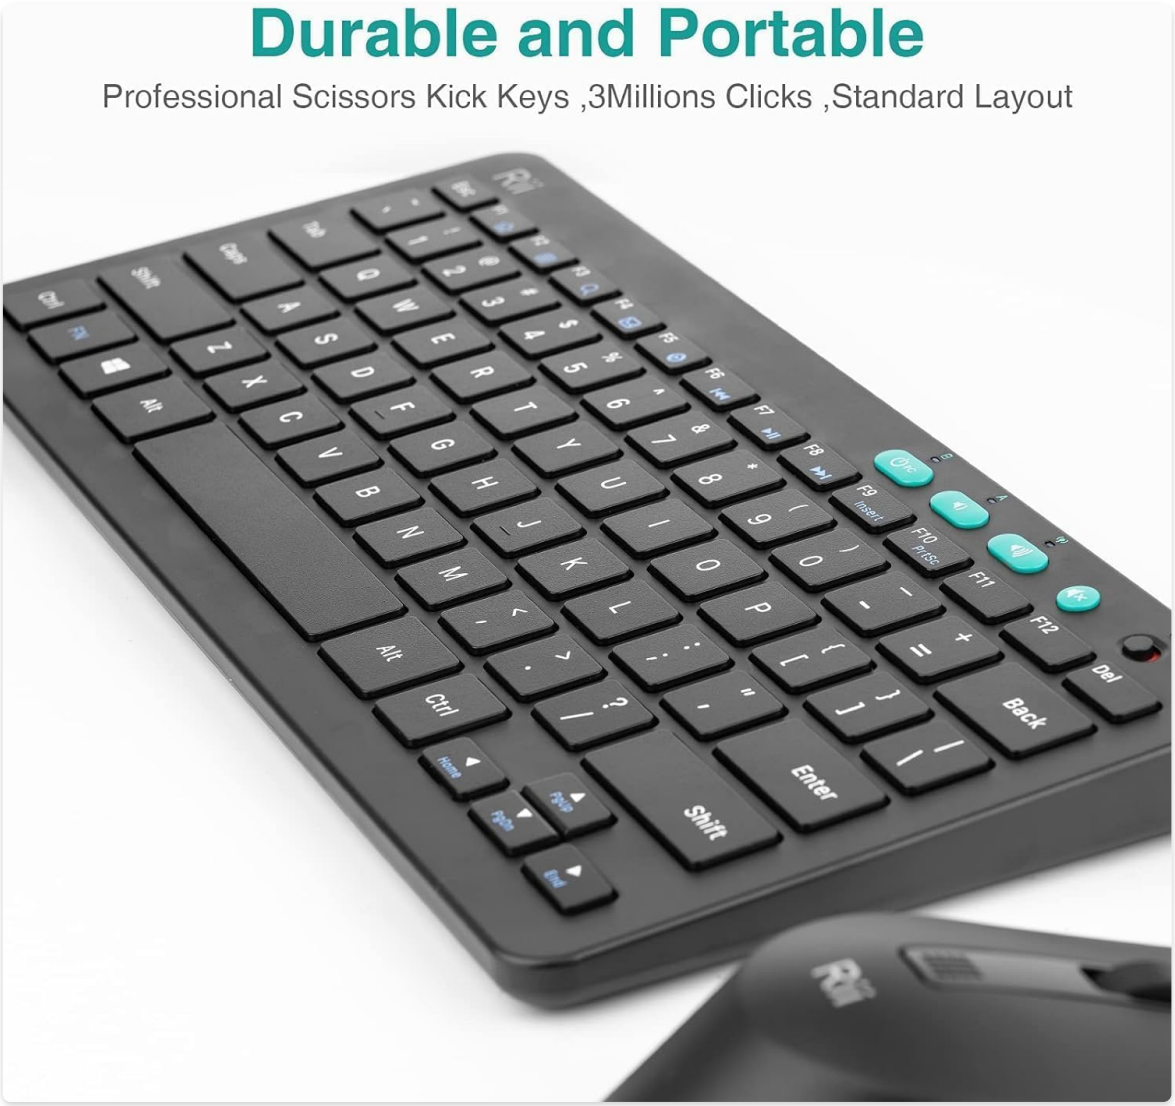


Image: The Rii RKM709 keyboard, highlighting the multimedia and system function keys.

4.2. Mouse Functions

The wireless mouse features a slim, ergonomic design for comfortable use and smooth tracking on various surfaces. It includes adjustable DPI settings and additional buttons for enhanced productivity.

- **DPI Adjustment:** Press the DPI button (usually located near the scroll wheel) to cycle through different sensitivity levels (1600/2400/3200 DPI).
- **Forward/Backward Buttons:** Use the side buttons for quick navigation in web browsers or file explorers.



Image: The Rii RKM709 mouse, showing the scroll wheel, DPI button, and side navigation buttons.

5. Maintenance

To ensure the longevity and optimal performance of your Rii RKM709 combo, follow these maintenance tips:

- Keep the devices clean by wiping them with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Avoid exposing the devices to extreme temperatures, direct sunlight, or high humidity.
- Remove batteries if the devices will not be used for an extended period to prevent leakage.

6. Troubleshooting

6.1. Connectivity Issues

- Ensure the USB receiver is securely plugged into a working USB port on your device.
- Check if the keyboard and mouse are turned on and have fresh batteries.

- Try plugging the USB receiver into a different USB port.
- Move the keyboard and mouse closer to the USB receiver to ensure they are within the 10m transmission range.

6.2. Repair Method (Re-pairing)

If the keyboard or mouse loses connection, you can try re-pairing them with the USB receiver:

- For the keyboard: Press and hold the**K** and **ESC** buttons simultaneously for 2 seconds. The indicator light should remain solid, indicating successful re-pairing.
- For the mouse: (Specific re-pairing steps for the mouse are not detailed in provided images/text, but generally involve turning off/on or pressing a connect button if available). Ensure the mouse is turned off, then turn it back on.

7. Specifications

Feature	Detail
Model Number	RKM709 US
Connectivity Technology	2.4G Wireless (USB Receiver)
Keyboard Key Structure	Scissor-Switch
Mouse DPI Settings	1600/2400/3200
Wireless Transmission Distance	Up to 10m
Power Source (Keyboard)	2 x AAA Batteries (not included)
Power Source (Mouse)	2 x AAA Batteries (not included)
Compatible Devices	PC, Laptop, Android TV Box, PS3, PS4, Raspberry Pi
Color	Black
Item Weight	1.32 pounds
Package Dimensions	14.76 x 5.71 x 1.73 inches

8. Warranty and Support

Rii provides a worry-free 1-year product service for this keyboard and mouse combo. If you encounter any problems during use, please contact the support team for assistance. For further support or warranty claims, please refer to the contact information provided with your purchase or visit the official Rii website.