Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY MM-RM-C3604-NP

ALLIMITY RM-C3604 Remote Control User Manual

Compatible with JVC LED TV Models: LT-43VU2255, LT-43VU2201, LT-50K8100(A), LT-43VU8156, LT-32VAF3001, LT-40VF3001, LT-55VU3101, LT-58VU6255

Introduction

This manual provides essential information for the setup, operation, and maintenance of your ALLIMITY RM-C3604 remote control. This remote is designed as a direct replacement for specific JVC LED TV models, ensuring full functionality without the need for complex programming.
To ensure compatibility, please verify that your TV model number matches one of the listed compatible models: LT-43VU2255, LT-43VU2201, LT-50K8100(A), LT-43VU8156, LT-32VAF3001, LT-40VF3001, LT-55VU3101, LT-58VU6255. The full model number is typically found on a label on the back of your television.

Setup

1. Installing Batteries

The ALLIMITY RM-C3604 remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



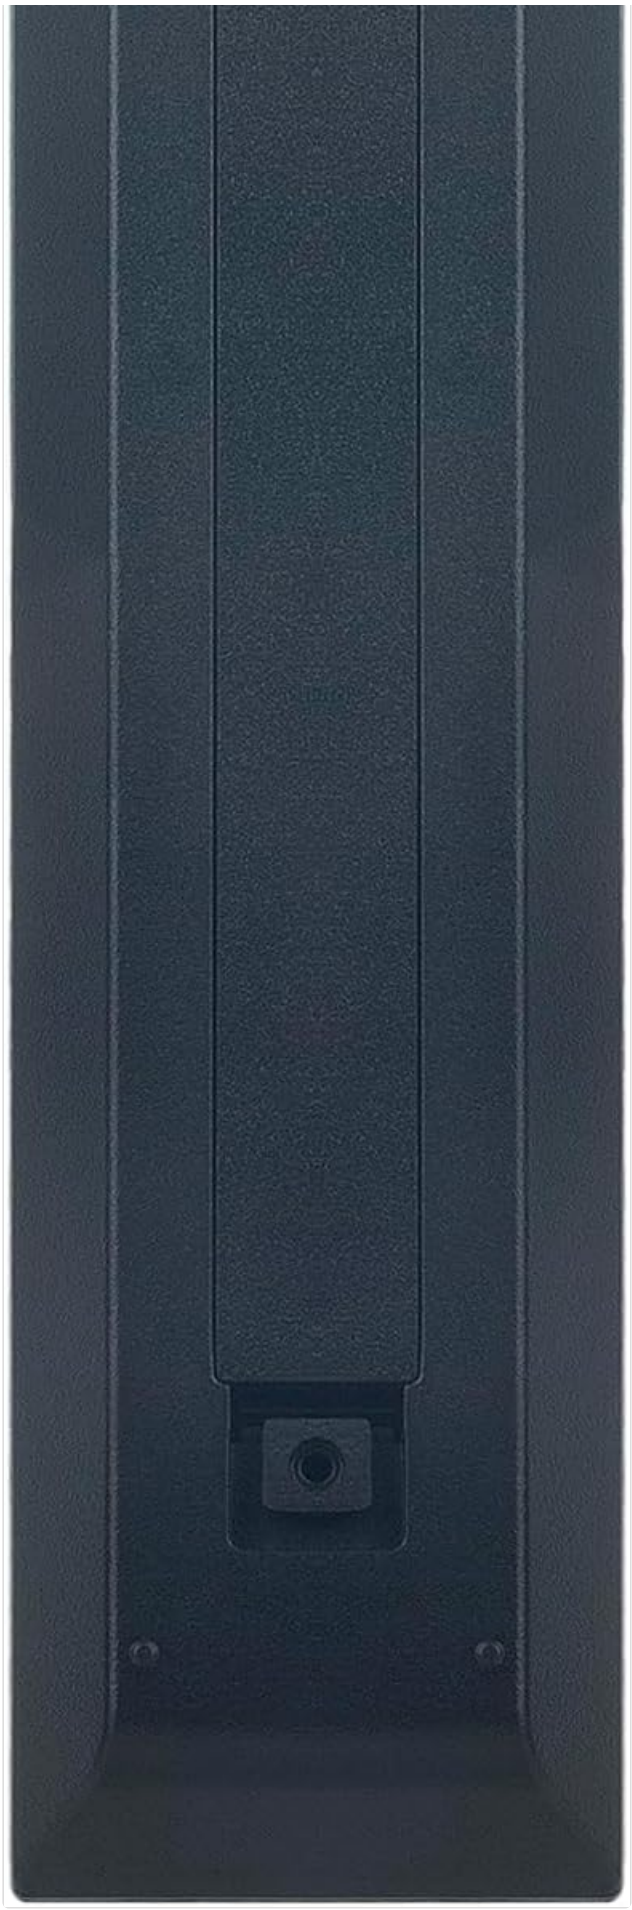


Figure 1: Back view of the remote control, illustrating the battery compartment location.

2. Initial Use

This remote control is designed for immediate use with compatible JVC LED TV models. No programming or complex

setup is required. Once batteries are installed, point the remote towards your TV and begin operation.

Operating Instructions

The ALLIMITY RM-C3604 remote control provides full functionality for your compatible JVC LED TV. Its ergonomic design ensures comfortable handling and stable remote control performance with a maximum range of 10 meters.





Figure 2: Front view of the ALLIMITY RM-C3604 remote control, displaying all buttons and their layout.

Button Functions

- **Power Button ( ):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select TV channels.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (∧ / ∨):** Changes TV channels sequentially.
- **Mute Button ( ):** Mutes or unmutes the TV sound.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **Back Button:** Returns to the previous menu or screen.
- **Exit Button:** Exits the current menu or application.
- **Home Button ( ):** Accesses the TV's home screen or smart TV interface.
- **Dedicated App Buttons (Netflix, YouTube, Prime Video, Rakuten TV, Twitch):** Provides quick access to popular streaming applications.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain TV menus or applications, as indicated on screen.
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback.

For detailed information on specific TV functions, please refer to your JVC TV's original user manual.

Maintenance

Cleaning the Remote Control

To maintain the performance and appearance of your remote control, follow these cleaning guidelines:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Storage

When not in use for extended periods, it is recommended to remove the batteries from the remote control to prevent leakage and potential damage.

Troubleshooting

If you experience issues with your ALLIMITY RM-C3604 remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control not working.	• Batteries are dead or incorrectly inserted. • Obstruction between remote and TV. • Remote control sensor on TV is blocked.	• Replace batteries with new AAA alkaline batteries, ensuring correct polarity. • Remove any objects blocking the line of sight between the remote and the TV. • Ensure the TV's infrared sensor is not covered.
Buttons are unresponsive or sticky.	• Dirt or debris under the buttons. • Low battery power.	• Clean the remote control as described in the Maintenance section. • Replace batteries.
Remote works intermittently.	• Weak batteries. • Interference from other electronic devices.	• Replace batteries. • Move other electronic devices away from the TV or remote control.

If the problem persists after trying these solutions, please contact customer support.

Specifications

Feature	Detail
Model Number	MM-RM-C3604-NP
Brand	ALLIMITY
Connectivity Technology	Infrared (IR)
Compatible Devices	JVC LED TVs (Specific models: LT-43VU2255, LT-43VU2201, LT-50K8100(A), LT-43VU8156, LT-32VAF3001, LT-40VF3001, LT-55VU3101, LT-58VU6255)
Controller Type	Button Control
Maximum Range	10 Meters

Feature	Detail
Item Weight	59 Grams
Battery Type	AAA Alkaline (x2)
Country of Origin	China

Warranty and Support

Specific warranty information for the ALLIMITY RM-C3604 remote control is not provided in the product details. Please refer to the retailer's return policy or contact the seller directly for warranty details and support inquiries.
For further assistance or technical support, please reach out to the seller or manufacturer through the platform where the product was purchased.

© 2024 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CNXLDWHP

More documents and user manuals: **https://manuals.plus/**