Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Ariete 4630

Ariete 4630 Air Fryer Instruction Manual

Model: 4630 | Brand: Ariete

Introduction

This manual provides essential information for the safe and efficient operation of your Ariete 4630 Air Fryer. Please read it thoroughly before first use and keep it for future reference.
The Ariete 4630 Air Fryer is designed for healthy cooking, allowing you to fry, roast, grill, and bake with minimal oil. It features a 9-liter capacity, 1500W power, and 8 preset programs for versatile cooking, along with a transparent basket for easy monitoring.

Important Safety Information

To prevent personal injury or property damage, always follow basic safety precautions when using electrical appliances.

- Read all instructions before use.
- Do not immerse the appliance, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.
- Ensure the basket is properly inserted before operating.
- The appliance generates heat and steam during use. Do not block any air vents.
- The outer surfaces may become hot during use. Do not touch hot surfaces directly. Use handles or knobs.

Product Overview

The Ariete 4630 Air Fryer features a sleek black design with a transparent basket for monitoring cooking progress. It includes a digital touch control panel for easy operation.

Components

- Main Unit
- Transparent Cooking Basket (9L capacity)
- Digital Touch Control Panel
- Air Inlet and Outlet Vents
- Power Cord




Front view of the Ariete 4630 Air Fryer, showcasing its transparent cooking basket filled with fries and the digital control panel.



DIMENSIONI

L 40.5 cm **x P** 32 cm **x A** 34.5 cm

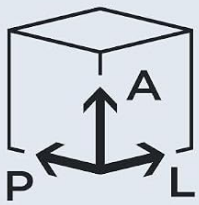

Angled view of the Ariete 4630 Air Fryer, illustrating its compact design and overall appearance.



Diagram showing the dimensions of the Ariete 4630 Air Fryer: 40.5 cm (length), 32 cm (width), and 34.5 cm (height).

Setup

1. **Unpacking:** Carefully remove all packaging materials and stickers from the appliance.
2. **Initial Cleaning:** Before first use, clean the cooking basket and any removable parts with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation. Ensure there is at least 10 cm (4 inches) of clear space on all sides.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

Operating Instructions

Control Panel Overview

The Ariete 4630 features an intuitive touch control panel for setting temperature, time, and selecting preset programs.



A detailed view of the Ariete 4630 Air Fryer's digital touch control panel, highlighting the 8 preset cooking programs.

Basic Operation

1. **Prepare Food:** Place your ingredients into the cooking basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the cooking basket firmly into the main unit until it clicks into place.
3. **Power On:** Touch the power button on the control panel to activate the display.
4. **Set Temperature and Time:**
   - Use the temperature control buttons to adjust the cooking temperature (up to 200°C / 400°F).
   - Use the timer control buttons to set the cooking duration.
5. **Start Cooking:** Press the start/pause button to begin the cooking cycle.
6. **Monitor Cooking:** The transparent basket allows you to visually monitor the cooking process without opening the drawer.
7. **Shaking (Optional):** For some foods, it is recommended to shake the basket halfway through cooking to ensure even browning. Carefully pull out the basket, shake, and reinsert. The air fryer will resume cooking automatically.

8. **Completion:** The air fryer will beep when the cooking time is complete. Carefully remove the basket using the handle and transfer the cooked food.

Using Preset Programs

The Ariete 4630 comes with 8 preset programs for common dishes, simplifying the cooking process.



Visual representation of the Ariete 4630 Air Fryer's key features: capacity up to 3.5 kg of fried food, temperature up to 200 degrees Celsius, and a transparent glass basket.

To use a preset program:

1. Prepare and load food into the basket.
2. Power on the appliance.
3. Select the desired preset icon on the touch panel. The appliance will automatically set the optimal temperature and time for that program.
4. Press the start/pause button to begin cooking.

Preset Programs List:

Program	Description	Typical Use
French Fries	For frozen french fries.	Crispy fries with minimal oil.
Fresh Potatoes	For fresh cut potatoes.	Homemade potato wedges or chips.
Red Meat	For various cuts of red meat.	Steaks, lamb chops.
Fish	For fish fillets or whole fish.	Salmon, cod, tilapia.
Chicken	For chicken pieces or small whole chicken.	Chicken wings, drumsticks, small whole chicken.
Pizza	For reheating or cooking small pizzas.	Personal pizzas, pizza slices.
Desserts	For various sweet treats.	Small cakes, muffins, pastries.
Grill	For grilling function.	Vegetables, small cuts of meat.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Basket Cleaning:** The transparent cooking basket is **not dishwasher safe**. Clean it with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak the basket in warm soapy water for 10-15 minutes before cleaning. Rinse thoroughly.
3. **Main Unit Cleaning:** Wipe the exterior of the air fryer with a damp cloth. Never immerse the main unit in water or any other liquid.
4. **Interior Cleaning:** Clean the interior of the appliance with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads, as they may damage the nonstick coating.
5. **Storage:** Ensure all parts are clean and completely dry before storing the air fryer in a cool, dry place.

Troubleshooting

If you encounter any issues with your Ariete 4630 Air Fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; basket not properly inserted.	Check power cord connection; try a different outlet; ensure basket is fully pushed in until it clicks.
Food is not cooked evenly.	Basket is overloaded; food not shaken during cooking.	Cook in smaller batches; shake the basket halfway through cooking for even results.
White smoke coming from appliance.	Fatty ingredients; residue from previous cooking.	Drain excess fat from food; clean the basket and interior thoroughly after each use to remove grease buildup.
Food is not crispy.	Not enough oil (if applicable); temperature too low; cooking time too short.	Lightly coat food with a small amount of oil; increase temperature or cooking time as needed.

Specifications

Model: 4630

Brand: Ariete

Capacity: 9 Liters (Cooking Capacity up to 2.5 kg; up to 3.5 kg for fries)

Power: 1500 Watts

Voltage: 220 Volts (AC)

Temperature Range: Up to 200°C (400°F)

Control Method: Touch

Preset Programs: 8

Product Dimensions: 15.94"D x 12.6"W x 13.58"H (40.5 cm D x 32 cm W x 34.5 cm H)

Item Weight: 16.32 pounds (7.42 Kilograms)

Material: Plastic (exterior), Metal (inner), Transparent Basket

Nonstick Coating: Yes

Dishwasher Safe: No (Basket)

Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Ariete website. Keep your purchase receipt as proof of purchase.
For further assistance, you may contact Ariete customer service through their official channels.

© 2025 Ariete. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CP3SWHZ7

More documents and user manuals: **https://manuals.plus/**